

COLLISION INFORMATION

TABLE OF CONTENTS

	page		page
COLLISION INFORMATION		STANDARD PROCEDURE	
WARNING		SERVICE AFTER A SUPPLEMENTAL	
SAFETY NOTICE	2	RESTRAINT DEPLOYMENT	32
USE OF HEAT DURING REPAIR	2	BASECOAT/CLEARCOAT FINISH	35
SPECIFICATIONS		FINESSE SANDING, BUFFING, AND	
VEHICLE IDENTIFICATION NUMBER.	3	POLISHING	35
STANDARDIZED STEEL IDENTIFICATION.	9	PAINT TOUCH-UP.	35
WELD PROCESS	17	RIVET NUT PROCEDURE	35
BODY OPENING DIMENSIONS	18	NON-STRUCTURAL SHEET METAL	
FRAME DIMENSIONS	22	REPAIR	36
GAP AND FLUSH DIMENSIONS.	26	WELDING AND WELD BONDING	42
PAINT CODES	29	SECTIONING LOCATIONS AND	
VEHICLE CERTIFICATION LABEL	32	PROCEDURES	53
		CORROSION PROTECTION.	68
		MATERIAL LOCATIONS	
		SEALERS AND SOUND DEADENERS	69
		SOUND DEADENER LOCATIONS.	70
		SEALER LOCATIONS	80
		ADHESIVE LOCATIONS	103

Collision Information

Warning

SAFETY NOTICE

CAUTION: All service and rebuilding instructions contained herein are applicable to, and for the convenience of, the automotive trade only. All test and repair procedures on components or assemblies in non-automotive applications should be repaired in accordance with instructions supplied by the manufacturer of the total product.

Proper service and repair is important to the safe, reliable operation of all motor vehicles. The service produces recommended and described in this publication were developed for professional service personnel, and are effective methods for performing vehicle repair. Following these procedures will help ensure efficient economical vehicle performance and service reliability. Some service procedures require the use of special tools designed for specific procedures. These special tools should be used as recommended throughout this publication.

Special attention should be exercised when working with spring-or tension-loaded fasteners and devices such as E-Clips, Circlips, Snap rings, etc., since careless removal may cause personal injury. Always wear safety goggles when working on vehicles or vehicle components.

It is important to note that this publication contains various Cautions and Warnings. These should be read carefully in order to minimize risk of personal injury or the possibility that improper service methods may damage the vehicle or render it unsafe. It is important to note that these Cautions and Warnings cover only the situations and procedures Chrysler Group LLC has encountered and recommended. Chrysler Group LLC cannot possibly know, evaluate, and advise the service trade of all conceivable ways in which service may be performed, or of the possible hazards of each. Consequently, Chrysler Group LLC has not undertaken any such broad service review. Accordingly, anyone uses a service procedure or tool that is not recommended in this publication must be certain that neither personal safety, nor vehicle safety, will be jeopardized by the service methods they select.

USE OF HEAT DURING REPAIR

WARNING: Chrysler Group LLC engineering's position on the use of heat during collision repair is as follows:

- Any body panel or frame component damaged which is to be repaired and reused, must be repaired using the "cold straightening" method. No heat may be used during the straightening process.
- During rough straightening prior to panel replacement, damaged panels or frame components may be heated to assist in body/frame realignment. The application of heat must be constrained to the parts which will be replaced and not allowed to affect any other components.

This "no heat" recommendation is due to the extensive use of high strength and advanced high strength steels in Chrysler Group LLC products. High-strength materials can be substantially and negatively affected from heat input which will not be obviously known to the repairer or consumer.

Ignoring these recommendations may lead to serious compromises in the ability to protect occupants in a future collision event, reduce the engineered qualities and attributes, or decrease the durability and reliability of the vehicle.

This statement supersedes any previously released information by the Chrysler Group LLC.


Failure to follow these instructions may result in serious or fatal injury.

Specifications

VEHICLE IDENTIFICATION NUMBER

The Vehicle Identification Number (VIN) label is attached to the top left side of the instrument panel. The VIN contains 17 characters that provide data concerning the vehicle. Refer to the decoding chart to determine the identification of a vehicle.

To protect the consumer from theft and possible fraud the manufacturer is required to include a Check Digit at the ninth position of the Vehicle Identification Number. The check digit is used by the manufacturer and government agencies to verify the authenticity of the vehicle and official documentation. The formula to use the check digit is not released to the general public.

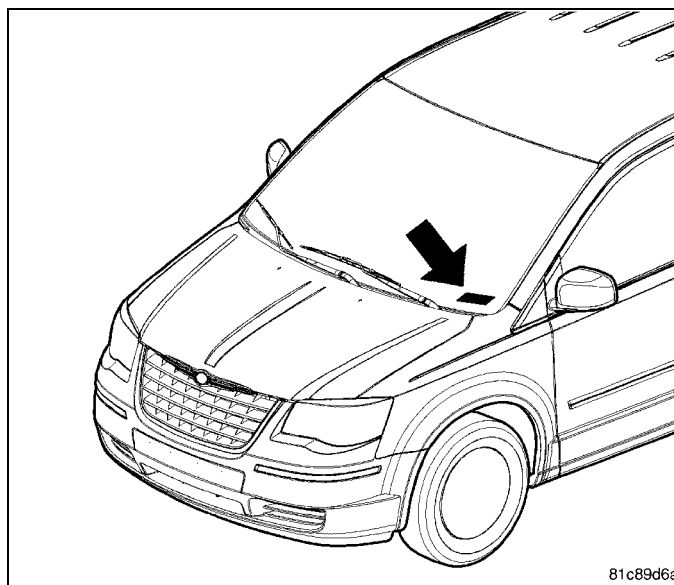

VEHICLE IDENTIFICATION INFORMATION	DECODING CHARTS
2008 DODGE CARAVAN / CHRYSLER TOWN AND COUNTRY	2008 VIN DECODING INFORMATION
2009 DODGE CARAVAN / CHRYSLER TOWN AND COUNTRY	2009 VIN DECODING INFORMATION
2010 DODGE CARAVAN / CHRYSLER TOWN AND COUNTRY	2010 VIN DECODING INFORMATION
2011 DODGE CARAVAN / CHRYSLER TOWN AND COUNTRY	2011 VIN DECODING INFORMATION

2008 VIN DECODING INFORMATION

POSITION	INTERPRETATION	CODE = DESCRIPTION
1	Country of origin	1 = Manufactured By Daimler Chrysler Corporation 2 = Manufactured By Daimler Chrysler Canada Inc.
2	Make	A = Chrysler D = Dodge
3	Vehicle type	4 = multipurpose pass. Vehicle less side curtain air bags 8 = multipurpose pass. Vehicle with side curtain air bags
4	Gross vehicle weight rating	G = 2268 - 2721 kg. (5001 - 6000 lbs.) H = 2722 - 3175 kg. (6001 - 7000 lbs.)
5	Car line	R = Chrysler, Town AND Country - (LHD/FWD) S = Chrysler, Grand Voyager - (LHD/FWD) T = Chrysler, Grand Voyager - (RHD/FWD) N = Dodge, Grand Caravan - (LHD/FWD)

2008 VIN DECODING INFORMATION, continued

POSITION	INTERPRETATION	CODE = DESCRIPTION
6	Series	4 = Dodge, Grand Caravan SE (U.S., Canada) 4 = Chrysler, Town AND Country LX (U.S., Mexico) 4 = Chrysler, Grand Voyager LX (BUX) 5 = Dodge, Grand Caravan SXT (U.S., Canada) 5 = Chrysler, Town AND Country Touring (U.S., Canada, Mexico) 5 = Chrysler, Grand Voyager Touring (BUX) 6 = Chrysler Town AND Country Limited (U.S., Canada, Mexico) 6 = Chrysler, Grand Voyager Limited (BUX)
6 - Export	Series	B = 4 Speed Automatic VLP, Sales Code DFF H = 6 Speed Automatic, Sales Code DG2
7	Body style	1 = Van - Caravan C/V 3 = Extended Van - Grand Caravan C/V 4 = Extended Wagon - Grand Caravan/Grand Voyager/Town AND Country 5 = Wagon - Caravan/Voyager/Town AND Country
8	Engine	9 = 2.8L I4 CYL Turbo Diesel Next Gen P = 3.8L V6 CYL Gasoline OHV X = 4.0L V6 CYL SOHC Gasoline H = 3.3L V6 CYL OHV Gasoline
9	Check digit	0 through 9 or X
10	Model year	8 = 2008
11	Assembly plant	B = St. Louis Assembly South R = Windsor Assembly
12 through 17	Vehicle Build Sequence	A six digit number assigned by assembly plant.

2009 VIN DECODING INFORMATION

POSITION	INTERPRETATION	CODE = DESCRIPTION
1	Country of origin	1 = Manufactured by Chrysler LLC 2 = Manufactured by Chrysler Canada Inc.
2	Make	A = Chrysler D = Dodge
3	Vehicle type	4 = Multipurpose pass. Vehicle less side curtain air bags 8 = Multipurpose pass. Vehicle with side curtain air bags
4	Gross vehicle weight rating	G = 2268 - 2721 kg. (5001 - 6000 lbs.) H = 2722 - 3175 kg. (6001 - 7000 lbs.)

2009 VIN DECODING INFORMATION, continued

POSITION	INTERPRETATION	CODE = DESCRIPTION
5	Car line	R = Chrysler, Town AND Country - (LHD/FWD) S = Chrysler, Grand Voyager - (LHD/FWD) T = Chrysler, Grand Voyager - (RHD/FWD) N = Dodge, Grand Caravan - (LHD/FWD)
6	Series	1 = Dodge, Grand Caravan C/V (U.S., Canada) 4 = Dodge, Grand Caravan SE (U.S., Canada) 4 = Chrysler, Town AND Country LX (U.S., Mexico) 4 = Chrysler, Grand Voyager LX (BUX) 5 = Dodge, Grand Caravan SXT (U.S., Canada) 5 = Chrysler, Town AND Country Touring (U.S., Canada, Mexico) 5 = Chrysler, Grand Voyager Touring (BUX) 6 = Chrysler Town AND Country Limited (U.S., Canada, Mexico) 6 = Chrysler, Grand Voyager Limited (BUX)
6 - Export	Series	B = 4 Speed Automatic VLP, Sales Code DFF H = 6 Speed Automatic, Sales Code DG2
7	Body style	1 = Grand Caravan C/V 4 = Grand Caravan/Grand Voyager/Town AND Country
8	Engine	1 = 3.8L 6 CYL gasoline non-turbo (EGL) X = 4.0L 6 CYL gasoline non – turbo (EGQ) E = 3.3L 6 CYL gasoline non – turbo (EGV) 5 = 2.8L 4 CYL diesel (ENS)
9	Check digit	0 through 9 or X
10	Model year	9 = 2009
11	Assembly plant	B = St. Louis Assembly South R = Windsor Assembly
12 through 17	Vehicle Build Sequence	A six digit number assigned by assembly plant.

2010 VIN DECODING INFORMATION

NOTE: All Seating Positions (ASP), Outboard Seating Positions (OSP)

POSITION	INTERPRETATION	CODE = DESCRIPTION
1, 2, 3	WMI (World Manufacturer Identifier)	1A4 = Chrysler LLC 1D4 = Chrysler LLC 2A4 = Chrysler Canada 2D4 = Chrysler Canada

2010 VIN DECODING INFORMATION, continued

POSITION	INTERPRETATION	CODE = DESCRIPTION
4	Gross vehicle weight rating	Active Belts (ASP) Front Air Bags (OSP) Without Side Inflatable Restraints B = 2268 - 2721 kg (5001 - 6000 lbs) C = 2722 - 3175 kg (6001 - 7000 lbs) Active Belts (ASP) Front Air Bags (OSP) With Side Inflatable Restraints Front Row H = 2268 - 2721 kg (5001 - 6000 lbs) J = 2722 - 3175 kg (6001 - 7000 lbs) Active Belts (ASP) Front Air Bags (OSP) With Side Inflatable Restraints All Rows P = 2268 - 2721 kg (5001 - 6000 lbs) R = 2722 - 3175 kg (6001 - 7000 lbs)
5	Car line	N = Caravan (LHD)(FWD) R = Town & Country (LHD)(FWD) S = Grand Voyager (LHD)(FWD) T = Grand Voyager (RHD)(FWD)
6	Series	1 = Grand Caravan C/V (LHD)(FWD)(U.S., Canada) 4 = Grand Caravan SE (LHD)(FWD)(U.S., Canada) 5 = Grand Caravan SXT (LHD)(FWD)(U.S.) 5 = Grand Voyager Touring (FWD)(LHD)(BUX) 6 = Town & Country Limited (FWD)(LHD)(U.S., Canada, Mexico) 6 = Grand Voyager Limited (FWD)(LHD)(BUX)
7	Body style	A = Extended Van Grand Caravan C/V D = Extended Wagon Grand Caravan / Grand Voyager / Town & Country
8	Engine	E = 3.3L 6 CYL gasoline Non-Turbo (EGV) 1 = 3.8L 6 CYL Gasoline Non-Turbo (EGL) X = 4.0L 6 CYL gasoline Non-Turbo (EGQ) 5 = 2.8L 4 CYL diesel (ENS)
9	Check digit	0 through 9 or X
10	Model year	A = 2010
11	Assembly plant	B = St. Louis Assembly South R = Windsor Assembly
12 - 17	Vehicle Build Sequence	A six digit number assigned by assembly plant.

2011 VIN DECODING INFORMATION

NOTE: All Seating Positions (ASP), Outboard Seating Positions (OSP)

2011 VIN DECODING INFORMATION, continued

POSITION	INTERPRETATION	CODE = DESCRIPTION
1, 2, 3	WMI (World Manufacturer Identifier)	1A4 = Chrysler LLC 1D4 = Chrysler LLC 2A4 = Chrysler Canada 2D4 = Chrysler Canada
4	Gross vehicle weight rating	Active Belts (ASP) Front Air Bags (OSP) Without Side Inflatable Restraints B = 2268 - 2721 kg (5001 - 6000 lbs) C = 2722 - 3175 kg (6001 - 7000 lbs) Active Belts (ASP) Front Air Bags (OSP) With Side Inflatable Restraints Front Row H = 2268 - 2721 kg (5001 - 6000 lbs) J = 2722 - 3175 kg (6001 - 7000 lbs) Active Belts (ASP) Front Air Bags (OSP) With Side Inflatable Restraints All Rows P = 2268 - 2721 kg (5001 - 6000 lbs) R = 2722 - 3175 kg (6001 - 7000 lbs)
5	Car line	N = Caravan (LHD)(FWD) R = Town & Country (LHD)(FWD) S = Grand Voyager (LHD)(FWD) T = Grand Voyager (RHD)(FWD) X = Lancia RTL53

2011 VIN DECODING INFORMATION, continued

POSITION	INTERPRETATION	CODE = DESCRIPTION
6	Series	1 = Grand Caravan C/V (LHD)(FWD)(U.S., Canada) 3 = Grand Caravan Mainstreet (LHD)(FWD)(U.S.) 4 = Town & Country Silver (LHD)(FWD)(U.S., Canada) 4 = Town & Country LX (LHD)(FWD)(Mexico) 4 = Grand Voyager LX (LHD)(FWD)(BUX) 4 = Grand Voyager LX (RHD)(FWD)(BUX) 4 = Grand Caravan Express (LHD)(FWD)(U.S., Canada) 4 = Lancia RTL53 Silver (BUX) 5 = Town & Country Gold (LHD)(FWD)(U.S., Canada) 5 = Town & Country Touring (LHD)(FWD)(Mexico) 5 = Grand Voyager Touring (LHD)(FWD)(BUX) 5 = Grand Voyager Touring (RHD)(FWD)(BUX) 5 = Grand Caravan Crew (LHD)(FWD)(U.S., Canada) 5 = Lancia RTL53 Gold (BUX) 6 = Town & Country LIMITED (LHD)(FWD)(U.S., Canada, Mexico) 6 = Grand Voyager LIMITED (LHD)(FWD)(BUX) 6 = Grand Voyager LIMITED (RHD)(FWD)(BUX) 6 = Lancia RTL53 Platinum (BUX) 7 = Grand Caravan R/T (LHD)(FWD)(U.S.) 8 = Town & Country LUX (LHD)(FWD)(U.S., Canada) 8 = Grand Caravan LUX (LHD)(FWD)(U.S.)
7	Body style	A = Extended Van Grand Caravan C/V D = Extended Wagon Grand Caravan / Grand Voyager / Town & Country
8	Engine	5 = 2.8L 4 CYL diesel (ENS) G = 3.6L 6 CYL Gasoline Non - Turbo (ERB)
9	Check digit	0 through 9 or X
10	Model year	B = 2011
11	Assembly plant	B = St. Louis Assembly South R = Windsor Assembly
12 - 17	Vehicle Build Sequence	A six digit number assigned by assembly plant.

STANDARDIZED STEEL IDENTIFICATION

In an effort to reduce confusion over the large number of steel grades in use, and the repairability and weldability concerns involved with each, Chrysler Group LLC has instituted new nomenclature which is applicable to material call-outs and BIW exploded views released for use in the repair industry.

All materials listed in the key may not be used on a given model, nor may every panel be identified in the blow-up (ex: some groups do not show fascias).

WARNING: Chrysler Group LLC engineering's position on the use of heat during collision repair is as follows:

- Any body panel or frame component damaged which is to be repaired and reused, must be repaired using the "cold straightening" method. No heat may be used during the straightening process.
- During rough straightening prior to panel replacement, damaged panels or frame components may be heated to assist in body/frame realignment. The application of heat must be constrained to the parts which will be replaced and not allowed to affect any other components.

This "no heat" recommendation is due to the extensive use of high strength and advanced high strength steels in Chrysler Group LLC products. High-strength materials can be substantially and negatively affected from heat input which will not be obviously known to the repairer or consumer.










Ignoring these recommendations may lead to serious compromises in the ability to protect occupants in a future collision event, reduce the engineered qualities and attributes, or decrease the durability and reliability of the vehicle.

This statement supersedes any previously released information by the Chrysler Group LLC.

Failure to follow these instructions may result in serious or fatal injury.

NOTE: Corrosion protection must be restored after repair.


- **LS** - Good repairability and weldability (least sensitive to heat). May be attached using the preferred Squeeze Type Resistance Spot Welding (STRSW) process, weld bonding where appropriate, or MIG welding. Materials have a tensile strength of less than 270 MPa.
- **HS** - Some repairability and good weldability (the higher the strength of the steel, the greater the sensitivity to heat). May be attached using STRSW, weld bonding, and MIG welding. Material tensile strength range between 270 MPa and 600 MPa and includes DP590.
- **VHS** - Very limited repairability and weldability (very sensitive to heat). Attach only at OE defined locations using OE defined procedures. Material tensile strengths are greater than 600 MPa. This category includes hot-stamped boron materials which are also termed "press hardened." Specialized cutters are required with many materials in this group.
- **LM** - Good repairability and weldability. May be attached using STRSW, weld bonding, and Flux Core Arc Welding (FCAW).
- **AL** - Stamped aluminum sheet metal panels may be repairable with specialized tools and techniques.
- **MG** - Magnesium - no repairability, replacement components only.
- **PL and PL-R** - Some repairability depending upon the type of plastic involved, the degree of damage, and the component function. Cosmetic components such as fascias (PL) have a higher degree of repair allowed than those components which can carry components and loads. Where PL-R components are bonded to steel structure, Chrysler Group LLC will identify the proper adhesive to attach the replacement panel. Repair materials for PL are commonly available in the collision repair market.
- **CO** - Composite materials may be fiber reinforced (ex: Kevlar) panels or co-molded assemblies of steel and plastic. Any of these require specialized repair materials and processes.


		
		
		

2627969


Information on sectioning of components will be identified in **Non-Structural Sheet Metal Repair Guide, Weld / Weld Bonding and Sectioning Procedures**, (Refer to Collision Information - Standard Procedure)

CALLOUT KEY	DESCRIPTION	COLOR
LS	Low-Strength Steel	Black
HS	High-Strength Steel	Green
VHS	Very High-Strength Steel	Red
LM	Laminated Steel	Grey
AL	Sheet Aluminium	Purple
MG	Magnesium	Brown
PL	Plastic	Blue
PL-R	Fiber Reinforced Plastic	Purple
CO	Composite Material	Blue

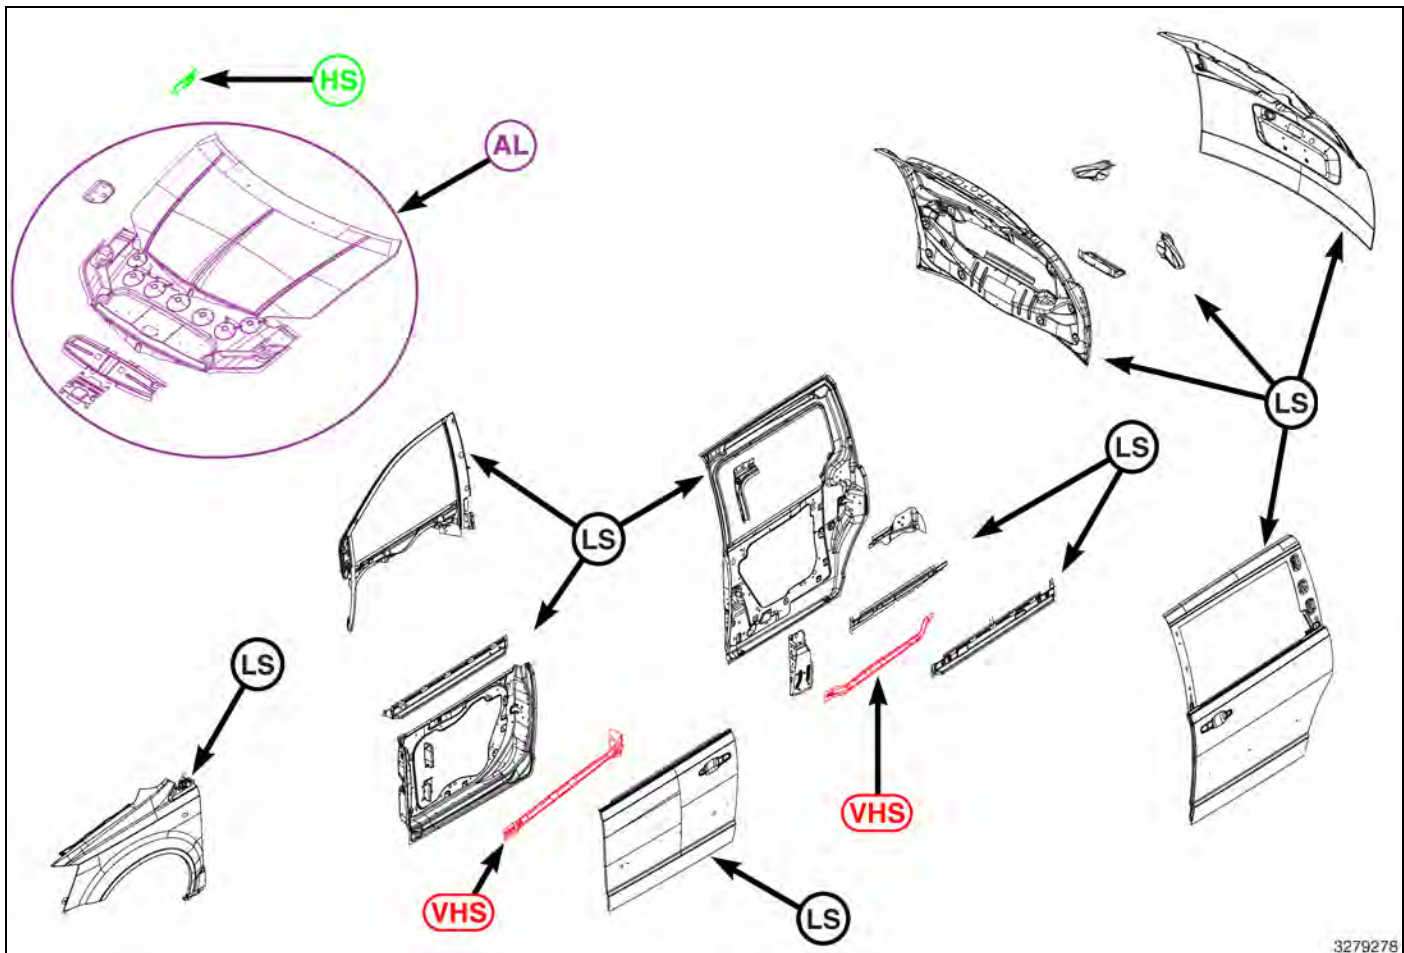
**BODY IN WHITE COMPONENT IDENTIFICATION - SHEET METAL CLOSURES**

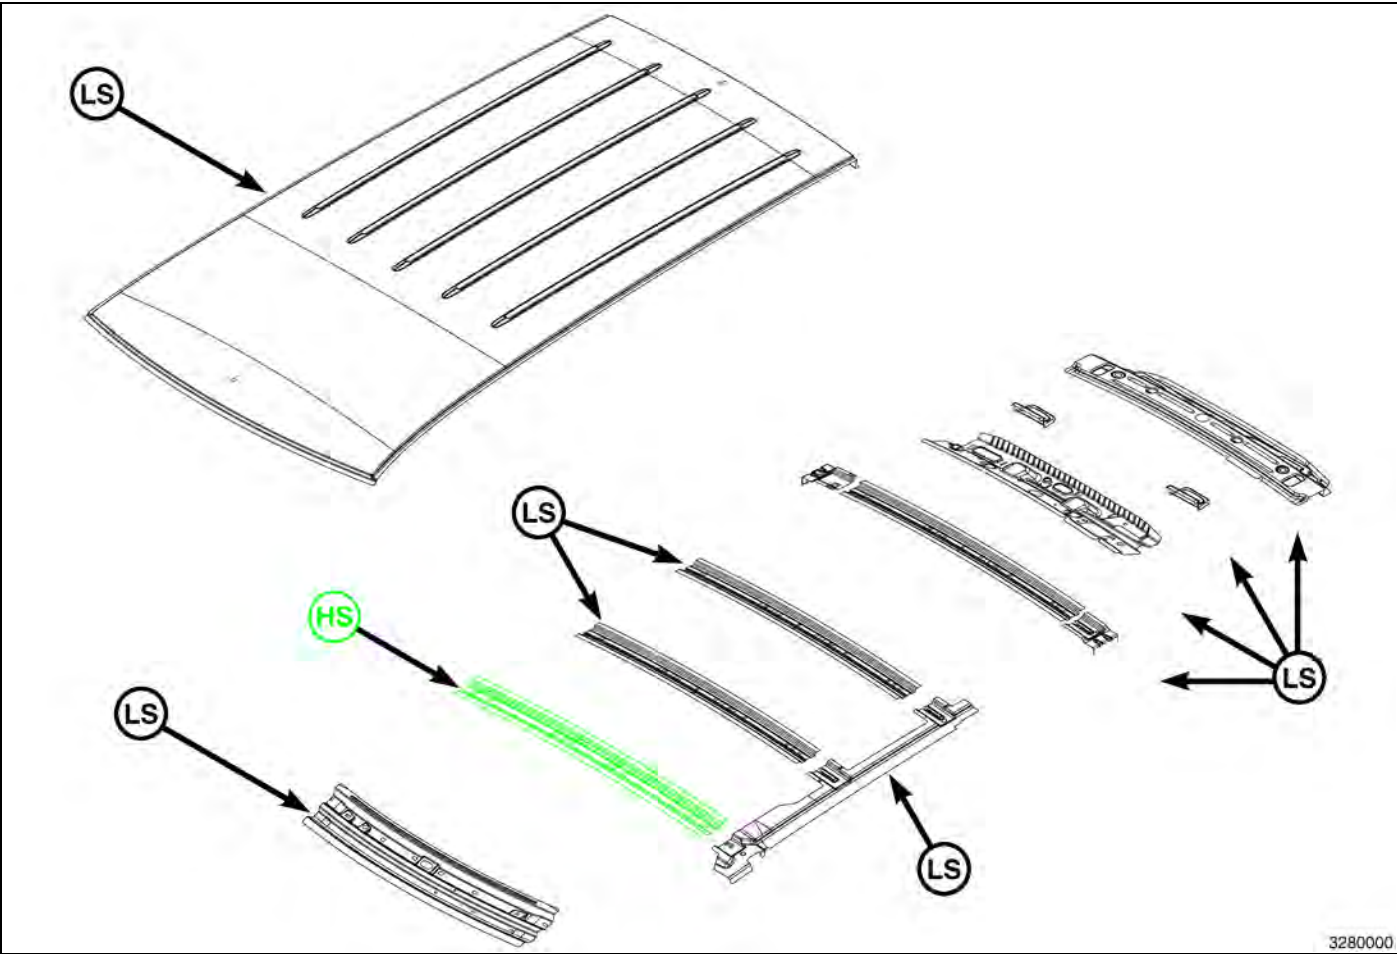


BODY IN WHITE COMPONENT IDENTIFICATION - ROOF COMPONENTS

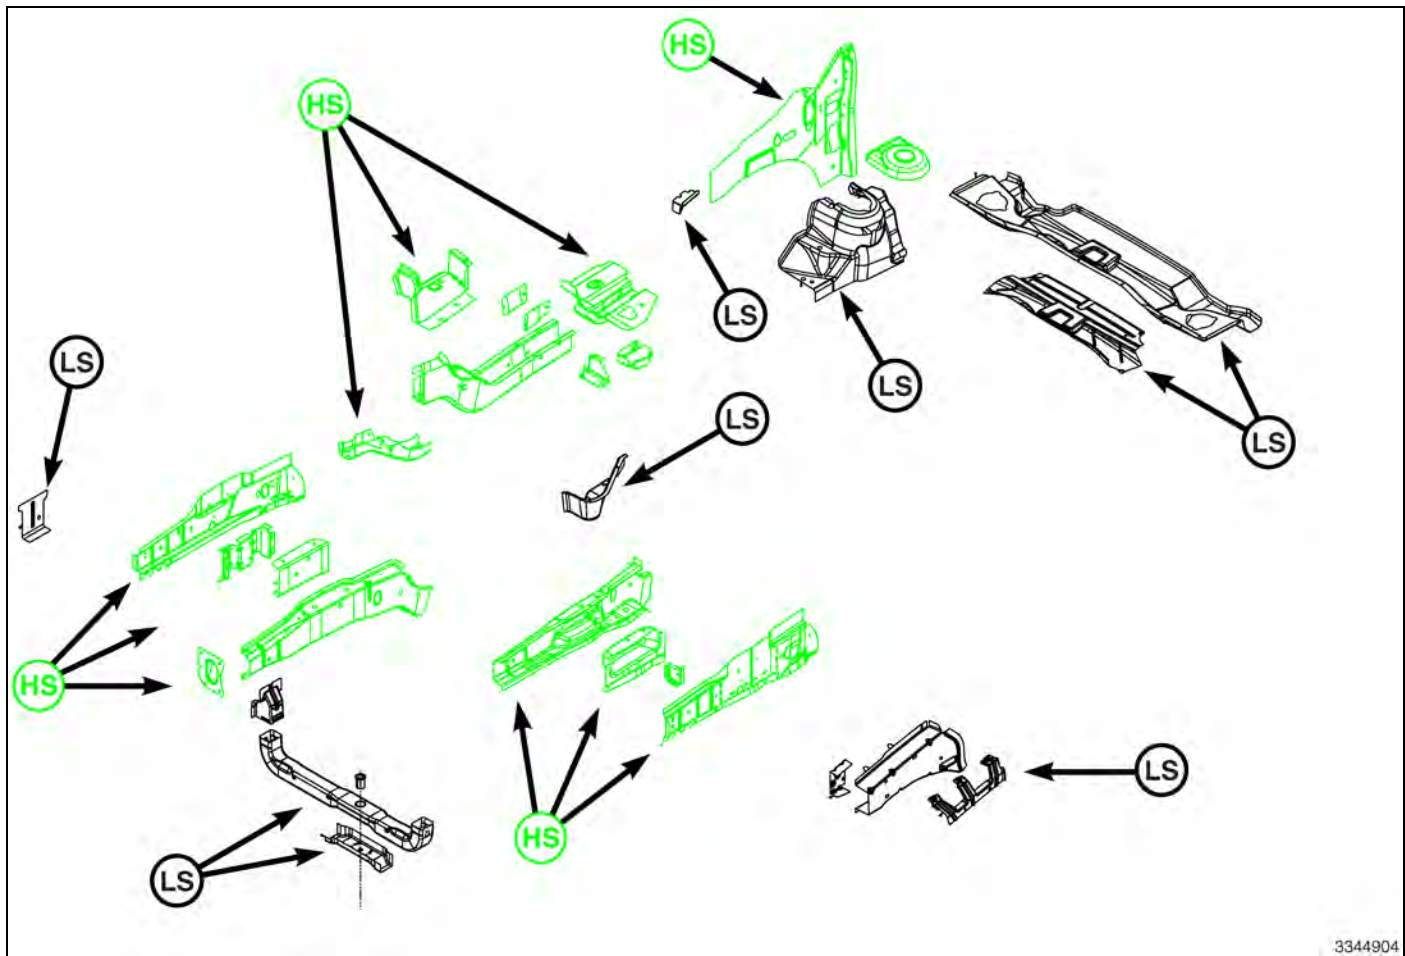


BODY IN WHITE COMPONENT IDENTIFICATION - ENGINE BOX

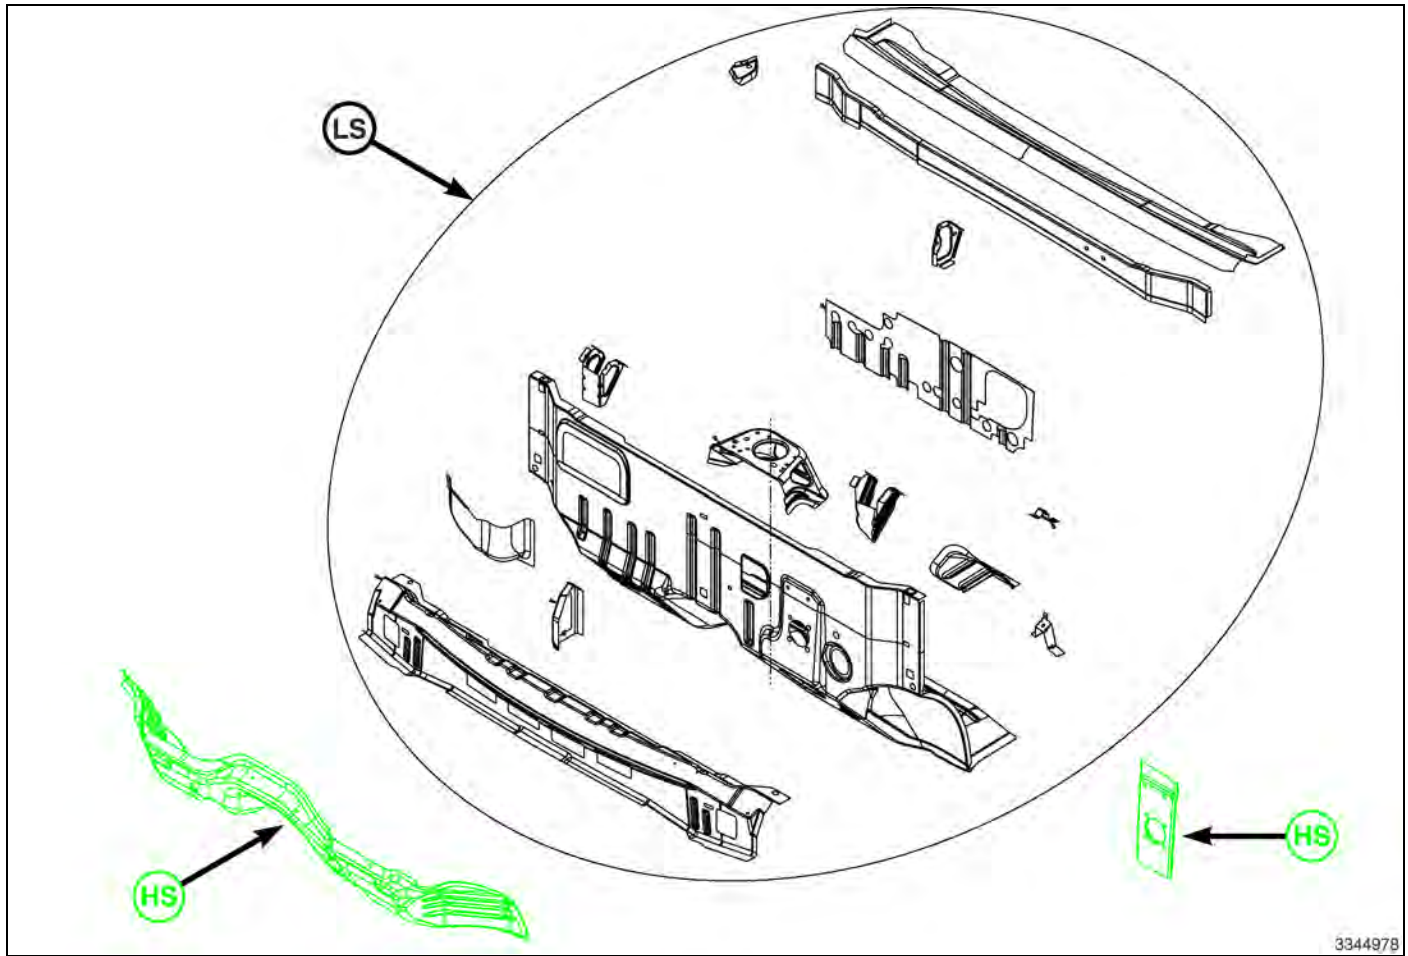


BODY IN WHITE COMPONENT IDENTIFICATION - COWL AND DASH

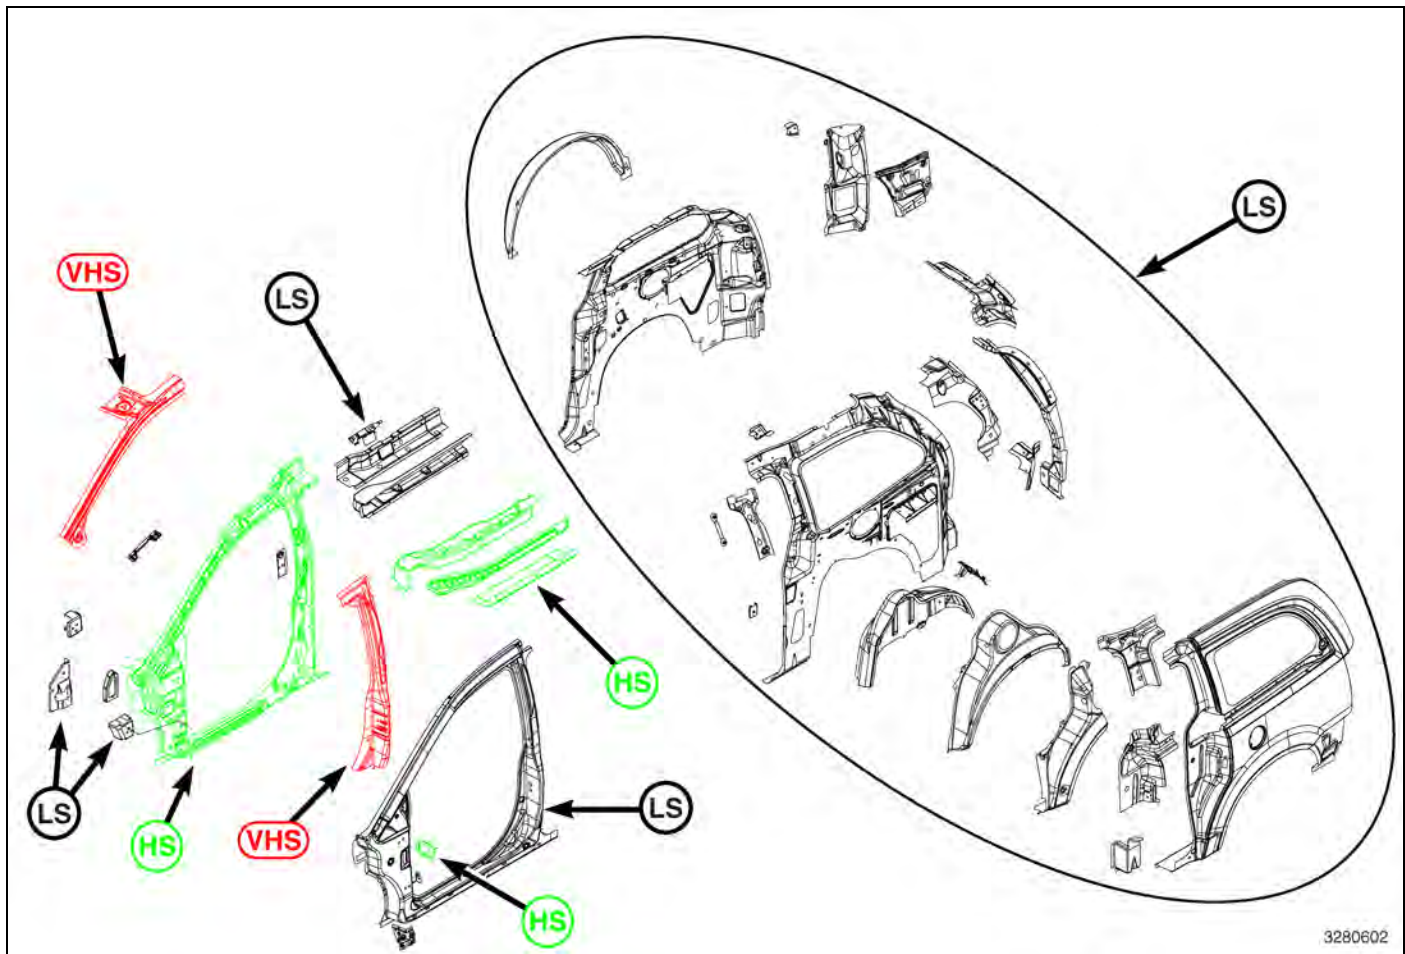

BODY IN WHITE COMPONENT IDENTIFICATION - BODY SIDE APERTURES

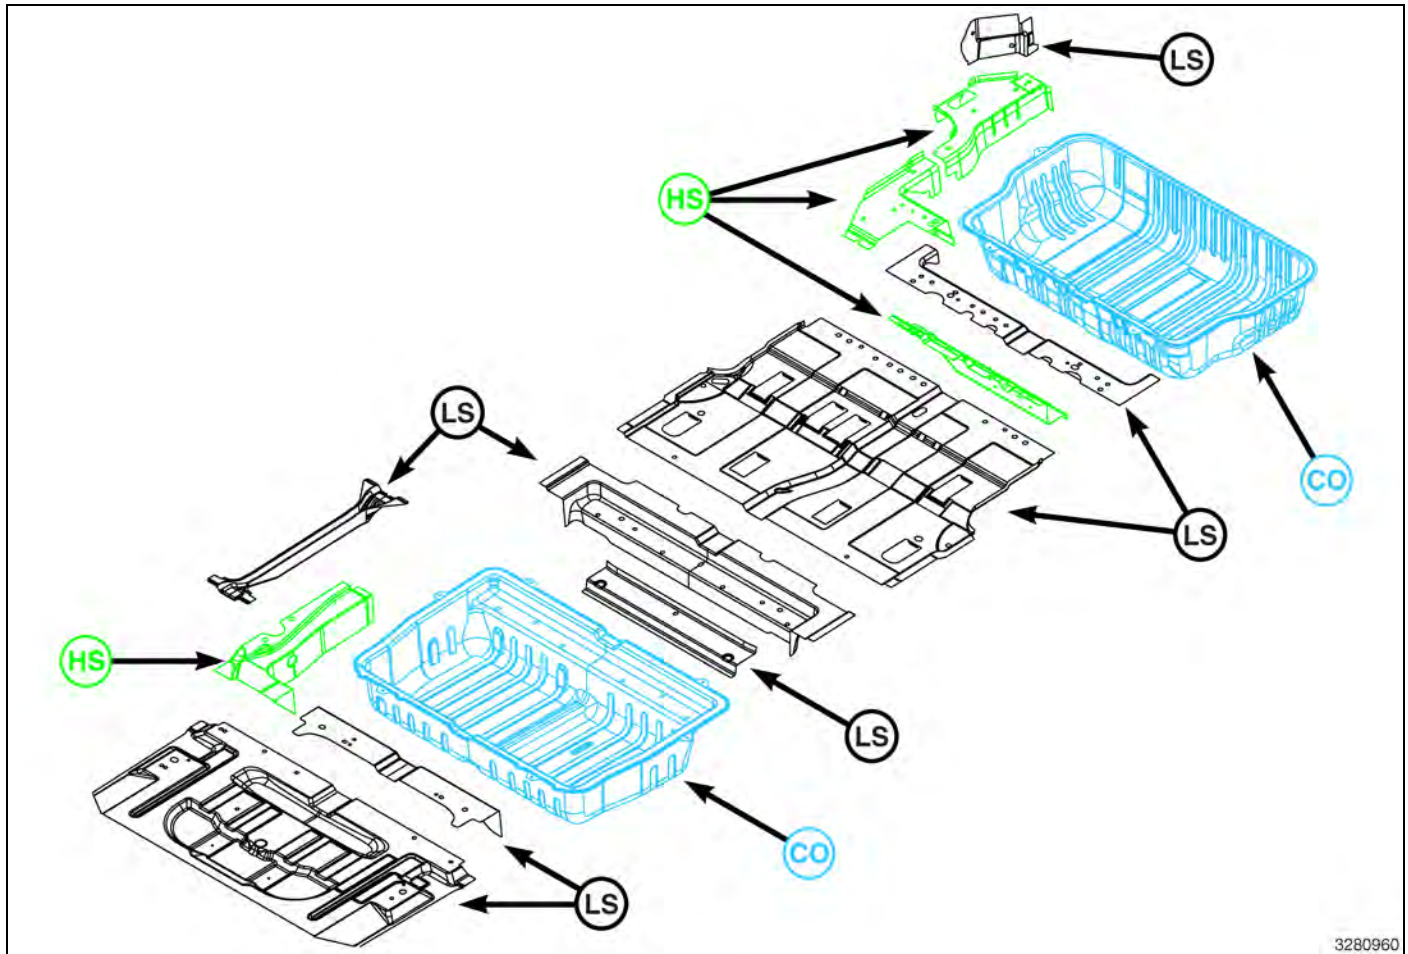


BODY IN WHITE COMPONENT IDENTIFICATION - FLOOR PANS AND PANELS

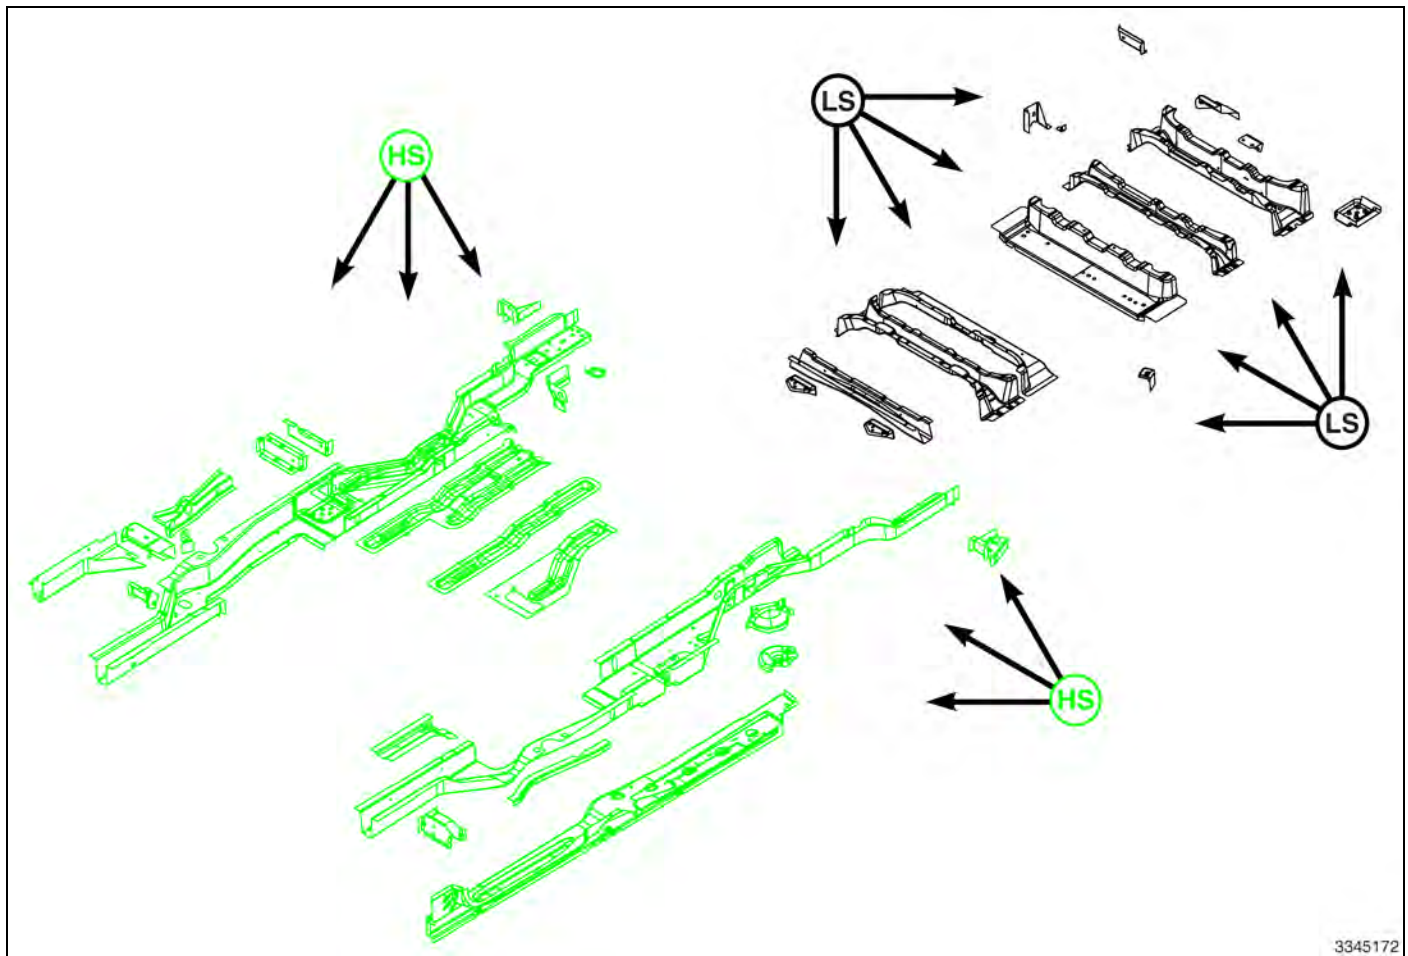

3345172

BODY IN WHITE COMPONENT IDENTIFICATION - LADDER ASSEMBLY

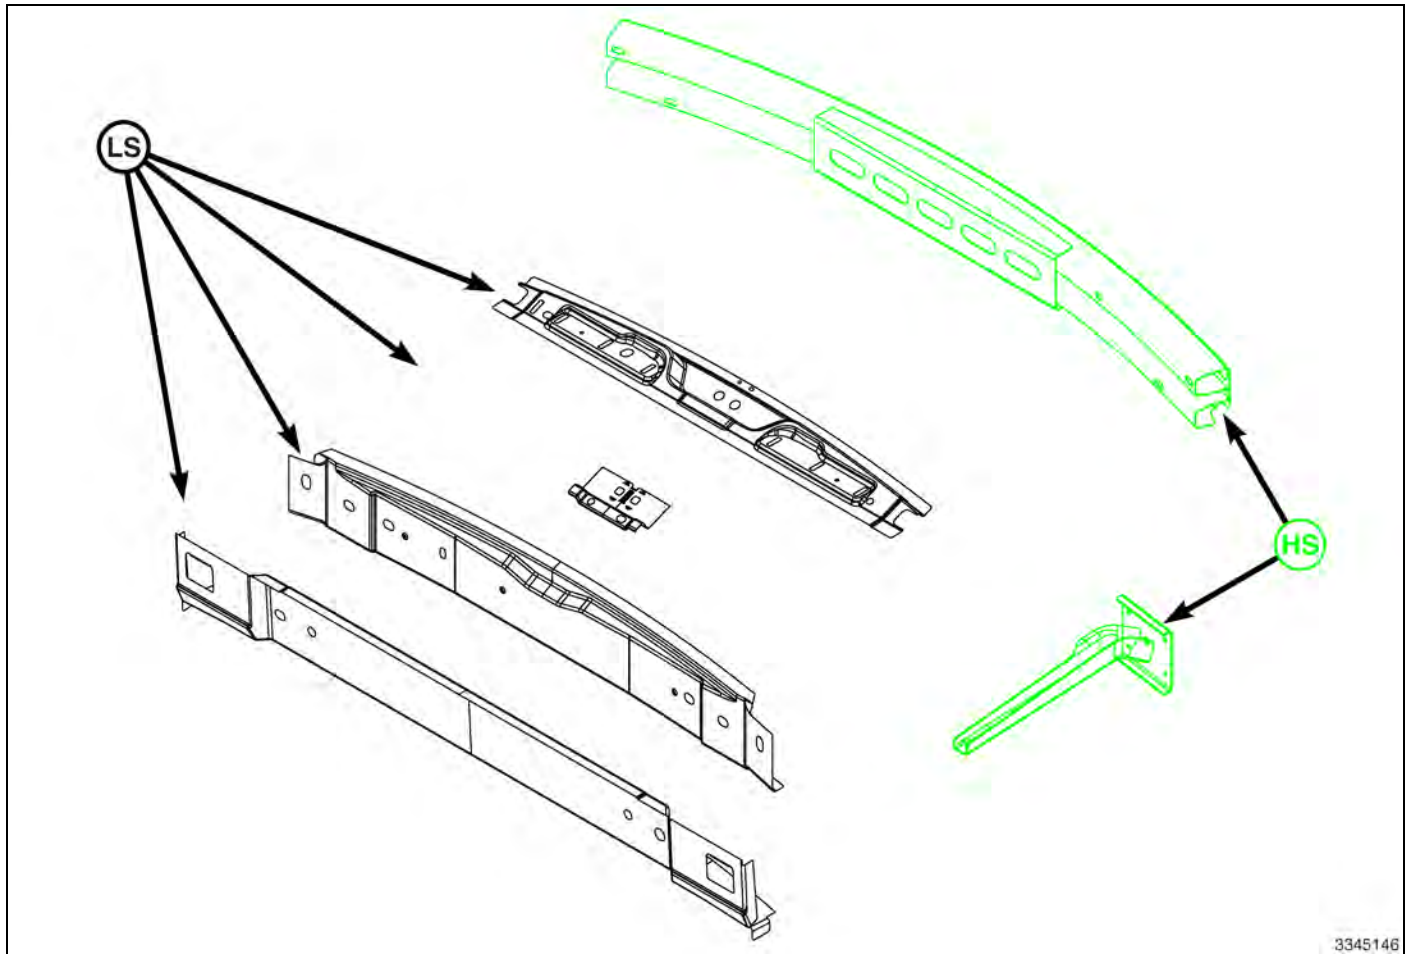

BODY IN WHITE COMPONENT IDENTIFICATION - REAR COMPONENTS

WELD PROCESS

COMPONENT PARTS	TRUCK FRAME		BODYSHELL EXTERIOR & UNDERBODY PANELS			
	Zinc and Zinc Iron Alloy coated sheet steels					
WELDING PROCESS	GAS METAL ARC (Note: 1)	FLUX CORED ARC	GAS METAL ARC (Note: 1)	MIG BRAZE (Note: 2)	GAS METAL ARC (Note: 1)	FLUX CORED ARC
Material Type	High Strength and Structural Quality Steels which includes HSLA, Marten- sitic, and Dual Phase materials					
Material Thickness Range	2 mm - 4 mm		0.6 mm - 1.02 mm		>1.02 mm - 3.0 mm	
ELECTRODE TYPE (AWS SPEC. A5.18)	AWS CLASS. ER70S-6	AWS CLASS. E71T-11 (Note 3)	AWS CLASS. ER70S-6	AWS CLASS. ERCuSi - A Silicon Bronze	AWS CLASS. ER70S-6	AWS CLASS. E71T-11 (Note 3)
ELECTRODE SIZE	0.035	0.045	0.023 - 0.025	0.035	0.035	0.045
ELECTRODE MAKER	Lincoln®	Lincoln® NR-211-MP	Lincoln®		Lincoln®	Lincoln® NR-211-MP

COMPONENT PARTS	TRUCK FRAME		BODYSHELL EXTERIOR & UNDERBODY PANELS			
WIRE FEED SPEED (in/min)	245-250 Vertical Down 70-90 Flat & Horizontal	110 Vertical Down 70-90 Flat & Horizontal	95-115 All Welds	150-155 Flat & Horizontal	245-250 Vertical Down 70-90 Flat & Horizontal	110 Vertical Down 70-90 Flat & Horizontal
TRAVEL SPEED (in/min)			10			
VOLTAGE	19-20	15-18	16-19	18-19	19-20	15-18
POLARITY	DCEP	DCEN	DCEP	DCEP	DCEP	DCEN
GAS FLOW (cfh)	25-35	N/A	25-35	25-35	25-35	N/A
ELECTRICAL STICKOUT (in)	1/2 - 5/8	3/8 - 1/2	1/2 - 5/8	5/8 - 3/4	1/2- 5/8	3/8 - 1/2
GAS TYPE	75% Ar 25% CO2	N/A	75% Ar 25% CO2	100% Ar	75% Ar 25% CO2	N/A
TYPE OF ARC TRANSFER	Short Circuit		Short Circuit	Pulse	Short Circuit	

These Procedure Specifications are appropriate as of this publication. Procedures may be superceded with new spec's at a later date.

Always process to the thinner material thickness (TMT)

All persons performing welding must be qualified to weld in all positions.

NOTE:

1. Must remove Zinc Coating on both sides of metal at the weld zone.
2. MIG Braze welding process requires use of Pulse Arc® or STT® welding machine.
3. Must use Lincoln® product since E 71T-11 product differs from other suppliers.


BODY OPENING DIMENSIONS

NOTE: Body opening dimensions are listed in metric scale millimeter (mm). Principal Locating Points (PLP), fastener locations, and holes are measured to center, unless noted otherwise.

VEHICLE PREPARATION

Position the vehicle on a level work surface. Remove any weatherstrips, door strikers or any other parts that may interfere with the reference point.

DESCRIPTION	FIGURE
WINDSHIELD OPENING	(Fig. 1)
BODY SIDE APERTURE OPENINGS	(Fig. 2)
LIFTGATE OPENING	(Fig. 3)
LIFTGATE GLASS OPENING	(Fig. 4)

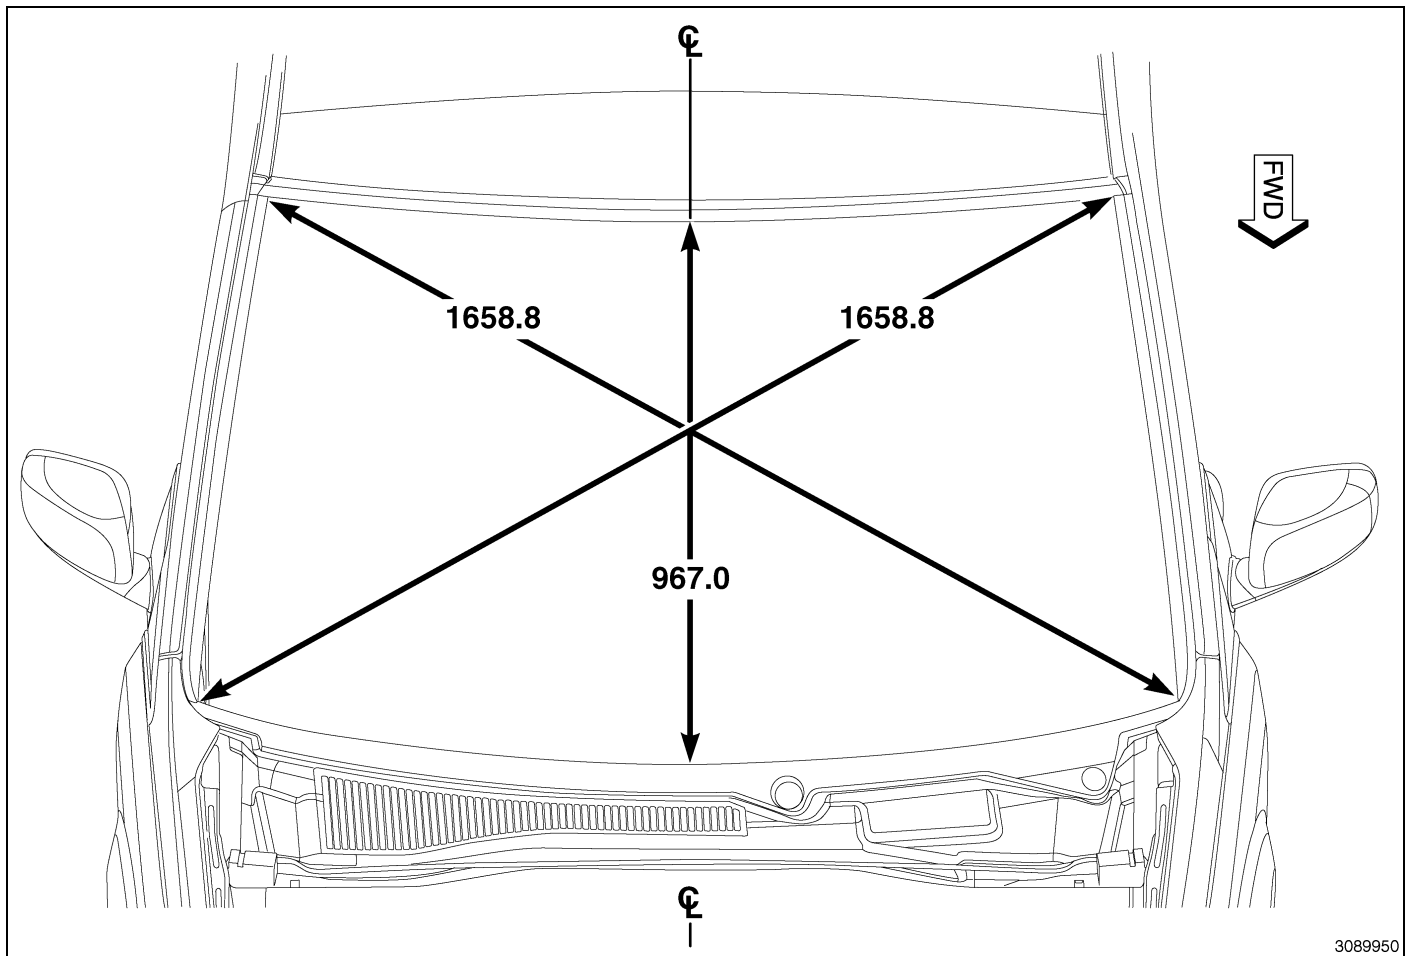

3089950

Fig. 1 Windshield



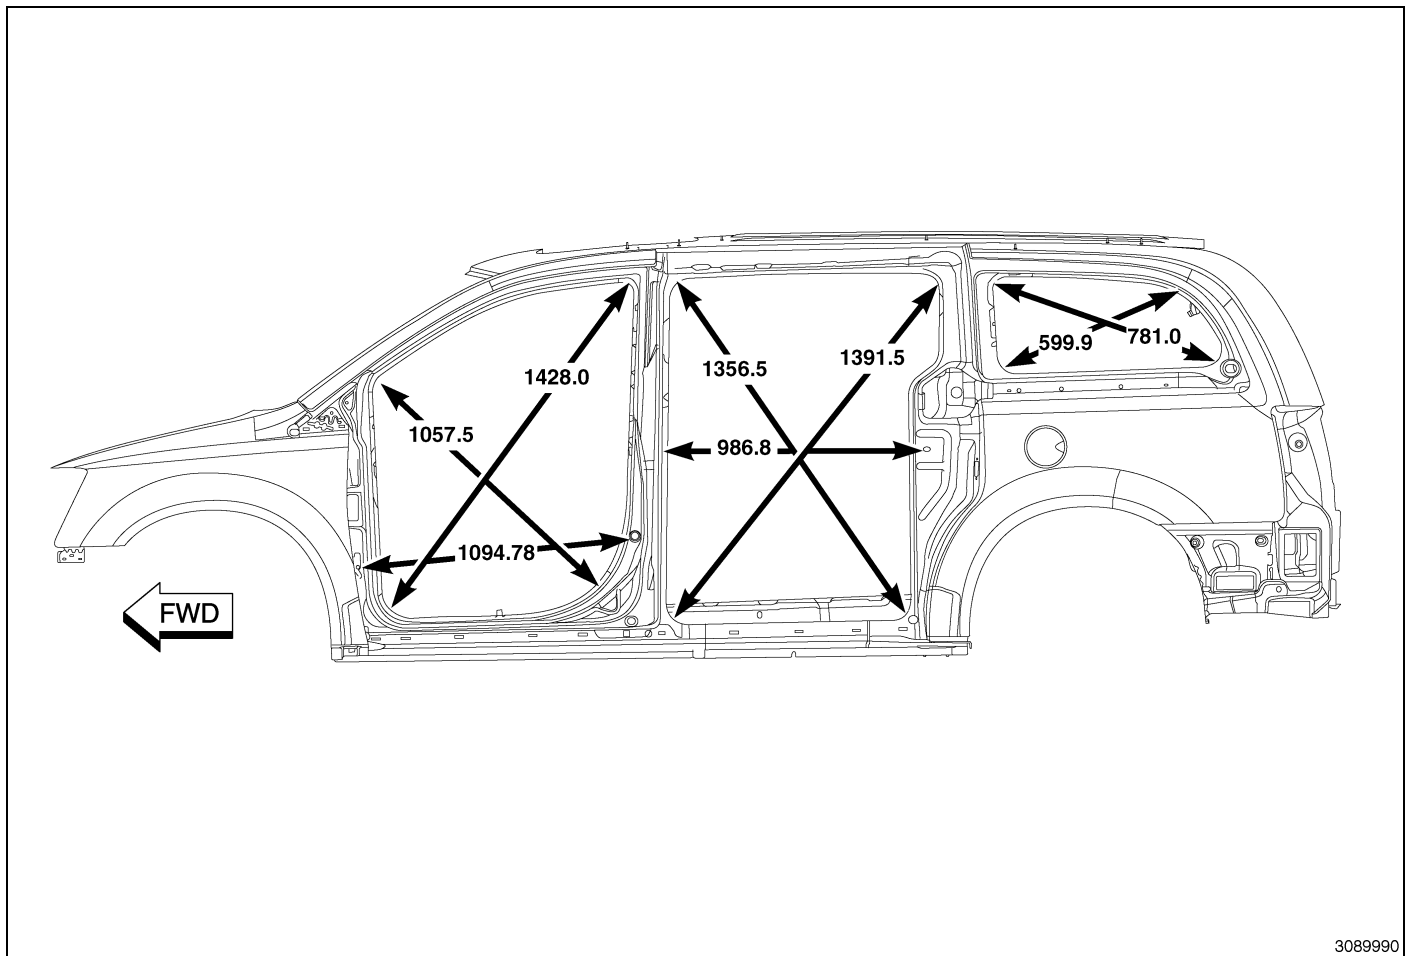


Fig. 2 Body Side

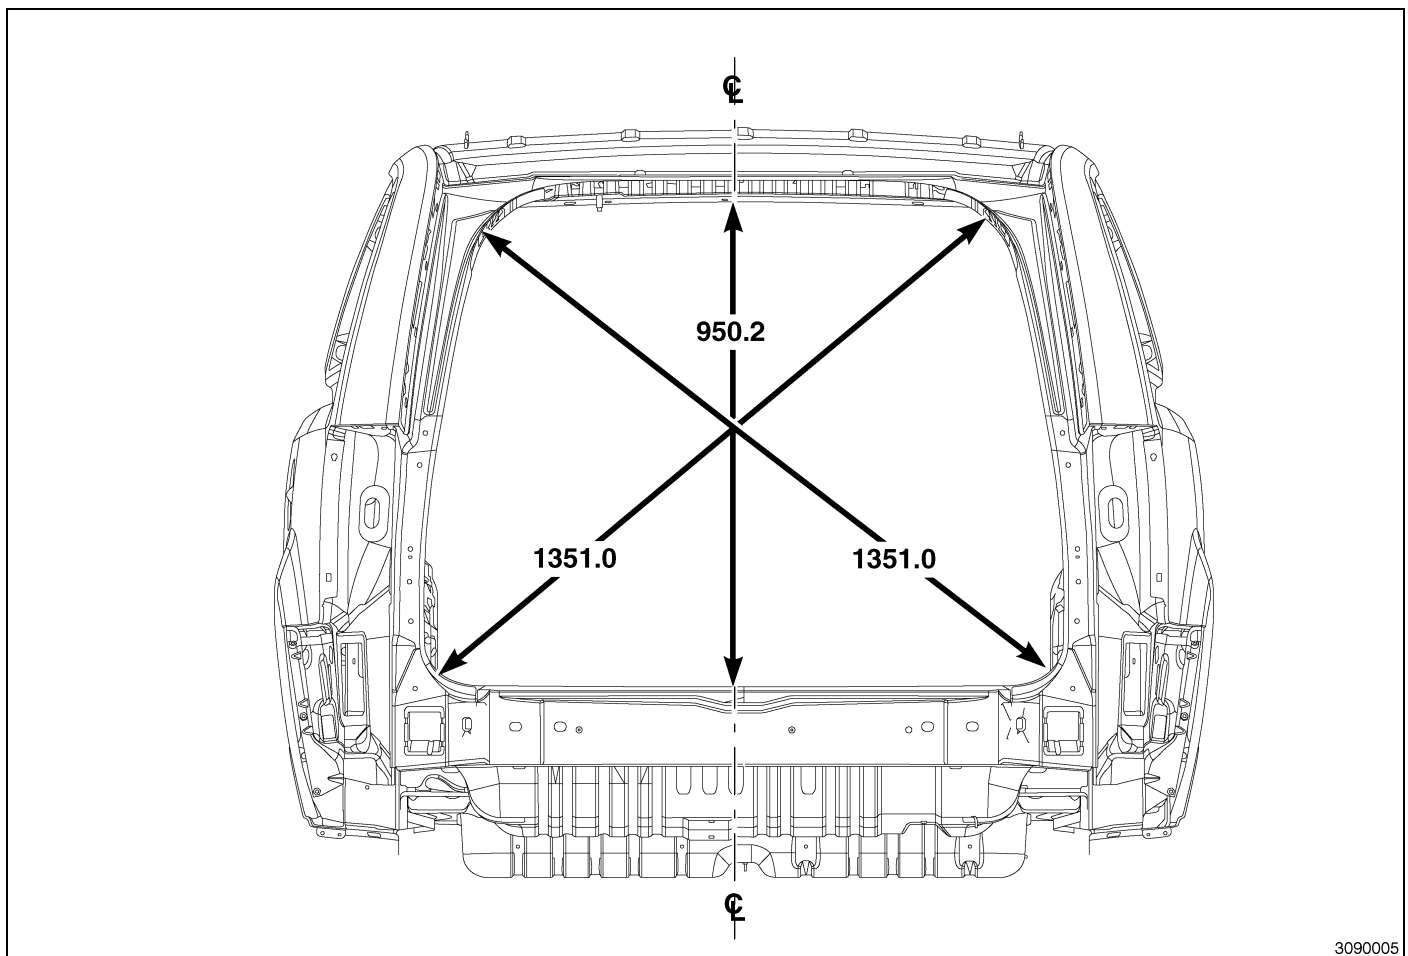

3090005

Fig. 3 Liftgate

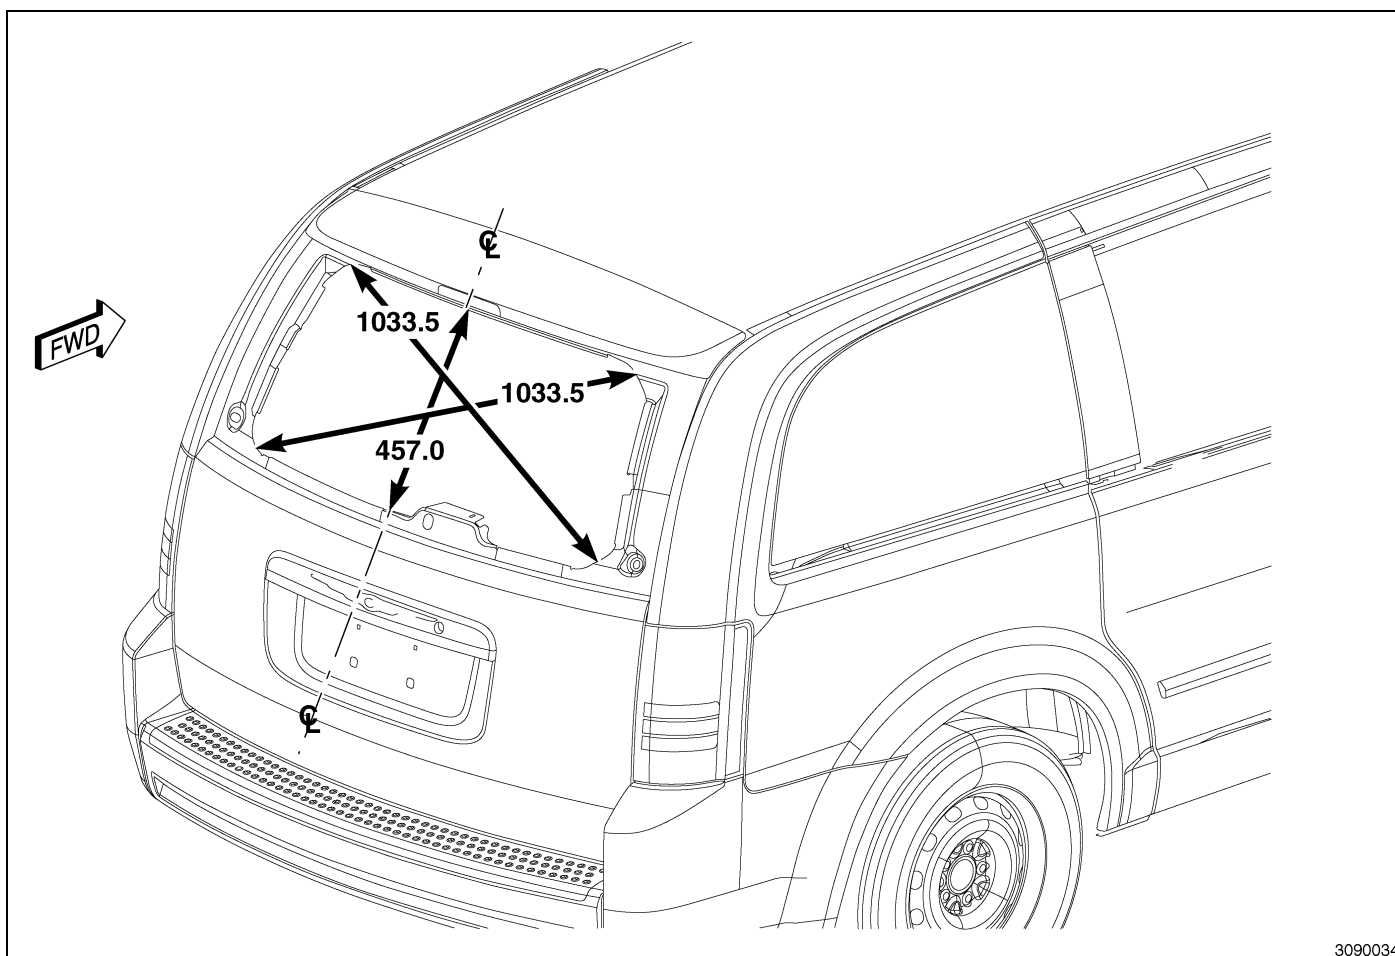

3090034

Fig. 4 Liftgate Glass**FRAME DIMENSIONS**


NOTE: Frame dimensions are listed in metric scale millimeter (mm). All dimensions are from center to center of Principal Locating Point (PLP), or from center to center of PLP and fastener location.

VEHICLE PREPARATION

Position the vehicle on a level work surface. Using screw or bottle jacks, adjust the vehicle PLP heights to the specified dimension above a level work surface. Vertical dimensions can be taken from the work surface to the locations indicated were applicable.

INDEX

DESCRIPTION	FIGURE
Under Body Dimensions - Bottom View	(Fig. 5)
Under Body Dimensions - Side View (Datum Height)	(Fig. 6)
Under Hood Dimensions	(Fig. 7)

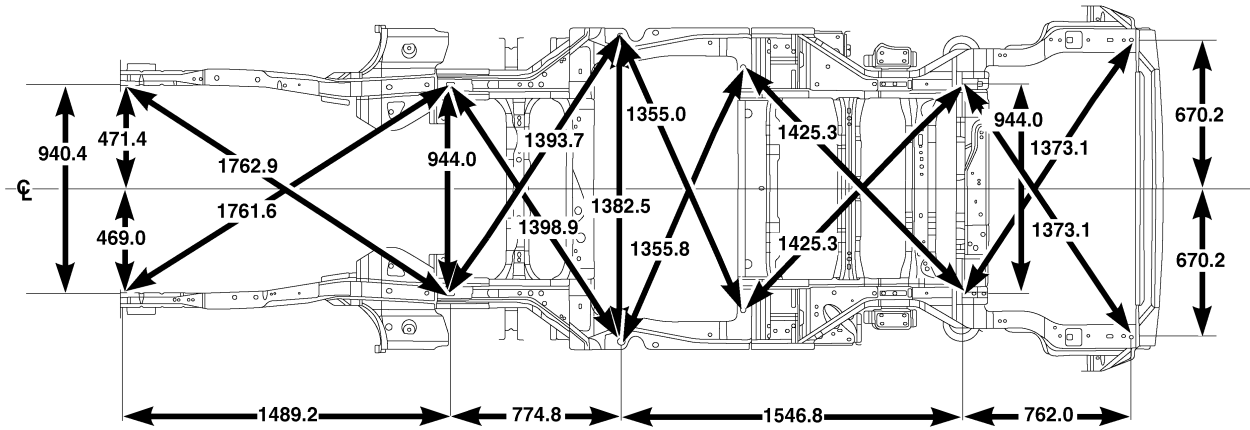

3089827

Fig. 5 Underbody Bottom View


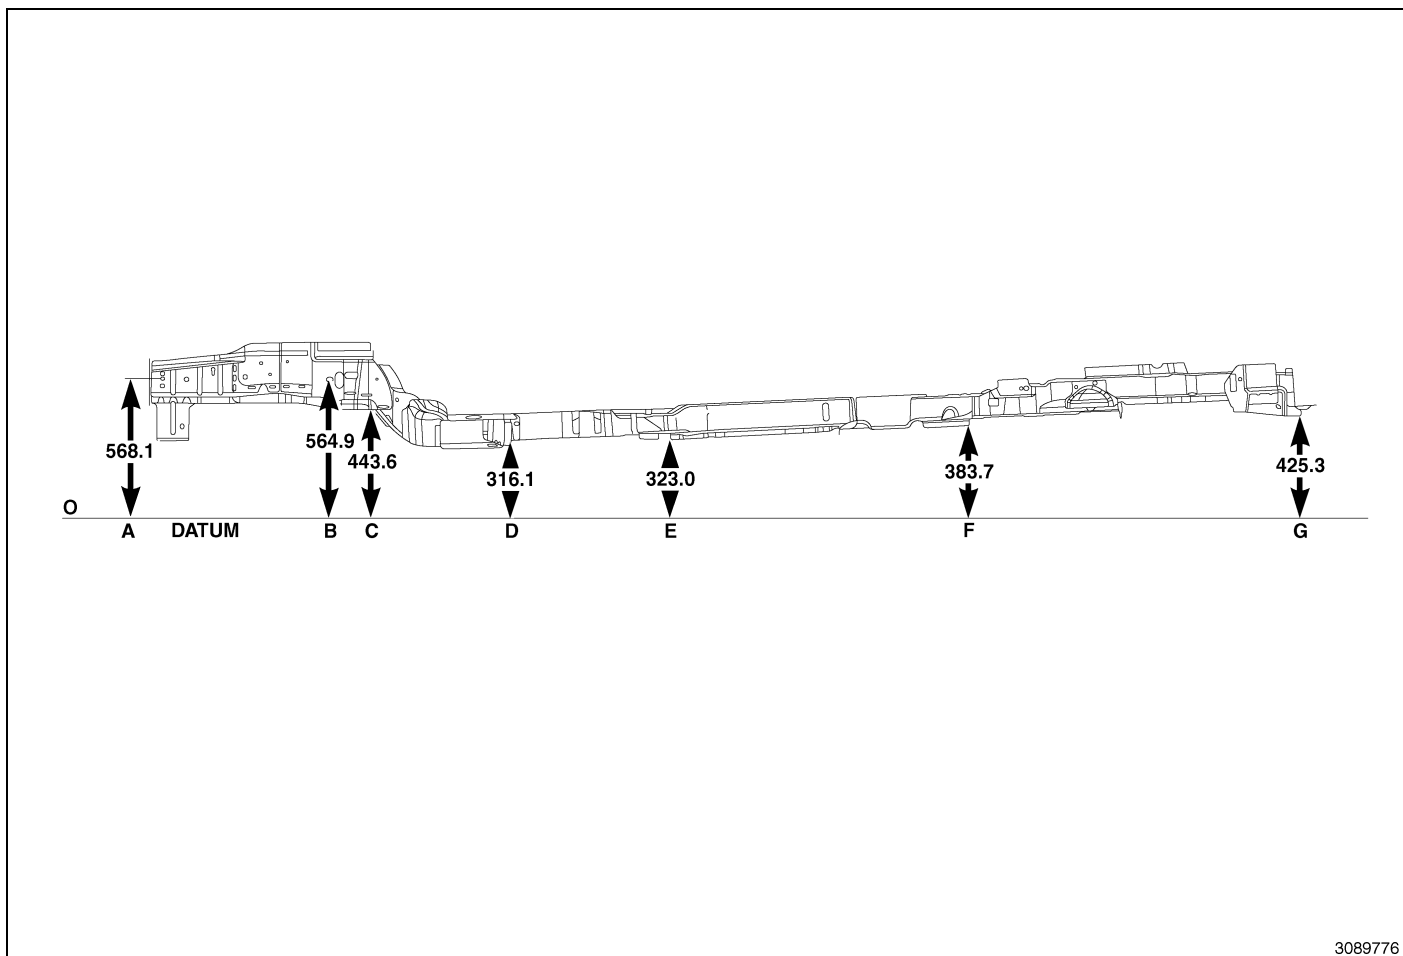



Fig. 6 Underbody Side View

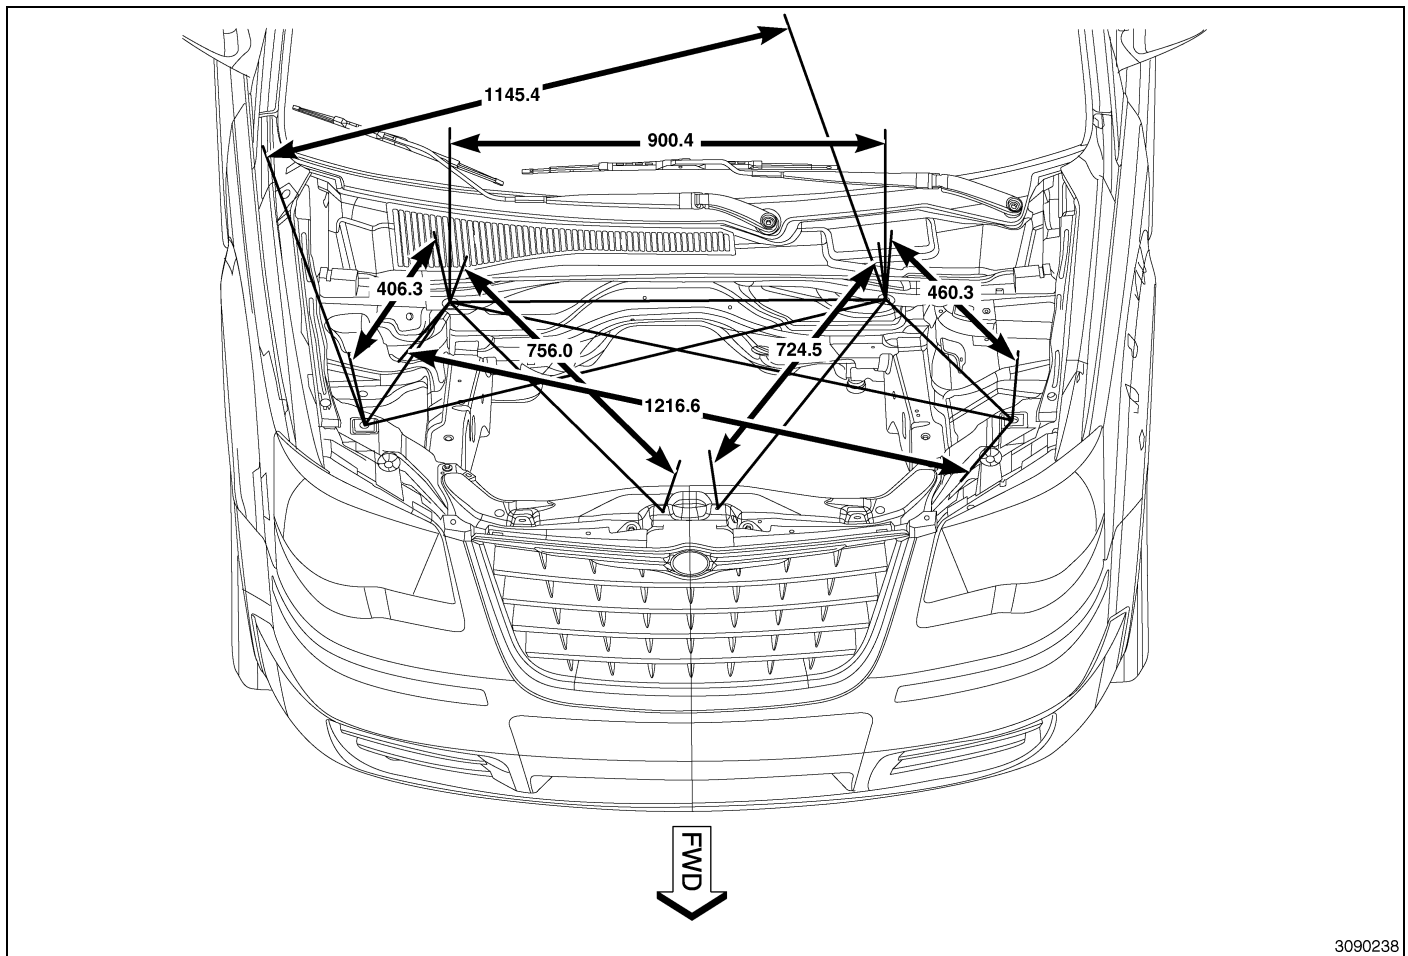

3090238

Fig. 7 Under Hood View

GAP AND FLUSH DIMENSIONS

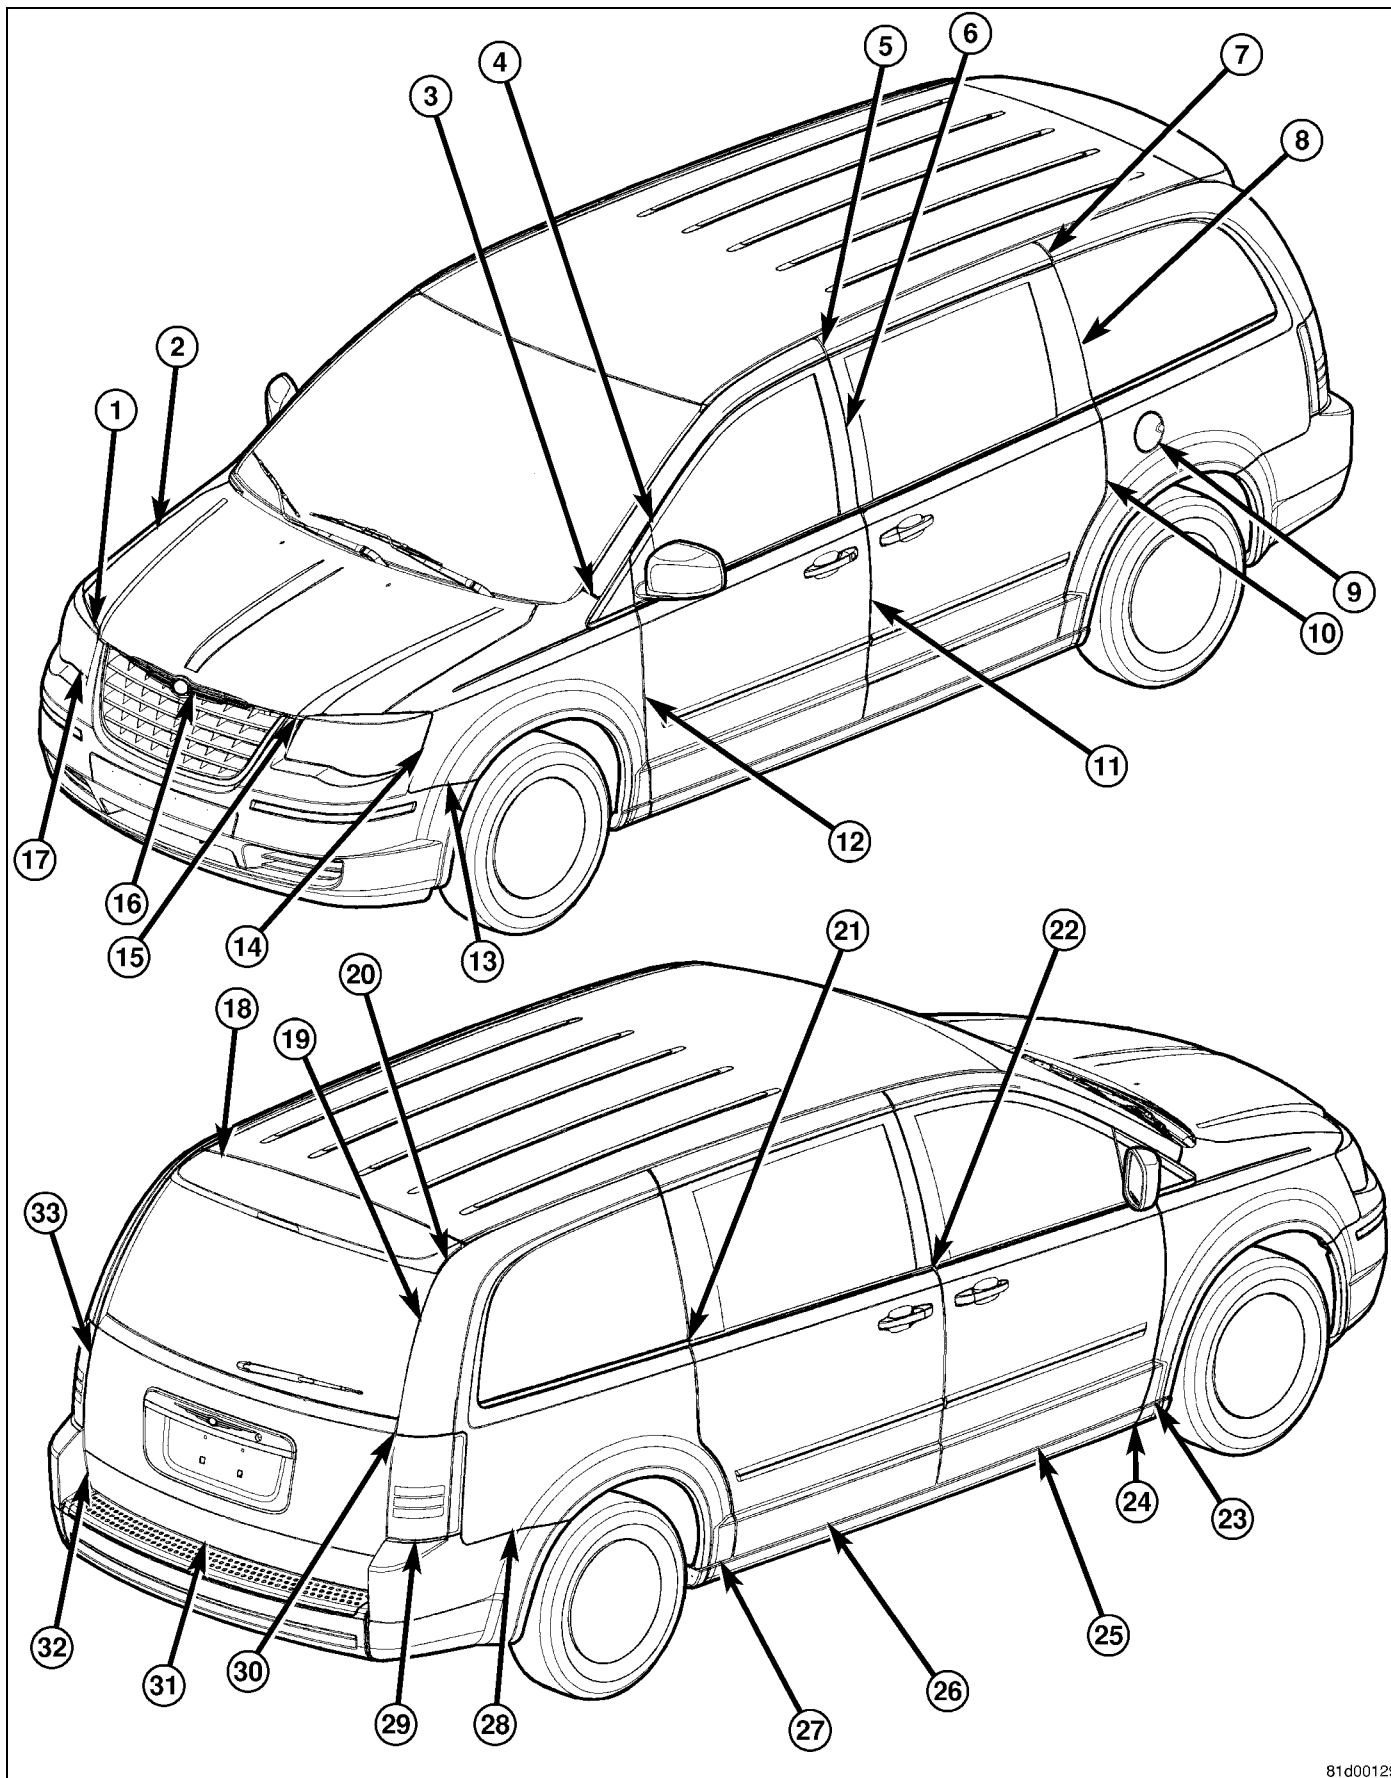

81d00129

Fig. 8 GAP AND FLUSH

NOTE: All measurements are in millimeters.			
O/F = Over Flush		U/F = Under Flush	
U/D = Up/Down		F/A = Fore/Aft	
DIMENSION	DESCRIPTION	GAP	FLUSH
1	Headlamp to Hood	3.5 +/- 2.3 Parallel within 2.0	Chrysler: Headlamp U/F 1.1 Dodge: Headlamp U/F 1.5 Both +/- 2.3 Consistent within 2.0
2	Hood to Fender	4.0 +/- 1.5 Parallel within 1.5 Side to Side within 1.5	Hood U/F 2.0 +/- 1.5 Consistent within 1.5 Side to Side within 1.5
3	Fender to Body Side Aperture	3.8 +/- 1.5 Parallel within 1.5	0.0 +/- 1.5 Consistent within 1.5
4	Body Side Aperture (A-pillar) to Front Door Header	--	A-pillar O/F +/- 1.5 Consistent within 1.5
5	Body Side Aperture (A-pillar) to Sliding Door (Above Glass)	5.5 +/- 1.5	Cross Car: Body Side Aperture O/F +/- 1.5
6	Front Door Applique to Sliding Door Applique (Above Belt)	5.0 +/- 2.0 Parallel within 2.0	0.0 +/- 2.0 Consistent within 2.0
7	Sliding Door to Body Side Aperture Rear (Above Glass)	5.0 +/- 1.5	0.0 +/- 1.5
8	Body Side Aperture Glass to Sliding Door Applique	5.0 +/- 2.0 Parallel within 2.0	Body Side Aperture Glass U/F 2.5 +/- 2.0 Consistent within 2.0
9	Fuel Filler Door to Body Side Aperture	3.0 +/- 1.5 Parallel within 1.5	Fuel Filler Door U/F 0.5 +/- 1.5 Consistent within 1.5
10	Sliding Door to Body Side Aperture Rear (Below Belt)	5.0 +/- 1.5 Parallel within 1.5	0.0 +/- 1.5 Consistent within 1.5
11	Front Door to Sliding Door (Below Belt)	5.0 +/- 1.5 Parallel within 1.5	Front Door O/F 0.5 +/- 1.5 Consistent within 1.5
12	Fender to Front Door	5.0 +/- 1.5 Parallel within 1.5	Fender O/F 0.5 +/- 1.5 Consistent within 1.5

NOTE: All measurements are in millimeters.			
O/F = Over Flush		U/F = Under Flush	
U/D = Up/Down		F/A = Fore/Aft	
DIMENSION	DESCRIPTION	GAP	FLUSH
13	Fascia to Fender	Vertical: Net to 1.0 Horizontal: Net to 1.0	Vertical: Chrysler: 0.0 Dodge: Fascia U/F 0.25 Both +/- 2.0 Consistent within 2.0 Horizontal: 0.0 +/- 2.0 Consistent within 2.0
14	Headlamp to Fender	Top: 2.0 +2.3/-2.0 Parallel within 2.0 O/B Side: 2.0 +2.3/-2.0 Parallel within 2.0	Top: Headlamp U/F 1.0 +/- 2.3 Consistent within 2.0 O/B Side: Chrysler: Headlamp U/F 1.0 Dodge: Headlamp U/F 1.15 Both: +/-2.3 Consistent within 2.0
15	Fascia to Hood	6.0 +/- 2.0 Side to Side within 2.0	Chrysler: Fascia U/F 2.8 +/- 2.0 Side to Side within 2.0 Dodge: Fascia U/F 1.4 +/-2.0 Side to Side within 2.0
16	Hood to Grille Chrysler @ Towers Dodge @ Center	Chrysler(Badge): 6.3 +/- 2.0 Side to Side within 2.0 Dodge: 6.0 +/-2.0	Chrysler(Badge) O/F +/-2.0 Side to Side within 2.0 Dodge: Grille U/F 1.2 +/-2.0
17	Fascia to Headlamp (Inboard)	Chrysler: 2.3 Dodge 2.9 +/-2.3 Parallel within 2.0	—
18	Spoiler to Roof	7.5 +/- 2.0 Parallel within 2.0	Spoiler U/F 2.0 +/- 2.0 Consistent within 2.0
19	D-pillar to Liftgate Glass	5.0 +/-2.0 Parallel within 2.0	—
20	D-pillar to Spoiler	5.0 +/- 2.0 Parallel within 2.0	—
21	Front Door to Slidng Door (At Beltline)	5.0 +/- 2.0	Front Door O/F 0.5 +/- 2.0
22	Sliding Door to Body Side Aperture (At Beltline)	5.0 +/- 2.0	0.0 +/- 2.0

NOTE: All measurements are in millimeters.			
O/F = Over Flush		U/F = Under Flush	
U/D = Up/Down		F/A = Fore/Aft	
DIMENSION	DESCRIPTION	GAP	FLUSH
23	Fender to Sill	4.0 +/- 2.0 Parallel within 2.0	Sill O/F 5.0 +/- 2.0
24	Fender Sill to Front Door Sill	5.0 +/- 2.0 Parallel within 2.0	0.0 +/- 2.0
25	Sill to Front Door	6.3 +/- 2.0 Parallel within 2.0	Sill O/F 5.0 +/-2.0 Consistent within 2.0
26	Sill to Sliding Door	6.1 +/- 2.0 Parallel within 2.0	Front, Sill O/F 5.5 +/- 2.0 Rear, Sill O/F 5.0 +/-2.0 Consistent within 2.0
27	Body Side Aperture Rear To Sill	4.2 +/- 2.0	Sill O/F 5.0 +/- 2.0
28	Rear Fascia to Body Side Aperture	Net to 1.0	0.0 +/- 2.0 Consistent within 2.0
29	Rear Fascia to Taillamp	3.0 +/-2.0 Parallel within 2.0	Taillamp U/F 0.5 +/- 2.0 Consistent within 2.0
30	Body Side Aperture To Liftgate at Feature Line (Diagonal corners near Taillamp)	—	Liftgate U/F 2.2 +/- 1.5
31	Liftgate to Fascia U/D	8.0 +/-2.0 Parallel within 2.0	—
32	Liftgate to Fascia Cross/Car	5.0 +/-2.0 Parallel within 2.0 Side to Side within 2.0	—
33	Taillamp to Liftgate	5.15 +/-2.0 Parallel within 2.0	Taillamp O/F 1.9 +/-2.0 Consistent within 2.0

PAINT CODES

Exterior vehicle body color(s) are identified on the Vehicle Certification Label or the Body Code Plate.

The first digit of the paint code listed on the vehicle indicates the sequence of application, i.e.: P = primary coat, Q = secondary coat. The color names provided in the Paint and Trim Code Description chart are the same color names used on most repair product containers.

PAINT COLOR INFORMATION	INFORMATION LOCATION
2008 - Paint Color Chart	2008 PAINT COLORS
2009 - Paint Color Chart	2009 PAINT COLORS
2010 - Paint Color Chart	2010 PAINTCOLORS
2011 - Paint Color Chart	2011 PAINT COLORS

2008 PAINT COLORS

EXTERIOR COLOR	CHRYSLER CODE
Inferno Red Crystal Pearlcoat	ARH
Deep Crimson Crystal	FHF
Sunburst Orange Pearlcoat	DV6
Light Sandstone Metallic Clearcoat	FKG
Clearwater Blue Pearlcoat	EBG
Marathon Blue Pearlcoat	EBD
Modern Blue Pearlcoat	EBL
Bright Silver Metallic Clearcoat	WS2
Brilliant Black Clearcoat	AXR
Black Clearcoat	DX8
Stone White Clearcoat	SW1
INTERIOR COLOR	CHRYSLER CODE
Medium Slate Gray/Light Shale	DS
Medium Pebble Beige/Light Shale	KS
Cream	T1
Dark Slate Gray/Light Shale	VS

2009 PAINT COLORS

EXTERIOR COLOR	CHRYSLER CODE
Inferno Red Crystal Pearlcoat	ARH
Deep Crimson Crystal	FHF
Sunburst Orange Pearlcoat	DV6
Light Sandstone Metallic Clearcoat	FKG
Clearwater Blue Pearlcoat	EBG
Marathon Blue Pearlcoat	EBD
Modern Blue Pearlcoat	EBL
Bright Silver Metallic Clearcoat	WS2
Brilliant Black Clearcoat	AXR
Black Clearcoat	DX8
Stone White Clearcoat	SW1
INTERIOR COLOR	CHRYSLER CODE
Medium Slate Gray/Light Shale	DS
Medium Pebble Beige/Light Shale	KS
Cream	T1
Dark Slate Gray/Light Shale	VS

2010 PAINTCOLORS

EXTERIOR COLOR	CHRYSLER CODE
Inferno Red Crystal Pearlcoat	ARH
Stone White Clearcoat	SW1
Brilliant Black Clearcoat	AXR
Dark Titanium Metallic Clearcoat	FDT
Deep Water Blue Pearlcoat	GBS
Blackberry Pearlcoat	EBG
Bright Silver Metallic Clearcoat	WS2
Dark Cordovan Pearlcoat	GUV
White Gold Metallic Clearcoat	HWL
Clearwater Blue Pearlcoat	EBG
INTERIOR COLOR	CHRYSLER CODE
Medium Slate Gray/Light Shale	DS
Dark Slate Gray/Light Shale	VS

2011 PAINT COLORS


EXTERIOR COLOR	CHRYSLER CODE
Brilliant Black Clearcoat	AXR
Deep Water Blue Pearlcoat	GBS
Dark Charcoal Pearlcoat	HAV
Blackberry Pearlcoat	HBG
Mango Tango Pearlcoat	HVG
White Gold Metallic Clearcoat	HWL
Sapphire Crystal Pearlcoat	JBF
Deep Cherry Red Crystal Pearlcoat	JRP
Stone White Clearcoat	SW1
Bright Silver Metallic Clearcoat	WS2
INTERIOR COLOR	CHRYSLER CODE
Dark Frost Beige/Medium Frost Beige	LL
Black/Light Greystone	X1
Black	X9

VEHICLE CERTIFICATION LABEL

A vehicle certification label is attached to every Chrysler Group LLC vehicle. The label certifies that the vehicle conforms to all applicable Federal Motor Vehicle Standards. The label also lists:

- Month and year of vehicle manufacture.
- Gross Vehicle Weight Rating (GVWR). The gross front and rear axle weight ratings (GAWR's) are based on a minimum rim size and maximum cold tire inflation pressure.
- Vehicle Identification Number (VIN).
- Type of vehicle.
- Type of rear wheels.
- Bar code.
- Month, Day and Hour (MDH) of final assembly.
- Paint and Trim codes.
- Country of origin.

The label is located on the driver-side door shut-face.

MFD BY CHRYSLER LLC		DATE OF MFR 11-07	GVWR 2745 KG(06050 LB)
GAWR FRONT	WITH TIRES	RIMS AT	COLD
1339 KG(2950 LB)	P225/65R17	17X6.5	250 KPA(36 PSI)
GAWR REAR	WITH TIRES	RIMS AT	COLD
1407 KG(3100 LB)	P225/65R17	17X6.5	250 KPA(36 PSI)
THIS VEHICLE CONFORMS TO ALL APPLICABLE U.S.A. FEDERAL MOTOR VEHICLE SAFETY STANDARDS IN EFFECT ON THE DATE OF MANUFACTURE SHOWN ABOVE.			
VIN: 2A8HR64X68R148067	TYPE: MPV	SINGLE X DUAL	
			
MDH: 112707 016AB	PNT:PKG	VEHICLE MADE IN CANADA TRM:TLT1 464B505	

19125

Vehicle Certification Label - Typical

Standard Procedure

SERVICE AFTER A SUPPLEMENTAL RESTRAINT DEPLOYMENT

Any vehicle which is to be returned to use following a Supplemental Restraint System (SRS) component deployment must have the deployed restraints replaced. In addition, the following guidelines **MUST** be observed.

- **Following ANY major vehicle impact damage in the vicinity of an impact sensor or the ORC** - It is critical that the mounting surfaces and mounting brackets for the Occupant Restraint Controller (ORC), front impact sensors and side impact sensors located within the proximity of the impact damage be closely inspected and restored to their original conditions. Because the ORC and each impact sensor are used by the SRS to monitor or confirm the direction and severity of a vehicle impact, improper orientation or insecure fastening of these components may cause airbags not to deploy when required, or to deploy when not required.
- **If an active head restraint is deployed** - Deployed Active Head Restraint (AHR) units that are undamaged are designed with the intention of reuse. However, the deployed AHR units must be properly reset following deployment. (Refer to Service Manual Section 10 - Restraints/RESTRAINT, Active Head - Standard Procedure)
- **If the driver airbag is deployed** - If the driver airbag has been deployed, the Steering Column Control Module (SCCM) with integral clockspring and the steering column assembly must also be replaced.
- **If the knee blocker airbag is deployed** - On vehicles so equipped, if the knee blocker airbag (also known as the Knee AirBag/KAB or Inflatable Knee Blocker/IKB) has been deployed, the entire instrument panel assembly must also be replaced.
- **If the passenger airbag is deployed** - If the passenger airbag has been deployed, the instrument panel top cover must also be replaced.
- **If a seat airbag is deployed** - If a seat (pelvic and thorax) airbag has been deployed, the seat back frame, the seat back foam and the seat back trim cover on the same side of the vehicle as the deployed airbag must also be replaced.
- **If a seat belt tensioner is deployed** - The seat belt tensioners are deployed in conjunction with the front airbags, but can also be deployed with seat (pelvic and thorax) or side curtain airbags. The seat belt tensioners must be replaced if either front airbag has been deployed, and must be inspected if either seat or side curtain airbag has been deployed.
- **If a side curtain airbag is deployed** - If a side curtain airbag has been deployed, the headliner as well as the upper A, B and C-pillar trim on the same side of the vehicle as the deployed airbag must also be replaced. On vehicles with an optional sunroof, the sunroof drain tubes and hoses must be closely inspected following a side curtain airbag deployment.

The components identified with the deployed SRS components in the preceding list are not intended for reuse and will be damaged or weakened as a result of an airbag deployment, which may or may not be obvious during a visual

inspection. All other vehicle components should be closely inspected following any SRS component deployment, but are to be replaced only as required by the extent of the visible damage incurred.

SQUIB CIRCUIT WIRING REPAIRS

In addition to the preceding guidelines, be aware that the heat created by the initiator during an airbag or tensioner deployment will cause collateral damage to the connected wiring (squib circuits) and connector insulators. There are two methods by which an airbag or seat belt tensioner may be connected to the vehicle electrical system. The first method involves a short pigtail harness and connector insulator that are integral to the airbag or tensioner unit and are replaced as a unit with the service replacement airbag or seat belt tensioner. This connection method typically requires no additional wiring repair following a deployment.

However, the second connection method involves a wire harness takeout and connector insulator that are connected directly to the airbag or tensioner initiator or squib. These direct-connect type take outs and connector insulators **MUST** be repaired following an airbag or seat belt tensioner deployment using the approved Supplemental Restraint System Wiring Repairs procedure. (Refer to Service Manual Section 10 - Restraints - Standard Procedure).

AIRBAG SQUIB STATUS

Multistage airbags with multiple initiators (squibs) must be checked to determine that all squibs were used during the deployment event. The driver and passenger airbags in this vehicle are deployed by electrical signals generated by the Occupant Restraint Controller (ORC) through the driver or passenger squib 1 and squib 2 circuits to the two initiators in the airbag inflators. Typically, both initiators are used and all potentially hazardous chemicals are burned during an airbag deployment event. However, it is possible for only one initiator to be used; therefore, it is always necessary to confirm that both initiators have been used in order to avoid the improper handling or disposal of potentially live pyrotechnic or hazardous materials. The following procedure should be performed using a diagnostic scan tool to verify the status of both airbag squibs before either deployed airbag is removed from the vehicle for disposal.

CAUTION: Deployed front airbags having two initiators (squibs) in the airbag inflator may or may not have live pyrotechnic material within the inflator. Do not dispose of these airbags unless you are certain of complete deployment. Refer to the Hazardous Substance Control System for information regarding the potentially hazardous properties of the subject component and the proper safe handling procedures. Then dispose of all non-deployed and deployed airbags and seat belt tensioners in a manner consistent with state, provincial, local and federal regulations.

1. Be certain that the diagnostic scan tool contains the latest version of the proper diagnostic software. Connect the scan tool to the 16-way Data Link Connector (DLC). The DLC is located on the driver side lower edge of the instrument panel, outboard of the steering column.
2. Turn the ignition switch to the ON position.
3. Using the scan tool, read and record the active (current) Diagnostic Trouble Code (DTC) data.

Using the active DTC information, refer to the **Airbag Squib Status** table to determine the status of both driver and passenger airbag squibs.


AIRBAG SQUIB STATUS		
IF THE ACTIVE DTC IS:	CONDITIONS	SQUIB STATUS
Driver or Passenger Squib 1 open	AND the stored DTC minutes for both Driver or Passenger squibs are within 15 minutes of each other	Both Squib 1 and 2 were used.
Driver or Passenger Squib 2 open		
Driver or Passenger Squib 1 open	AND the stored DTC minutes for Driver or Passenger Squib 2 open is GREATER than the stored DTC minutes for Driver or Passenger Squib 1 by 15 minutes or more	Squib 1 was used; Squib 2 is live.
Driver or Passenger Squib 2 open		
Driver or Passenger Squib 1 open	AND the stored DTC minutes for Driver or Passenger Squib 1 open is GREATER than the stored DTC minutes for Driver or Passenger Squib 2 by 15 minutes or more	Squib 1 is live; Squib 2 was used.
Driver or Passenger Squib 2 open		

AIRBAG SQUIB STATUS		
IF THE ACTIVE DTC IS:	CONDITIONS	SQUIB STATUS
Driver or Passenger Squib 1 open	AND Driver or Passenger Squib 2 open is NOT an active code	Squib 1 was used; Squib 2 is live.
Driver or Passenger Squib 2 open	AND Driver or Passenger Squib 1 open is NOT an active code	Squib 1 is live; Squib 2 was used.

NOTE: If none of the Driver or Passenger Squib 1 or 2 open are active codes, the status of the airbag squibs is unknown. In this case the airbag should be handled and disposed of as if the squibs were both live.

CLEANUP PROCEDURE

Following a Supplemental Restraint System (SRS) component deployment, the vehicle interior will contain a powdery residue. This residue consists primarily of harmless particulate by-products of the small pyrotechnic charge that initiates the propellant used to deploy a SRS component. However, this residue may also contain traces of sodium hydroxide powder, a chemical by-product of the propellant material that is used to generate the inert gas that inflates the airbag. Since sodium hydroxide powder can irritate the skin, eyes, nose, or throat, be certain to wear safety glasses, rubber gloves, and a long-sleeved shirt during cleanup.

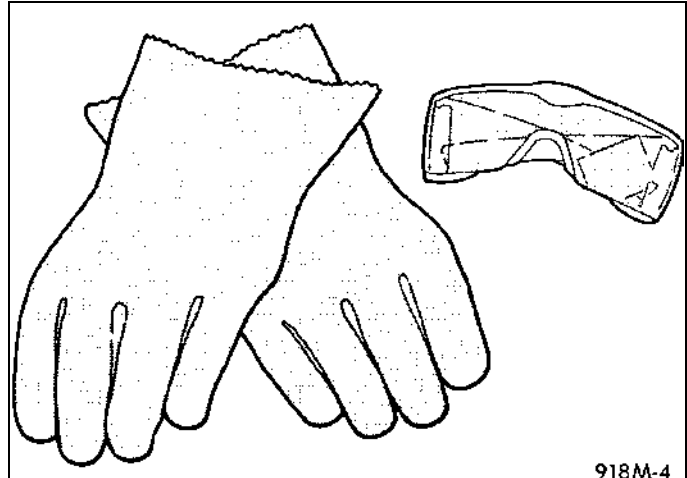


918M-4

WARNING: To avoid serious or fatal injury, if you experience skin irritation during cleanup, run cool water over the affected area. Also, if you experience irritation of the nose or throat, exit the vehicle for fresh air until the irritation ceases. If irritation continues, see a physician.

1. Begin the cleanup by using a vacuum cleaner to remove any residual powder from the vehicle interior. Clean from outside the vehicle and work your way inside, so that you avoid kneeling or sitting on a non-cleaned area.
2. Be certain to vacuum the heater and air conditioning outlets as well. Run the heater and air conditioner blower on the lowest speed setting and vacuum any powder expelled from the outlets.

CAUTION: Deployed front airbags having two initiators (squibs) in the airbag inflator may or may not have live pyrotechnic material within the inflator. Do not dispose of these airbags unless you are certain of complete deployment. Refer to the **AIRBAG SQUIB STATUS** heading within this information. All damaged, ineffective, or non-deployed Supplemental Restraint System (SRS) components which are replaced on vehicles are to be handled and disposed of properly.

If an airbag or seat belt tensioner unit is ineffective or damaged and non-deployed, refer to the Hazardous Substance Control System for information regarding the potentially hazardous properties of the subject component and the proper safe handling procedures. Then dispose of all non-deployed and deployed airbags and seat belt tensioners in a manner consistent with state, provincial, local and federal regulations.

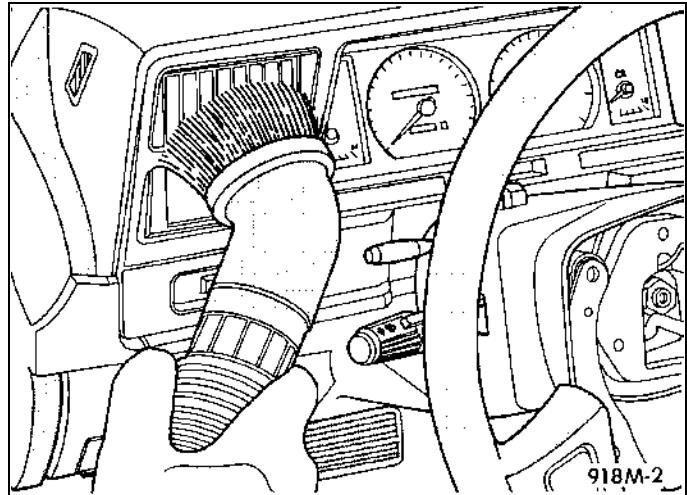

918M-2

3. Next, remove the deployed SRS components from the vehicle. Refer to the appropriate service removal procedures.
4. You may need to vacuum the interior of the vehicle a second time to recover all of the powder.

BASECOAT/CLEARCOAT FINISH

The original equipment paint finish is a multi step process that involves cleaning, applying electro de-position (E-coat), anti-chip primer, basecoat, and clearcoat steps.

CAUTION: Do not use abrasive chemicals, abrasive compounds or harsh alkaline based cleaning solvents on the painted surfaces of a vehicle. Failure to follow this caution can result in damage to vehicle finish.

On most vehicles a two-part paint application (basecoat/clearcoat) is used. Color paint that is applied to primer is called basecoat. A clear coat paint is then applied to protect the basecoat from ultraviolet light and to provide a durable high-gloss finish.

FINESSE SANDING, BUFFING, AND POLISHING

CAUTION: Do not remove more than 0.5 mils of clearcoat finish when sanding, hand buffing or polishing. Basecoat paint must retain clearcoat for durability.

CAUTION: If the finish has been finesse sanded in the past, it cannot be repeated. Failure to follow this caution can result in damage to vehicle finish.

NOTE: Finesse sanding should only be performed by a trained automotive paint technician.

Minor acid etching, orange peel, or smudging in a clearcoat or single-stage finish can be reduced with light finesse sanding, hand buffing and polishing. Use a Paint Thickness Gauge #PR-ETG-2X or equivalent to determine clearcoat or single-stage paint thickness before and after the repair.

PAINT TOUCH-UP

If the painted metal surface of a vehicle becomes scratched or chipped, it should be touched-up as soon as possible to avoid corrosion.

WARNING: Use an OSHA approved respirator and safety glasses when spraying paint or solvents. Failure to follow this warning may result in possible personal injury or death.

When repairing painted metal surfaces, for best results, use MOPAR® Scratch Filler/Primer, Touch-Up Paints and Clear Top Coat.

1. Scrape any loose paint and corrosion from inside the scratch or chip.

WARNING: Avoid prolonged skin contact with petroleum or alcohol-based cleaning solvents. Failure to follow this warning can result in possible personal injury or death.

2. Clean affected area with MOPAR® Tar/Road Oil Remover or equivalent, and allow to dry.
3. Fill the inside of the scratch or chip with a coat of filler/primer. Do not overlap primer onto good surface finish. The applicator brush should be wet enough to puddle-fill the scratch or chip without running. Do not stroke brush applicator on body surface. Allow the filler/primer to dry hard.
4. Cover the filler/primer with color touch-up paint. Do not overlap touch-up color onto the original color coat around the scratch or chip. Butt the new color to the original color, if possible. Do not stroke applicator brush on body surface. Allow touch-up paint to dry hard.
5. On vehicles with clearcoat, apply clear top coat to touch-up paint with the same technique as described in Step #4. Allow clear top coat to dry hard. If desired, the clearcoat can be lightly finesse sanded (1500 grit) and polished with rubbing compound.

RIVET NUT PROCEDURE

CAUTION: Failure to follow these recommendations could result in damage to the vehicle

Rivet nuts are used on the roof to mount the roof rack. Rivet nuts are used for parts installations, when access to the back mounting area is limited or boxed in. It is important to achieve a full seat on the first attempt due to the lack of accessibility on the back side of the rivet nut. Poor seating of the rivet nut will result in part failure, loose parts and possible water leaks.

The use of a commercially available threaded insert tool will be necessary. There are several styles and types readily available. Examples of multi fit choices are the Matco® 203F and the Snap On® HP650M, or you may select one with equivalent capabilities. If a multi fit option is not chosen, it must be capable of a thread size of **M6×1.00**. Follow the tool manufacturer recommended directions for proper installation.

NON-STRUCTURAL SHEET METAL REPAIR

Safety Notice

CAUTION: All Service and rebuilding instructions contained herein are applicable to, and for the convenience of, the automotive repair industry only.

Proper service and repair is important to the safe, reliable operation of all motor vehicles. The service procedures recommended and described in this publication were developed for professional service personnel, and are effective methods for performing vehicle repair. Following these procedures will help ensure efficient and economical vehicle performance and service reliability. Some service procedures require the use of special tools designed for specific procedures. These special tools should be used as recommended throughout this publication.

It is important to note this publication contains various **Cautions** and **Warnings**. These should be read carefully in order to minimize risk of personal injury or the possibility that improper service may damage the vehicle or render it unsafe. It is important to note that these cautions and warnings cover only the situations and procedures Chrysler Group LLC. has encountered and recommended. Chrysler Group LLC. cannot possibly know, evaluate, and advise the service trade of all conceivable ways in which service may be performed, or the possible hazards of each. Consequently, Chrysler has not undertaken any broad service review. Accordingly, anyone that uses a service procedure or tool that is not recommended in this publication must be certain that neither personal safety, nor vehicle safety will be jeopardized by the service methods they select.

Safety Precautions

WARNING: Always wear an approved respirator, as well as skin and eye protection per adhesive manufacturer recommendations as stated in the product MSDS (Material Safety Data Sheets)

Adhesives:

- MSDS must be available and understood before adhesives are handled.
- All personnel should be instructed on the proper procedures to prevent skin contact with solvents, curing agents, and uncured base adhesives, which could cause allergic reactions or sensitization.

Types of Structural Adhesives

Overview: There are three basic chemistries used in the collision repair industry. The types of adhesives used include Acrylic, Epoxy and Urethane. To achieve optimal results, it is best to use the chemistry that bonds best to the substrate being repaired, is easiest to use and offers the most permanent, non-detectable repair at the most economical repair cost. All three chemistries have their strengths and weaknesses.

NOTE: Structural adhesives that meet Chrysler Group LLC's approved replacement materials specifications include - Mopar #05083855AA, Fusor 112B and 3M 08116

Adhesive Types:

- **Acrylic Adhesives** - Bond all types of bare metals and are excellent for cross bonding aluminum to steel. They have good NVH (Noise Vibration Harshness) properties and some offer anti-corrosion properties, so primers on bare metals are not necessary. Most acrylics have a fast room temperature cure, and are stable with regards to temperature and moisture during cure. However, both of these can effect shelf life. Mix ratio is modestly important although the performance properties can vary with a change in mix ratio. Acrylics are the most forgiving of the three chemistries with regards to mix ratio accuracy.
- **Epoxy Adhesives** - Bond well to ridged and semi ridged plastics and are generally easy to sand and feather edge. Some may be too ridged for flexible substrates and they often require primers on bare metal applications. Epoxies can be heat cured to increase strength and accelerate the curing process. They have a long and stable shelf life. The mix ratio can vary by $\pm 50\%$ and still cure. However, the performance properties will vary when the mix ratio is incorrect. Epoxies are more forgiving than urethanes with regards to mix ratio accuracy.
- **Urethane Adhesive** - Typically flexible and bond well to plastics. However, they usually require primers on metal surfaces to protect against corrosion. Urethanes have good seam sealing and NVH qualities and are frequently the optimal choice for seam sealers. They are sensitive to moisture during cure, packaging and storage. Single component urethanes usually have a much shorter shelf life than two component urethanes. Mix ratios are critical for urethanes. In most cases it cannot vary more than $\pm 5\%$. Therefore, hand mixing is not recommended. Urethanes are the most unforgiving of the three chemistries with regards to mix ratio accuracy.

JOINT AND REPAIR TYPES	REFERENCE
Backer Panel Joint	Backer Panel Joint

JOINT AND REPAIR TYPES	REFERENCE
Door Skin	Door Skin Replacement
Body Side Aperture / Quarter Panel	Side Aperture / Quarter Panel
Metal Fatigue/Stress Cracks	Metal Fatigue/Stress Crack

Backer Panel Joint

Overview: Backer panel procedures may be used to achieve a smooth joint between panel sections. The backer panel works well in areas where there is not enough room to smooth or feather in an overlap joint. The backer panel joint is a common repair for rocker panels, quarter panels and body side apertures.

NOTE: OEM panel replacement such as a quarter panel, side aperture and rocker panel will always require the weld bonding procedure at the pinch weld flange area(s).

Preparation:

NOTE: Be certain vehicle is evenly supported at normal suspension points.

1. Restore structural dimensions as well as all related mating flanges.

NOTE: It will be difficult to abrade the underside mating surface of the original panel, however this is an important step and should be done effectively.

2. Create a 50mm. (2in.) backer panel out of an unused portion of original or new sheetmetal panel, whichever contains the appropriate shape. Be certain it has a precise fit to the back of the panels it will join.
3. All paint, primer, adhesive and any other corrosion protective coatings must be removed from the mating surfaces as well as the backer panels themselves, prior to application of adhesive. Grind a 25mm. (1in.) contact area on all panels where backer panel bonding will take place. The metal should be completely bare and shiny in appearance, if the metal appears pewter in color all of the galvanized coating has not been removed.
4. Pre-fit the backer panel to the panel(s) being joined, to ensure proper fit. If screws will be used to hold the panels in place during curing, dry fit them now to be certain of proper fit later. There should be a 0.8 - 1.6mm. (1/32 - 1/16in.) gap between the two outer panels, no gap on backer panels.
5. Without a mixing tip attached, purge a small amount of structural adhesive from the cartridge. This will ensure an even flow of both components.
6. Attach a mixing tip and dispense a mixing tube's length of adhesive from the cartridge.

Application:

NOTE: Refer to the structural adhesives manufacturer for information on work, handling and curing times.

7. Apply a 10 - 13mm. (3/8 - 1/2in.) bead of structural adhesive to the bare metal mating surfaces of the backer panels. Evenly apply the adhesive over the complete bonding surface. Apply a 10 - 13mm. (3/8 - 1/2 in.) bead of structural adhesive to bare metal mating surfaces. Use a body filler applicator to level the adhesive, making sure to cover all bare metal to protect against corrosion.
8. Position the new backer panel(s), making sure not to separate after contact. Lifting will create air bubbles and weaken the bond. **Adjustments must be made by sliding, not lifting the panel(s).**
9. Clamp tightly and evenly. Adhesive has glass beads that will prevent complete squeeze out. Install screws to the "hard to clamp areas".
10. Remove excess adhesive from all joints prior to adhesive cure.
11. Allow adhesive to cure, per manufacturer recommendations. When fully cured, expect the adhesive to be a little tacky, as this is a normal characteristic of the adhesive.
12. Remove clamps and screws.
13. Repeat procedure for installation of new panel.
14. Remove any remaining adhesive with a grinder or abrasive disc. All adhesive must be removed from the cosmetic repair area to ensure proper adhesion of further repair and refinish materials.
15. Bevel the center of the screw holes and apply fiber-reinforced waterproof body filler to the screw holes and section seam. When cured, sand and apply conventional body filler and block sand as necessary. Prime and paint per paint manufacturer recommendations.
16. Apply inner panel corrosion inhibiting materials (Mopar Cavity Wax part #6804292970 or equivalent).

Door Skin Replacement

Overview: Depending on the type of door to be repaired, a full skin or a belt cut will be required. Belt cut replacement is necessary when a door with a full skin, around the window opening, has an angle that makes it difficult to get tools into to do a quality hem flange installation. A butt-joint is used at this seam.

Preparation:

1. Belt cut skins will require determining and cutting of the sectioning locations on the original panel and on the replacement panel.
2. Remove the door skin by grinding the outer edge (C) until the seam is perforated.
3. Cut around weld nuggets and spot welds with a spot weld cutting bit or similar weld removal tool.
4. If panel is attached with adhesive you may use heat, from a **non-flame** heat source, up to 204°C. (400°F). This will aid in loosening the bond.
5. With an air chisel and a flat bladed bit, remove outer skin and any remaining hem flange.
6. Grind any remaining weld nuggets flush with door frame, and remove all adhesive, paint, E-coating and corrosion protective coatings from the area where the **structural adhesive** will be applied, and where the "butt-joint" is to take place. The metal should be completely bare and shiny in appearance, if the metal appears pewter in color all of the galvanized coating has not been removed.
7. Straighten door flange and any remaining damage on door shell using the hammer and dolly method.
8. The area of the new door skin that will make contact with the door shell will need to be scuffed with a coarse abrasive pad or ground with a 50 grit grinding disc. This will vary upon adhesive manufacturers, be certain to check adhesive manufacturer recommendations.
9. Dry fit the new panel. Determine where to place clamps to hold the panel in place, as necessary.

CAUTION: Be certain the fit is good from the skin to door and door to door opening. Cured adhesive is extremely strong and will not allow for "adjustments".

10. Without a mixing tip attached, purge a small amount of structural adhesive from the cartridge. This will ensure an even flow of both components.
11. Attach a mixing tip and dispense a mixing tube's length of adhesive from the cartridge.

NOTE: Refer to the structural adhesives manufacturer for information on work, handling and curing times.

Installation:

NOTE: Do not apply adhesive within 25mm. (1in.) of the belt cut location.

12. Apply a 10 - 13mm. (3/8 - 1/2 in.) bead of structural adhesive to bare metal mating surfaces. Use a body filler applicator to level the adhesive, making sure to cover all bare metal to protect against corrosion.

NOTE: When applying adhesives be certain any and all drain holes remain open and clear of obstructions.

13. Apply a second bead of adhesive to ensure proper bead thickness.
14. Position the new panel. If repositioning is necessary slide the panel, do not lift or separate panels. **Adjustments must be made by sliding, not lifting the panel(s).** Apply clamps to hold panel in position, as necessary.

NOTE: There are many tools readily available to aid in the hem flange folding process.

15. Roll the hem flange over. Remove excess adhesive. This will save time, as compared to waiting until cured.
16. Re-check door gap and flushness to the vehicle opening and adjust as necessary.

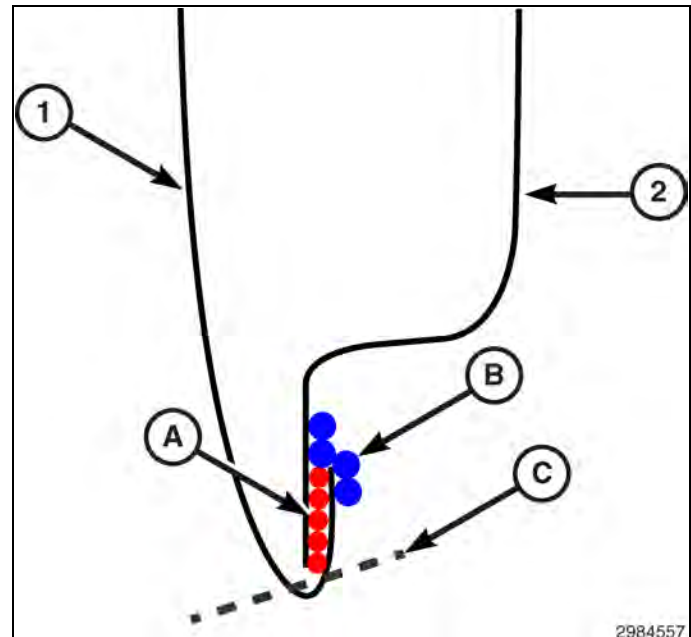


Fig. 9 Door Skin

NOTE: Drain holes must remain clear of obstructions from adhesives and sealers.

1 - DOOR SKIN (OUTER)

2 - DOOR SHELL (INNER)

A - STRUCTURAL ADHESIVE

B - SEAM SEALER

C - HEM FLANGE CUT LINE (BOTTOM EDGE SHOWN, SURROUNDING EDGES TYPICAL)

17. Allow the adhesive to cure per manufacturer recommendations. When fully cured, expect the adhesive to be a little tacky, as this is a normal characteristic of the adhesive. Remove clamps, if used.
18. Remove any excess cured adhesive with a grinder or abrasive disc. All adhesive must be removed from the cosmetic repair area to ensure proper adhesion of repair and refinish materials.
19. Weld the butt-joint with GMAW (Gas Metal Arc Welding), if a belt cut was used. Clean and dress welds accordingly.
20. Apply fiber-reinforced waterproof body filler to the section seam, as necessary. When cured sand and apply conventional body filler and block sand.
21. Apply an epoxy or anti-corrosion primer. When cured, lightly scuff.
22. Seam seal the entire door. Duplicate the factory seam sealer. Apply a discrete bead around the rest of the door to seal and protect, maintaining the original appearance.
23. Prime and paint per paint manufacturers recommendations.
24. Apply inner panel corrosion inhibiting materials (Mopar Cavity Wax part #68042970AA , or equivalent).

Side Aperture / Quarter Panel

Overview: Chrysler's recommended repair procedure for body side aperture / quarter panel replacement include butt joints using backer panels with structural adhesive at the sectioning joint, or a welded backer panel with a welded butt joint using GMAW (Gas Metal Arc Welding). Resistance spot welding with structural adhesive, referred to as weld bonding, should be used at all pinch welds and may be used at the drain trough and tail panel areas as well. With the exception of the sectioning joint, the rule to follow is "Re-assemble as it was built from the OEM". For further information on Weld / Weld Bonding, (Refer to Collision Information - Standard Procedure)GMAW (plug or puddle) welds may be used in place of STRSW (Squeeze Type Resistance Spot Welding) only in areas that specifically use spot welds and in areas that access limitations will not allow STRSW. GMAW cannot be used in the weld bonding process. Never weld with GMAW within 25mm. (1in.) of any area where structural adhesive is used. The weld "heat zone" will destroy the properties of the adhesive.

Vehicle design will determine if the sectioning location is to be in the pillar or the roof line area .For locations and warnings that may apply to body side aperture / quarter panel sectioning locations reference Sectioning Procedures,(Refer to Collision Information - Standard Procedure)

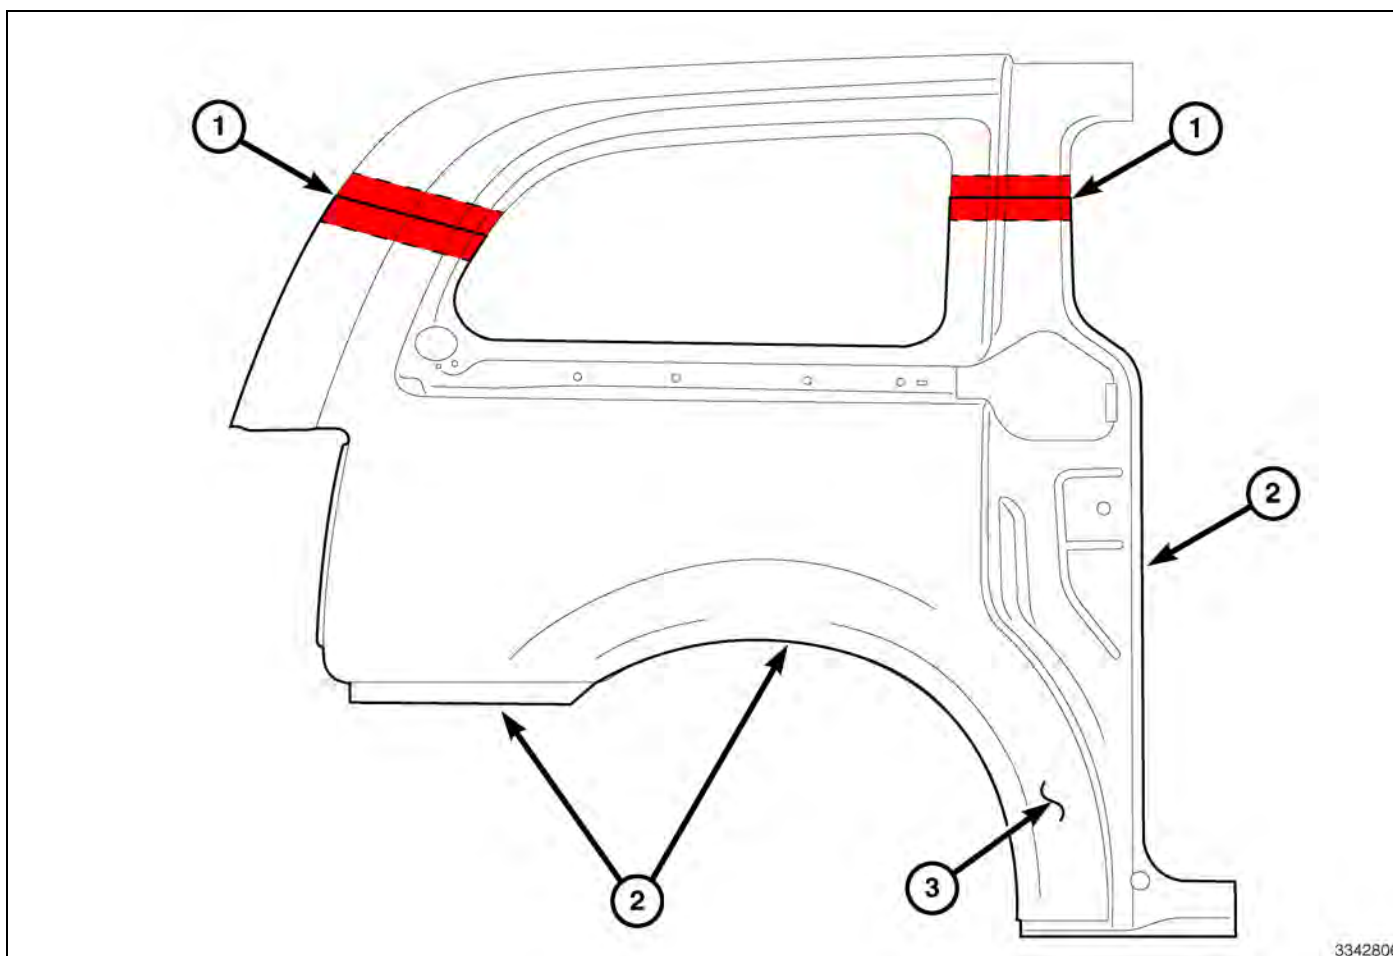


Fig. 10 Rear Aperture

- 1 - SECTION JOINT WITH BACKER PANEL
- 2 - WELD BONDING (AREAS WHERE ACCESSIBLE)
- 3 - REAR BODY SIDE APERTURE

Preparation:

NOTE: Be certain vehicle is evenly supported at normal suspension points.

1. Restore structural dimensions as well as all related mating flanges.
2. Once sectioning locations have been established, cut original and replacement panels at the pre-determined locations. Remove spot welds within sectioned parameter.

NOTE: Be careful not to destroy any areas that may be able to be used as backer panels.

3. If panel is attached with adhesive, you may use heat, from a **non-flame** heat source, up to 204°C. (400F°). This will aid in loosening the bond.
4. Use an air chisel with a flat bladed bit to remove original panel.
5. Using a hammer and dolly, restore any and all damage to mating surfaces.
6. Create backer panels to be used at butt joints. Refer to Backer Panel Joint

NOTE: It will be difficult to abrade the underside mating surface of the original panel, where backer panel is to be used, however this is important step and should be done effectively.

7. Grind all mating surfaces with a 50 grit grinding disk. Remove all adhesive, sealers, paint, E-coating and corrosion protective coatings from the area where the structural adhesive and welds will be applied. The metal should be completely bare and shiny in appearance, if the metal appears pewter in color all of the galvanized coating has not been removed.
8. Pre-drill any GMAW plug / puddle weld holes that may be necessary, with a 8mm. (5/16in.) hole.

9. With the aid of an assistant, dry fit the panel. Apply clamps to hold panel in place, making note of locations. Install screws where accessibility prohibits the use of clamps. This will aid in proper alignment during installation.
10. Without a mixing tip installed, purge a small amount of structural adhesive from the cartridge. This will ensure an even flow of both components.
11. Attach a mixing tip and dispense a mixing tube's length of adhesive from the cartridge.

NOTE: Using scrap metal and adhesive, make test coupon samples and perform peel test to ensure your STRSW equipment is ready to apply welds as required. The Weld/Weld Bonding section will provide further information on peel testing and equipment set-up,(Refer to Collision Information - Standard Procedure)

NOTE: Refer to the structural adhesives manufacturer for information on work, handling and curing times.

Installation:

12. Install backer panels, refer to Backer Panel Joint
13. Apply 10 - 13mm. (3/8 - 1/2in.) bead of structural adhesive to the area where the two panels are to be bonded and weld bonded. **Do not apply to areas that will only be STRSW or GMAW welded.**
14. Smooth the adhesive with a body filler spreader or equivalent, to cover all bare metal surfaces. Apply a second bead of adhesive to ensure proper adhesive thickness.
15. With the aid of an assistant place the panel to the vehicle. If the panel needs to be adjusted, slide the panel.

NOTE: Adjustments must be made by sliding, not lifting the panel(s). Lifting will cause air bubbles and weaken the bond.

16. Install clamps and screws to locations determined during the dry fit process.
17. Remove all squeeze out of adhesive, prior to curing.

NOTE: Structural adhesive manufacturers will vary on time allowed for completion of STRSW in weld bond zones. Check and follow adhesive manufacturer recommendations.

18. Apply STRSW to weld bond area immediately.
19. Once fully cured, remove clamps and screws. When fully cured, expect adhesive to remain a little tacky, as this is a normal characteristic of the adhesive.
20. Complete STRSW and / or GMAW (plug / puddle) welds.
21. Finish / Dress the welds as necessary. If screws were necessary bevel the screw holes. Prepare the joint and screw holes by grinding the area with 50 grit grinding disc. Get in seams as best as possible without thinning the metal.
22. Remove any excess cured adhesive with a grinder or abrasive disc. All adhesive must be removed from the cosmetic repair area to ensure proper adhesion of repair and refinish materials.
23. Apply fiber-reinforced waterproof body filler to screw holes and joint. Complete the repair using conventional body filler, and block sanding.
24. Apply an epoxy or anti-corrosion primer. When cured, lightly scuff and then apply seam sealer as necessary.
25. Prime and paint per paint manufacturer recommendations.
26. Apply inner panel corrosion inhibiting materials (Mopar Cavity Wax part #68042970AA, or equivalent).

Metal Fatigue/Stress Crack

Overview: On rare occasions you may encounter metal fatigue, also referred to as stress cracks. This will appear as a crack starting at an edge and trailing away. Follow these steps for a proper repair:

1. Locate the trailing end of the crack and drill a 3mm. (1/8in.) hole at the very point at which it stops. This is referred to as "Stop Drilling".
2. Remove all contaminants and coatings including primer, paint and anti-corrosion, from the repair area. Surface should be clean and shiny (if pewter in color then anti-corrosion has not been removed).
3. Stitch weld the seam/crack closed using GMAW. Follow welding guidelines as found in Weld/Weld Bonding,(Refer to Collision Information - Standard Procedure)
4. Dress the welds as necessary. **Careful not to thin the base metal.**
5. Depending on the location and visibility of the repair surface refinishing will vary from body filler, finishing and painting to simply applying an epoxy or anticorrosion primer and rubberized undercoating, Mopar part #05093417AA or equivalent.
6. Apply inner panel corrosion inhibiting materials (Mopar Cavity Wax part #68042970AA , or equivalent).

WELDING AND WELD BONDING

Safety Notice

CAUTION: All Service and rebuilding instructions contained herein are applicable to, and for the convenience of, the automotive repair industry only.

The service procedures recommended and described in this publication were developed for professional service personnel, and are effective methods for performing vehicle repair.

It is important to note this publication contains various **Cautions** and **Warnings**. These should be read carefully in order to minimize risk of personal injury or the possibility that improper service may damage the vehicle or render it unsafe. Chrysler Group LLC. cannot possibly know, evaluate, and advise the service trade of all conceivable ways in which service may be performed, or the possible hazards of each. Consequently, Chrysler has not undertaken any broad service review. Accordingly, anyone that uses a service procedure or tool that is not recommended in this publication must be certain that neither personal safety, nor vehicle safety will be jeopardized by the service methods they select.

Safety Precautions

WARNING:

- When Welding and/or working with Adhesives always wear safety goggles and gloves to prevent contact with chemicals and to prevent weld spatter, sparks, and sharp metal from causing bodily injury.
- Wear an approved respirator while welding and during the application of adhesives to prevent inhalation of harmful vapors.
- Always remove NVH (Noise Vibration and Harshness) foam from welding repair area, as material is flammable.

WARNING: Failure to follow these instructions may result in possible serious or fatal injury

Welding

- Comply with all federal, state and local regulations to avoid any injuries due to shock, fires, fumes, sparks and liquids.
- All flammable materials or liquid should be stored in tightly sealed and labeled containers, and used only in well ventilated areas.
- No spark producing equipment should be permitted in any area where flammable materials are being handled or stored.

Adhesives:

- Material Safety Data Sheets (MSDS) must be available and understood before adhesives are handled.
- All personnel should be instructed on the proper procedures to prevent skin contact with solvents, curing agents, and uncured base adhesives, which could cause allergic reactions or sensitization.

Introduction

The purpose of this document is to clearly explain the welding options available to the collision repair technician and how to determine that welding repairs are made properly. The primary types of welding covered in this section are STRSW (Squeeze Type Resistant Spot Welding), GMAW (Gas Metal Arc Welding) and Weld Bonding (a combination of STRSW and structural adhesive). Proper training and weld testing are required to ensure that a safe, high quality, vehicle repair is made.

INDEX	REFERENCE
Panel Removal	Panel Removal
Key Points of a Welding Repair	Key Points of a Welding Repair:
Modified Lap Joint	Modified Lap Joint
Requirements of a Welding Repair	Requirements of a Welding Repair
Types of Welding (STRSW, GMAW and Weld Bonding)	Types of Welding
Weld Process (STRSW, GMAW and Weld Bonding)	Weld Processes:
Minimum Weld Nugget Requirement Chart	Minimum Weld Nugget Requirement Chart
Training and Qualification	Training and Qualification

Panel Removal

WARNING: Always Wear Safety Goggles, Work Gloves, Hearing Protection and a Dust Mask when removing welded panels this way. Failure to follow these instructions could result in serious or fatal injury.

When removing panels and components for replacement, care must be taken not to damage the underlying component. On welded and "Weld Bonded" panels spot welds must be removed using a spot weld cutting type tool, or equivalent. On panels that are adhesive bonded or weld bonded it is acceptable to use heat up to **204°C. (400°F.)**, from a **Non-Open Flame** heat source. This will loosen the bond, so less damage is inflicted to the mating surface. After panel is removed, any remaining weld nugget should be ground smooth. Cut-off wheels should not be used, as there is potential to remove material from the base material which would weaken the final repair. Place an air hammer with a flat bladed chisel bit (or equivalent) in between panels and remove the panel. Care should be taken as to not damage mating flanges and the surrounding components.

Key Points of a Welding Repair:

- Poor fit up will adversely affect weld quality and may result in a weld failure due to excessive metal stretching around the nugget.
- Clamps should be used to bring parts together and hold them in position.
- Clamps should be insulated when using STRSW to control weld current shunting (This can be accomplished with specialized clamps or by placing an insulating material such as cardboard between the clamp jaws and the panels.)
- Number, size and location of welds should closely duplicate the original assembly. Placement of the new weld should NOT be within a 6mm. (0.25in.) of where the original weld was located. Placement of a new weld over an original weld location may lead to metal fatigue or poor weld quality.
- Surface of the steel parts should be clean and free of scale, rust, paint, cured adhesives/sealers and any other contaminants that could adversely affect the quality of the weld joint. This includes the removal of any E-coat applied to the service part within 25mm. (1in.) of any welds. (Proper corrosion protection must be installed when repairs are complete.)
- If the joint originally had adhesive, all E-coat must be removed where the adhesive is to be reapplied.
- "Weld-thru" primers are not recommended anywhere STRSW or GMAW are used.
- Do not remove base material from the base panel when releasing welds.

NOTE: Chrysler Group LLC recommends the same quantity of welds as the original panel, but placement of the new weld should NOT be within a 6mm. (0.25in.) of where the original welds were located. Placement of a new weld over an original weld location may lead to metal fatigue or poor weld quality.

Requirements of a Welding Repair

The number one requirement of any welding repair is to restore the vehicle to its OEM condition. Materials and technologies should duplicate original OEM conditions as much as possible. To meet this requirement, the technician must ensure the following:

- Panel layering (shingling) is the same as original
- Part fit up is correct
- Equivalent sealers and/or adhesives are utilized
- Welds are replaced in the same size, quantity and location
- "Weld-thru" primers are NOT recommended
- Structural adhesives and sealers must be replaced where they were located

A significant amount of structural adhesive is used at the OEM to improve joint strength. It may be difficult to determine if the material between the panels is an adhesive or a sealer, and for this reason, the following guideline should be used: **If in doubt, use a two-component, corrosion inhibiting, structural adhesive.** GMAW welding is not recommended within 25mm. (1in.) of the adhesive as it creates heat that will destroy the adhesive. STRSW on the other hand, can weld through the adhesive and will not destroy its properties.

NOTE: Structural adhesives that meet Chrysler materials recommendations for adhesive strength and corrosion protection qualities include Mopar #05083855AA, Lord Fusor #112B and 3M #08816

Modified Lap Joint

NOTE: Parts shown for example purposes only. Emphasis is on joint design and proper plug weld placement

The repair joint is a combination lap-joint (1) and butt-joints (2) – the panels are lapped in the flat areas and butted in contoured locations and at weld flanges. The graphic better illustrates this process.


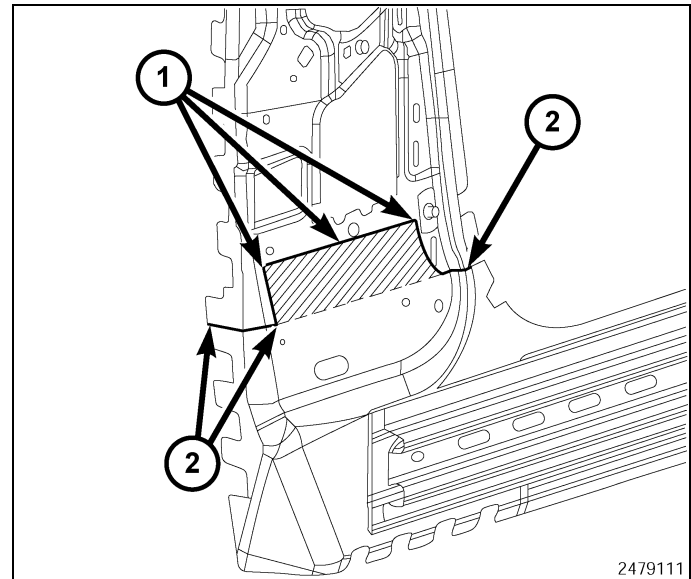


Fig. 11 Modified Lap Joint

1 - LAP-JOINT WELDS

2 - BUTT-JOINT WELDS

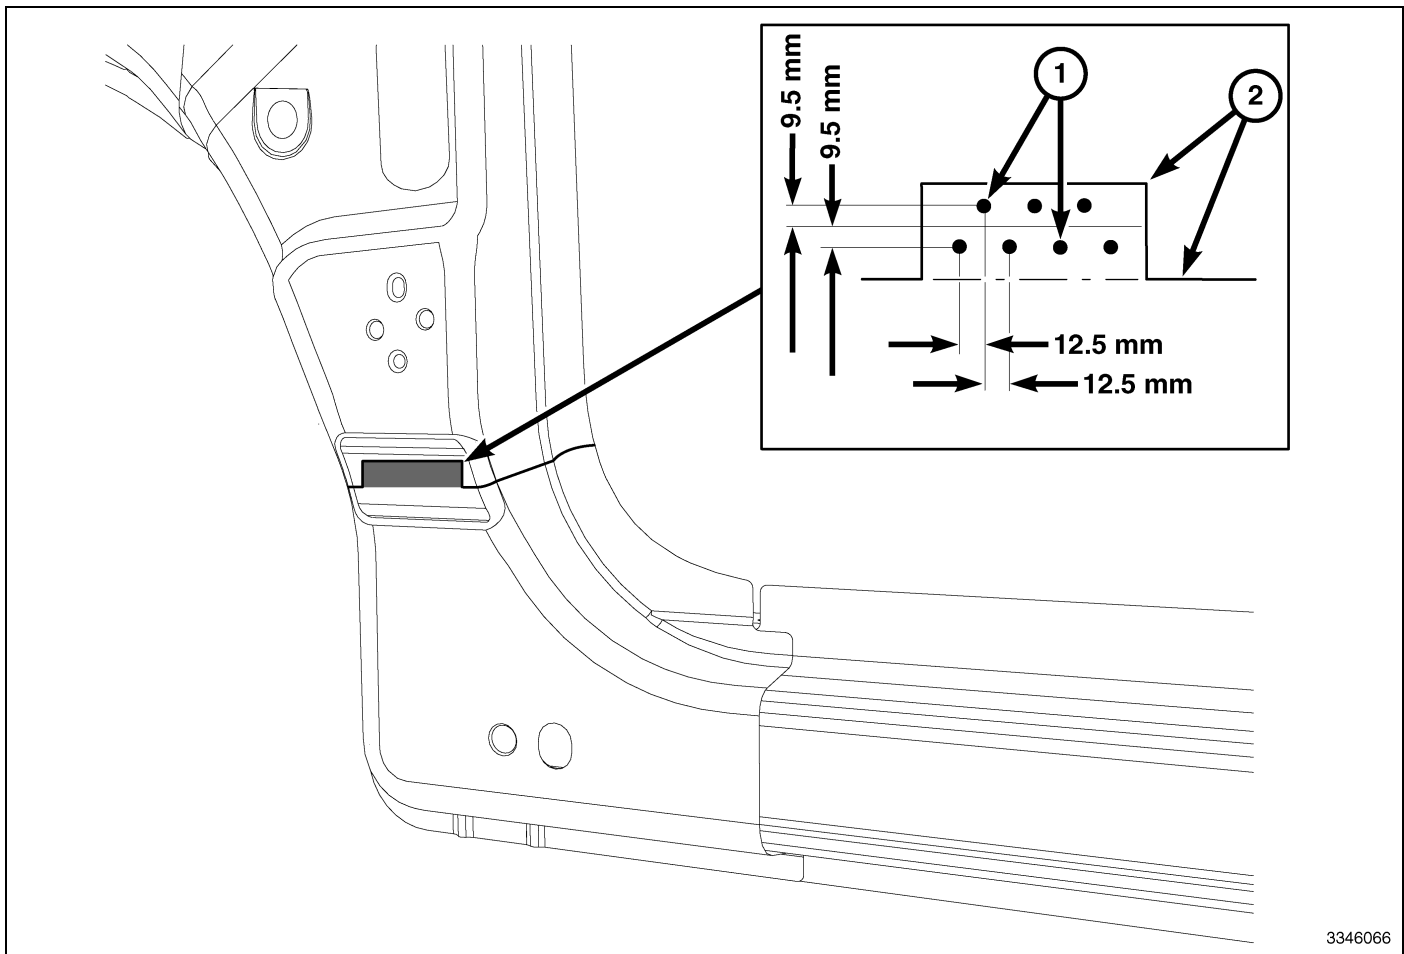

Plug Weld Layout

1 - MIG PLUG WELDS

2 - MIG SEAM WELD

The MIG plug welds, or "puddle welds" should be made after drilling 8 mm (5/16 in) holes and should be staggered 12.5 mm (0.5 in) apart following the centerline of the lap and should be alternating above and below the centerline 9.5 mm (3/8 in.).

In the lap-jointed area, staggered MIG plug welds (1) are used to augment the joint and **all edges** of the lapped panel seam (2) should be **completely** welded.

Types of Welding

STRSW (Squeeze Type Resistant Spot Welding)

- STRSW relies on the resistance of the material being welded to create heat as a current is passed through. The materials being welded are squeezed together, and as current passes through, resistance causes heat buildup. The force of the tips and the heat from the current allow the materials to fuse together. The current is removed and the force from the welding tips is held during a cool down cycle. When the cool down cycle is complete, the pressure is released and the next weld is positioned.
- Learning how to create weld coupons, refer to (Fig. 12) and then performing a destructive test using these coupons, is the key to successfully using STRSW. Chrysler Group LLC requires a physical test using test coupons and the methods outlined in this document to test welds prior to making repairs.
- Tip condition is very important for producing proper welds. Inspect tips often and either dress or change per equipment manufacturer recommendations.
- High-quality welding equipment must be used or welds may be inadequate. Also, the equipment must be able to produce repeatable welds from the beginning of the repair to the end.

GMAW (Gas Metal Arc Welding or "MIG")

- GMAW is an arc welding process where the electrode wire is fed through a weld gun and is surrounded by a shielding gas. The term MIG comes from early uses on aluminum where argon was used as shielding gas and the process was referred to as Metal Inert Gas welding. The GMAW process is currently the most common in the uni-body repair environment.

Weld Bonding

- A method of joining metals using STRSW in conjunction/combination with a structural adhesive.
- Weld bonding provides the customer with a superior repair as compared to the traditional plug/puddle welding process using GMAW. Structural adhesive should not be used in a joint that did not originally contain it.
- The repair joint or seam should duplicate the OE build as closely as possible, unless otherwise stated by vehicle manufacturer.

NOTE: Chrysler Group LLC. DOES NOT approve or endorse the use of structural adhesives alone in the replacement of body panels.

Weld Processes:

STRSW (Squeeze Type Resistance Spot Welding)

Applications

- With advancements in equipment technologies, STRSW is not restricted to light gauge sheet metal any longer. Heavier gauges of high strength and coated steel, currently used in vehicle structures, can now be welded in the field, providing destructive testing is performed on each combination. This is to ensure quality welds are being maintained.

Equipment Requirements

- Equipment must produce two sided welds
- Equipment must have been tested to SAE J2667 with satisfactory results obtained
- Equipment must have the capability to create welds that comply with the Minimum Weld Nugget Requirement Chart
- Technician must have the appropriate sheet metal measuring equipment to ensure their welds meet the minimum weld nugget size for the actual panels being welded

Minimum Weld Nugget Requirement Chart

*Governing Metal Thickness (GMT)	**Minimum Weld Nugget Diameter
0.64mm. - 0.79mm.	3.5mm.
0.8mm. - 0.99mm.	4.0mm.
1.0mm. - 1.29mm.	4.5mm.
1.3mm. - 1.59mm.	5.0mm.
1.6mm. - 1.89mm.	5.5mm.
1.9mm. - 2.29mm.	6.0mm.
2.3mm. - 2.69mm.	6.5mm.
2.7mm. - 3.04mm.	7.0mm.

*Governing Metal Thickness (GMT) = The minimum weld nugget for two thickness welds shall be based on the thinner of the two sheets being welded. The minimum weld nugget diameter for three thickness welds shall be based on the middle gauge of the three panels being welded (not necessarily the middle panel).

**Minimum nugget diameter should be measured with a venire caliper. If the weld is not round, measure the major and minor diameter and average.

Equipment Limitations

- Each brand/model is limited to material capacity that can be welded
- The facility power supply can also impact equipment performance

Access Limitations

- Due to the existing structure of the vehicle being repaired, each weld must be evaluated for feasibility. Due to power limitations of the equipment, tongs that are long and deep enough for certain welds may not be available, and the weld will need to be made by another method.

Preparation

CAUTION: All NVH foam must be removed from the repair area of the vehicle, as material is flammable.

- Prior to making repairs with STRSW, weld coupons must be created for testing. The test joint must be an exact duplicate of the original joint, including layering and adhesive application. The testing is required to ensure the repair restores the vehicle to its originally produced condition using the minimum weld nugget requirement chart.
- To correctly identify the material being welded or tested, the technician must possess an accurate material thickness gauge
- No "improvements" to the vehicle design are allowed as this could have a negative impact on the vehicle as a whole. The repair should mirror what was used on the vehicle at the assembly plant.
- Note, the weld is affected by more than just the thickness or number of panels being welded, but also material coatings. Zinc based anti-corrosion coatings (i.e., galvannealing, galvanizing), sealers, adhesives, and E-coat will affect welder performance. Any sandwich type coatings will increase weld time (and current in some types of STRSW welders) required to accomplish an acceptable weld nugget.
- When preparing an E-coated panel for STRSW the E-coat must be removed from both of the mating flanges within 25mm. (1in.) of any flange. Corrosion protection is required anytime you remove E-coat. A scuffing disc should be used to remove the E-coat without damaging other sheet metal coatings
- If the panel originally had structural adhesives it should be reapplied prior to welding. The adhesive should have a corrosion inhibitor and cover all bare metal.
- Prior to creating weld coupons and the final body repairs, all coatings and dirt/road debris must be removed.

Testing

- Weld coupons identical to the repair situation need to be made prior to performing any repair. These coupons must be tested (peel test) to determine if the weld nugget meets the minimum size outlined above in the Minimum Weld Nugget Requirement Chart. Keep in mind that different material coatings, coating thickness, material thickness, and joint configurations have a direct impact on nugget size.

GMAW (Gas Metal Arc Welding or "MIG")

Applications

- Sheet metal repairs where STRSW is not available or practical, and truck frame repairs.
- The most common usage of GMAW on uncoated or galvanneal coated steel will utilize a 75% Argon - 25% CO2 shielding gas mix, and AWS specification ER70S6 wire. When welding galvanized material, Flux Core Arc Welding (FCAW) using AWS specification E71T-GS wire should be used to avoid weld porosity from the zinc in the galvanizing.

Weld Process

COMPONENT PARTS	TRUCK FRAME		BODY SHELL EXTERIOR & UNDERBODY PANELS			
	Zinc and Zinc Iron Alloy coated sheet steels					
WELDING PROCESS	GAS METAL ARC (Note: 1)	FLUX CORED ARC	GAS METAL ARC (Note: 1)	MIG BRAZE (Note: 2)	GAS METAL ARC (Note: 1)	FLUX CORED ARC
Material Type	High Strength and Structural Quality Steels which includes HSLA, Marten- sitic, and Dual Phase materials					
Material Thickness Range	2 mm - 4 mm		0.6 mm - 1.02 mm		>1.02 mm - 3.0 mm	
ELECTRODE TYPE (AWS SPEC. A5.18)	AWS CLASS. ER70S-6	AWS CLASS. E71T-11 (Note 3)	AWS CLASS. ER70S-6	AWS CLASS. ERCuSi - A Silicon Bronze	AWS CLASS. ER70S-6	AWS CLASS. E71T-11 (Note 3)
ELECTRODE SIZE	0.035	0.045	0.023 - 0.025	0.035	0.035	0.045
ELECTRODE MAKER	Lincoln®	Lincoln® NR-211-MP	Lincoln®		Lincoln®	Lincoln® NR-211-MP

Weld Process, continued

COMPONENT PARTS	TRUCK FRAME		BODY SHELL EXTERIOR & UNDERBODY PANELS			
WIRE FEED SPEED (in/min)	245-250 Vertical Down 70-90 Flat & Horizontal	110 Vertical Down 70-90 Flat & Horizontal	95-115 All Welds	150-155 Flat & Horizontal	245-250 Vertical Down 70-90 Flat & Horizontal	110 Vertical Down 70-90 Flat & Horizontal
TRAVEL SPEED (in/min)			10			
VOLTAGE	19-20	15-18	16-19	18-19	19-20	15-18
POLARITY	DCEP	DCEN	DCEP	DCEP	DCEP	DCEN
GAS FLOW (cfh)	25-35	N/A	25-35	25-35	25-35	N/A
ELECTRICAL STICKOUT (in)	1/2 - 5/8	3/8 - 1/2	1/2 - 5/8	5/8 - 3/4	1/2- 5/8	3/8 - 1/2
GAS TYPE	75% Ar 25% CO2	N/A	75% Ar 25% CO2	100% Ar	75% Ar 25% CO2	N/A
TYPE OF ARC TRANSFER	Short Circuit		Short Circuit	Pulse	Short Circuit	

These Procedure Specifications are appropriate as of this publication. Procedures may be superseded with new spec's at a later date.

Always process to the thinner material thickness (TMT)

All persons performing welding must be qualified to weld in all positions.

NOTE:

1. Must remove Zinc Coating on both sides of metal at the weld zone.
2. MIG Braze welding process requires use of Pulse Arc® or STT® welding machine.
3. Must use Lincoln® product since E 71T-11 product differs from other suppliers.

Equipment Requirements

- The preferred GMAW welder will be a 220V. unit with minimum output capacity of 150 amps (250 amps suggested to avoid equipment limitations).

Limitations

- Welds must be "dressed", or ground down before applying topcoats.
- GMAW cannot weld through paints, sealers, or adhesives. Additionally, the zinc used in coated steels can lead to reduced weld strength due to porosity. This porosity problem on materials with heavy coatings can be dealt with by using FCAW.
- Due to the heat affected zone, structural adhesives cannot be applied within 25mm. (1in.) of GMAW welds.

Testing

- Weld coupons identical to the repair situation need to be created to help set up the welding equipment and weld process. These coupons then should be destructively tested to ensure proper quality welds are being made

Post Weld Procedures

- When welding has been completed, welds in cosmetic locations must be dressed.
- Welds will need to be smoothed down to the height of the surrounding panel without any thinning of the sheet metal. This can be accomplished using one of many sanding or grinding products available in the aftermarket.
- Slag must always be removed prior to refinishing to restore corrosion protection and appearance.
- Corrosion inhibiting materials must be applied to seal the weld zone from future corrosion.

Weld Bonding

NOTE: Structural adhesive manufacturers will vary on time allowed for completion of STRSW in weld bond zones. Check and follow adhesive manufacturer recommendations.

Application

- Weld bonding is the STRSW welding process utilizing structural adhesive between the panels that are resistance welded together. The adhesive creates a very stiff structure, while the welding eliminates concerns of the adhesives' peel strength.
- Additionally, the adhesive acts as a sealer and provides a high level of corrosion protection.

Sealers and Adhesives

- Sealers are materials placed on top of a seam to control water and air intrusion.
- Adhesives, providing structural improvements, are found between panels welded together. Adhesives also provide the qualities of sealers when applied correctly.
- The Chrysler Group LLC. recommendation is to replace any suspected adhesive with a two-component, corrosion inhibiting structural adhesive when any repairs are made, providing the STRSW process is applicable. The structural adhesive must meet or exceed Chrysler Group LLC. MS CD507

Test Weld Coupon

NOTE: Periodically check the electrodes tips to determine weather the faces have been contaminated, damaged or increased in size. If any of these conditions have occurred, replace or re-face the electrode tips per equipment manufacturer recommendations.

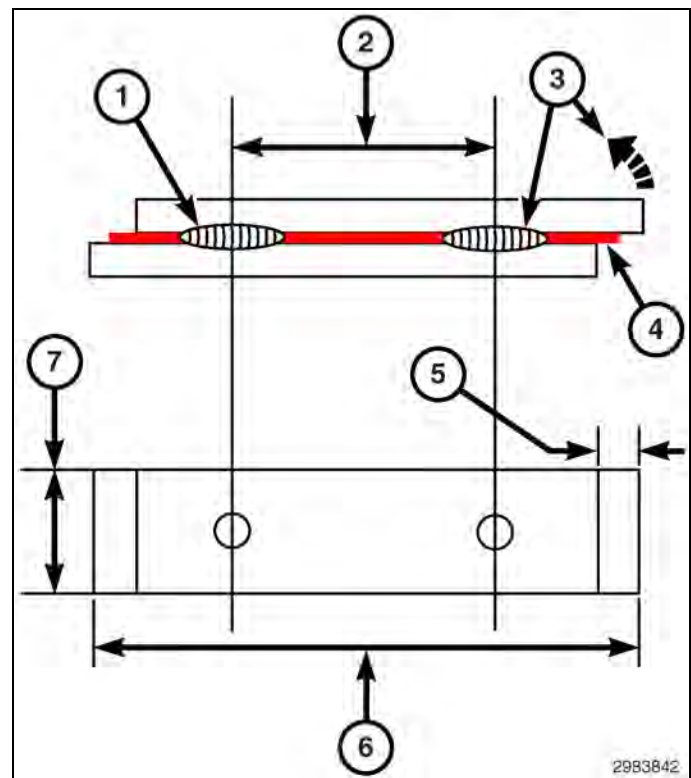


Fig. 12 Weld Coupon

1 - FIRST WELD TOWARD END OF COUPON, AT LEAST 12.5mm. (0.5in.) FROM ANY EDGE

2 - DISTANCE MUST EQUAL THE SPACING FROM THE REPAIR WELD TO THE CLOSEST EXISTING WELD ON THE VEHICLE

3 - TEST THE SECOND WELD BY PEELING APART IN DIRECTION SHOWN (USING PLIERS OR EQUIVALENT)

4 - STRUCTURAL ADHESIVE

5 - APPROXIMATELY 13mm. (0.5in.)

6 - APPROXIMATELY 100mm. (4in.)

7 - APPROXIMATELY 25mm. (1in.)

Same Current Level Used For Both Welds

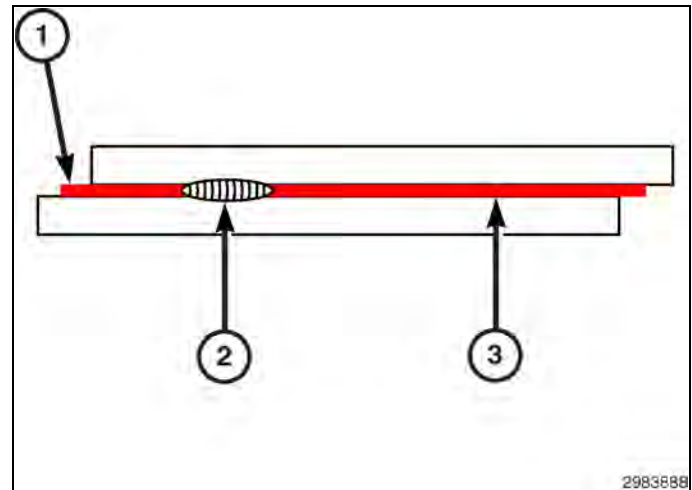


Fig. 13 Current Level Low for Both Welds

1- STRUCTURAL ADHESIVE

2 - WELD TOO SMALL

3 - WELD NON-EXISTENT

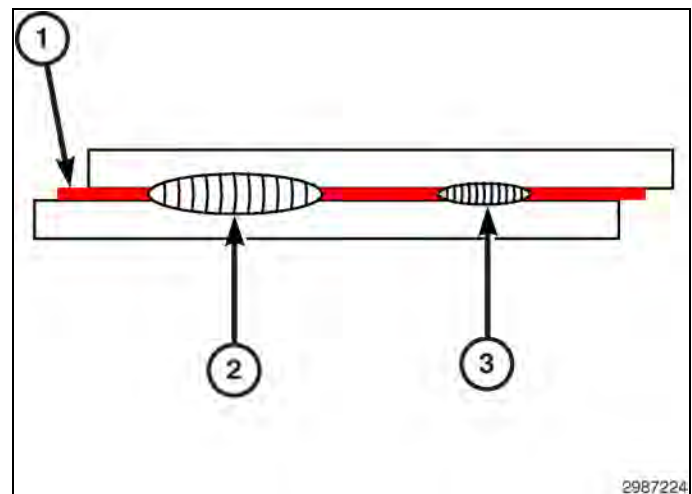


Fig. 14 Current Level Medium for Both Welds

1 - STRUCTURAL ADHESIVE

2 - WELD CORRECT SIZE

3 - WELD TOO SMALL

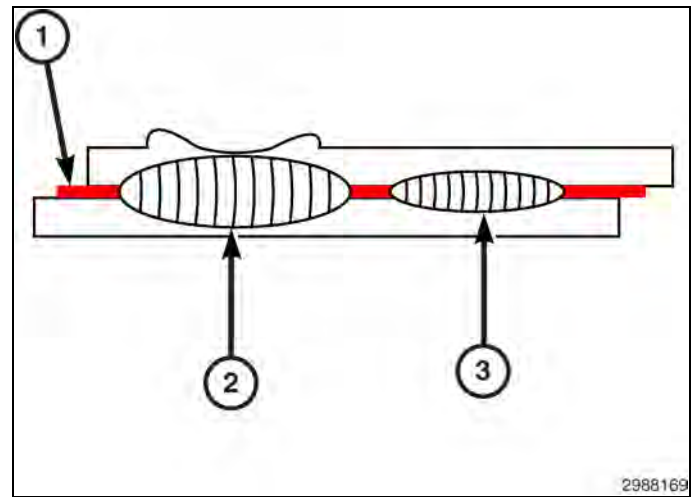


Fig. 15 Current Level High for Both Welds

1 - STRUCTURAL ADHESIVE

2 - WELD HAS HEAVY EXPULSION OF METAL AND SURFACE MARKINGS

3 - WELD CORRECT SIZE

Current Level Adjusted to Provide Acceptable Welds

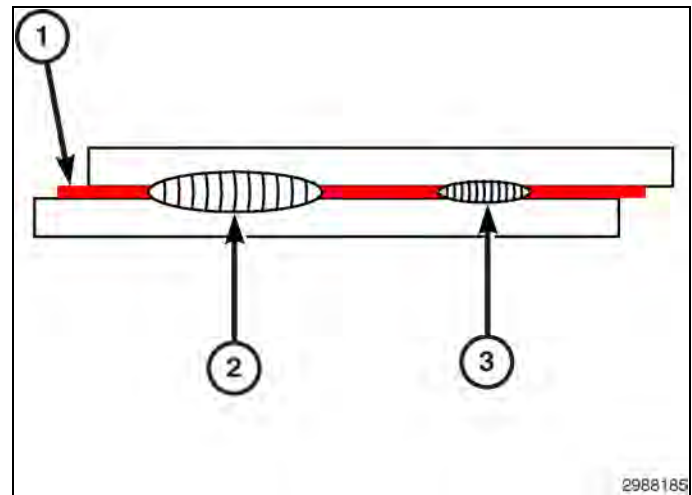


Fig. 16 Current Level Low for Both Welds

1 - STRUCTURAL ADHESIVE

2 - WELD CORRECT SIZE

3 - WELD TOO SMALL

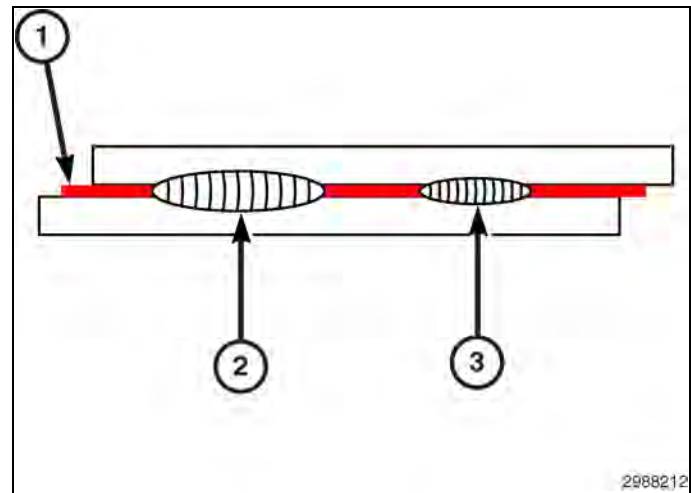


Fig. 17 Current Level Medium for Both Welds

1 - STRUCTURAL ADHESIVE

2 - WELD CORRECT SIZE

3 - WELD TOO SMALL

1. Select the proper spot welding "arm" which provides the best access to the areas of the vehicles where the spot welds are to be made.
2. Obtain metal of the same thickness and coating (i.e., bare, galvaneal, or galvanized) to be welded. This metal will be used for spot welder set up. Damaged sheet metal taken from the vehicle being repaired may be used if it is from the area from which the work is to take place. The sheet metal must be flat, free of cracks, wrinkles and scored metal.
3. Using the procedure outlined, (Fig. 12), prepare the test coupons.
4. Clean and prepare both mating coupons. If using adhesives, verify the recommendations of the adhesive manufacturer. All contaminants such as rust scale, dirt, paint, and existing sealers and adhesives must be removed. Remove any E-coat within 25mm. (1in.) of where the welds are to be placed.
5. If the panel joint originally contained structural adhesive, it should be applied to the coupon at this time.
6. Install the equipment manufacturers recommended electrode tips.
7. Adjust the welding electrode tip force, and clamp time per manufacturer recommendations.

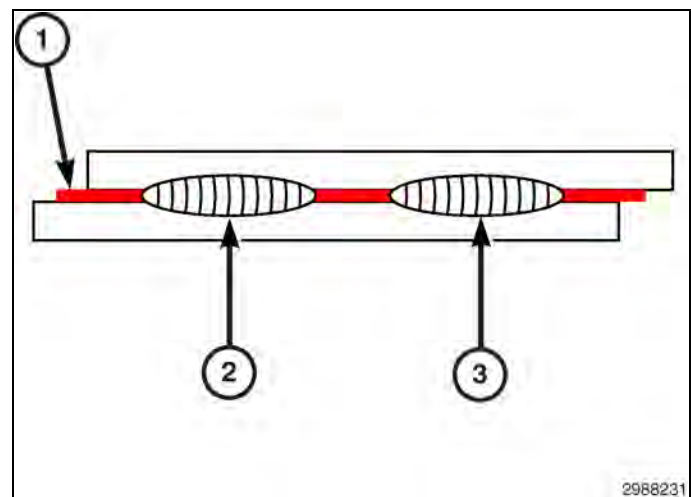


Fig. 18 Current Level Medium (2) High (3)

1 - STRUCTURAL ADHESIVE

2 - WELD CORRECT SIZE

3 - WELD CORRECT SIZE

NOTE: Galvaneal and galvanized coated steel will require more force

8. As shown in (Fig. 12), place first weld at a position at least 12.5mm. (0.5 in.) away from end weld coupons. Then make the second weld. The weld spacing should be the same distance as the original welds or the closest existing weld, whichever is the least on the vehicle being repaired.
9. Destructively test the **second** weld to determine the size of the resistance spot weld produced (see examples in (Fig. 13) If the weld is insufficient, adjust the welder per the welder manufacturer recommendations and repeat steps 7,8 and 9 until the proper weld size is achieved.

NOTE: If the first weld becomes too "hot" before the second weld reaches the correct size, reduce the current settings for the first weld and continue increasing the current setting for the second weld until the proper size for the second has been reached.

Final Weld Preparation

CAUTION: All NVH foam must be removed from the repair area of the vehicle, as material is flammable.

1. Visually verify that mating flanges are free of scale, rust, dirt, paint and cured adhesives/sealers, as well as wrinkles. If cracked, wrinkled or scored metal exists the condition needs to be corrected at this time.
2. E-coat within 25mm. (1in.) needs to be removed for STRSW. If Weld Bonding, E-coat should be ground off completely along seam.

NOTE: Corrosion resistance coating (i.e., galvaneal, galvanized) should not be removed during cleanup of components.

3. If adhesive is to be used, apply it at this time. Clamp the component to the vehicle.

NOTE: Insulated clamps should be used, as not to shunt the weld current.

4. Visually verify that the welds to be made **will not** be placed directly over an existing weld.
5. After verifying that the welder control settings are the same required to produce the second weld on the test coupons, make the welds on the vehicle.

NOTE: Structural adhesive manufacturers will vary on time allowed for completion of STRSW in weld bond zones. Check and follow adhesive manufacturer recommendations.

6. If adhesive was used, clean up any excessive squeezeout prior to adhesive curing.

Training and Qualification

Training

As with any equipment, proper training is required, and in the case of welding equipment this is no exception. The goal of automobile facilities and technicians is to restore the vehicle to its OEM condition.

Training must be considered a two-fold process:

- The technician must be well versed in how the equipment operates, how adjustments are made and what effects those adjustments have on the weld. The technician must also clearly understand the maintenance of the equipment and the impact of poor maintenance on welds and equipment longevity.
- The second and most important, aspect of the training, is weld quality confirmation. Destructive testing of weld coupons must be performed to ensure the minimum weld size is created. Physical appearance of the weld is not enough to determine the quality of the weld. Additionally, poor welds may also reduce the durability, or quality, of the repaired vehicle in time.

It is required that technicians have received training regardless of the welding equipment or method they utilize. Both training in the specific field of welding, and the particular equipment, are necessary to ensure safe, durable, quality welds are obtained.

Qualification

To demonstrate welding skill, it is highly important that technicians obtain certification from an organization such as the American Welding Society (AWS) or a certificate from the Inter-Industry Conference on Auto Collision Repair (ICAR).

SECTIONING LOCATIONS AND PROCEDURES

WARNING: Sectioning of components may only be performed in the described areas if damage to component does not extend past sectioning location. Should damage extend past sectioning location entire component replacement is the only acceptable repair

WARNING: Chrysler engineering's position on the use of heat during collision repair is as follows:

- Any body panel or frame component damaged which is to be repaired and reused, must be repaired using the "cold straightening" method. No heat may be used during the straightening process.
- During rough straightening prior to panel replacement, damaged panels or frame components may be heated to assist in body/frame realignment. The application of heat must be constrained to the parts which will be replaced and not allowed to affect any other components.

This "no heat" recommendation is due to the extensive use of advanced high strength steels in Chrysler Group LLC products. High-strength materials can be substantially and negatively affected from heat input which will not be obviously known to the repairer or consumer.

Ignoring these recommendations may lead to serious compromises in the ability to protect occupants in a future collision event, reduce the engineered qualities and attributes, or decrease the durability and reliability of the vehicle.

This statement supersedes any previously released information by the Chrysler Group LLC.

Failure to follow these instructions may result in serious or fatal injury.

CAUTION:

- All restraint systems should be disabled before beginning repairs.
- Electronic modules located within 305 mm (12 in.) of any welding should be isolated.
- Protect vehicle from weld spatter damage.
- Vehicle service manual should be referenced for guidelines and warnings.

Service assemblies for body components may be disassembled if utilization of the subcomponents is more appropriate to the repair or to reduce vehicle disruption. The structural and non-structural metal on the Minivan (RT) may be sectioned in several areas providing the prescribed methods below are adhered to.

The joint should whenever possible be performed in as "flat" an area as possible to simplify the repair. While the joint may include "holes" and formations, it is suggested they be avoided but where this is not possible, the technician must ensure that the additional material thickness does not impede installation of fasteners, etc. that the hole exists for.

All dimensions are to be restored to factory specifications prior to full or partial component replacement.

CAUTION: NVH foam should be removed from the weld area, as material may be flammable.


CAUTION: Do not apply any corrosion protection or NVH foam prior to completion of welding, as materials are flammable.

The described sectioning locations only explain joint location and type. All other welds along the sectioned portion of the component must be replaced. Squeeze Type Resistance Spot Welding (STRSW) is the method to be used. If accessibility prevents application of spot weld, MIG plug welds are to be used. Welding of structural panels through 3 or more tiers of panel stack ups will require 9.5 mm. plug welds. Exterior panels should be installed using 8 mm. plug welds. For further information (Refer to Collision Information - Specifications)

When welding is completed apply inner panel rust proofing, such as Mopar Cavity Wax Kit (part #68042969AA), Mopar Wax Refill (part #68042970AA), or equivalent. Apply to the inner cavity areas in two applications with a 30-minute flash period between the applications. Pay particular attention to areas which have been welded. Corrosion protection should always be restored to manufacturer specifications. For further information on Corrosion Protection, (Refer to Collision Information - Standard Procedure).

Finish, sealers, adhesives and silencers should be reapplied or replaced to OEM locations and specifications, (Refer to Collision Information - Locations)

DESCRIPTION	FIGURE
FRONT RAIL	Front Rail
OUTER BODY SIDE APERTURE	Body Side Aperture
BODY SIDE OUTER REINFORCEMENTS DO NOT SECTION AREAS	B-Pillar Reinforcement - Do Not Section
FRONT INNER BODY SIDE APERTURE	Front Inner Body Side Aperture
REAR INNER BODY SIDE APERTURE	Rear Inner Body Side Aperture
DRAIN TROUGH REINFORCEMENT	D-Pillar Drain Trough
REAR RAIL	Rear Rail

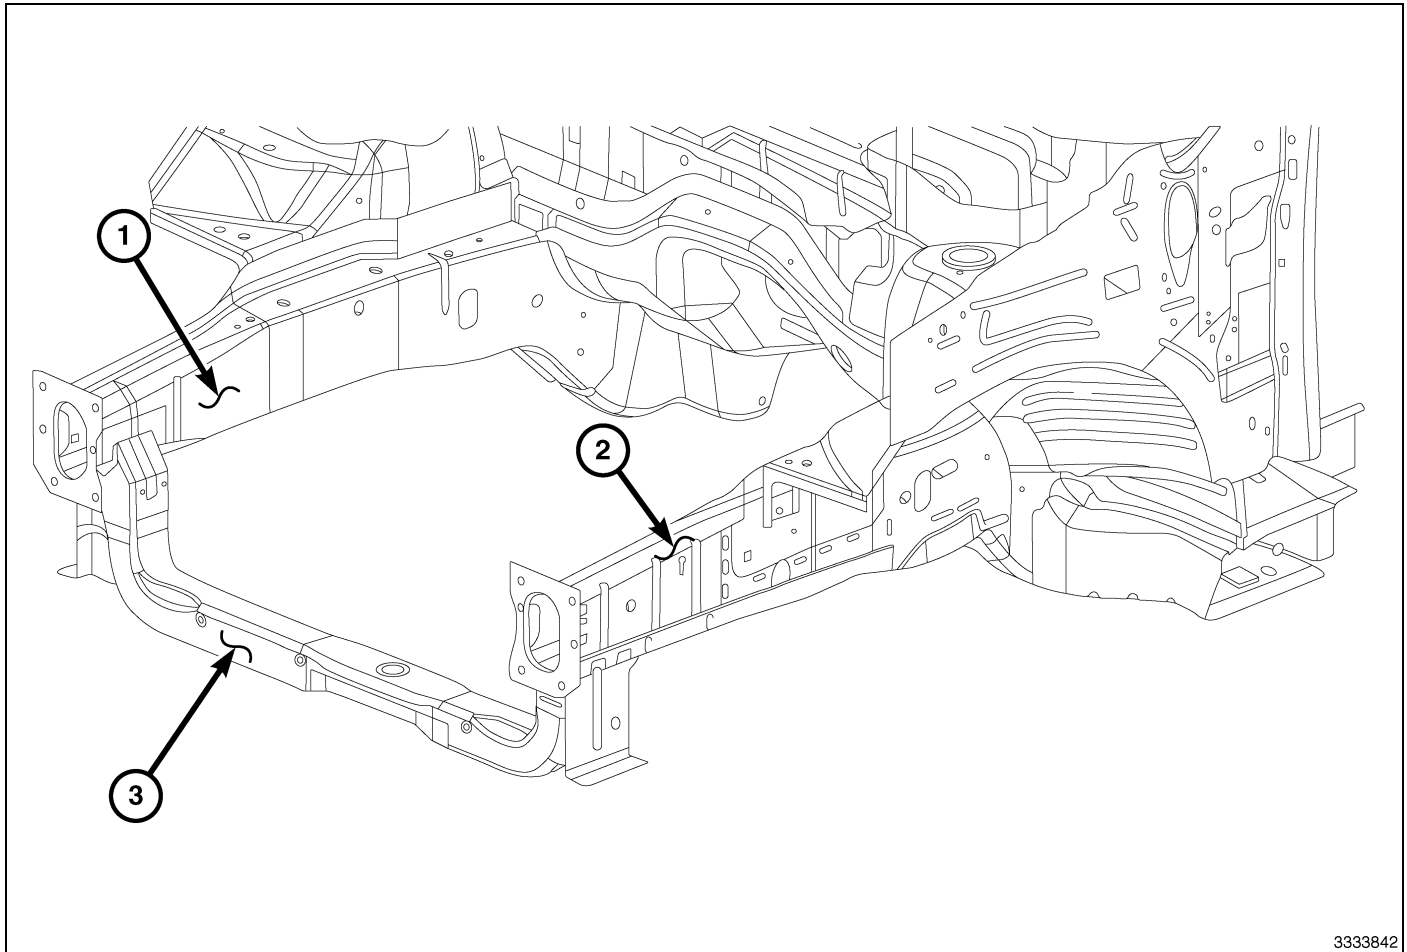Front Rail


3333842

1 - RIGHT SIDE FRAME RAIL

2 - LEFT SIDE FRAME RAIL

3 - LOWER RADIATOR CROSSMEMBER


1. With vehicle mounted to appropriate pulling and 3-dimensional measuring equipment, complete the following procedure paying particular attention to body dimensions while fitting and welding panels.
2. Remove bumper components, front end module (including cooling module, headlamp and radiator carrier panel), and all other components for clear access to the repair area.

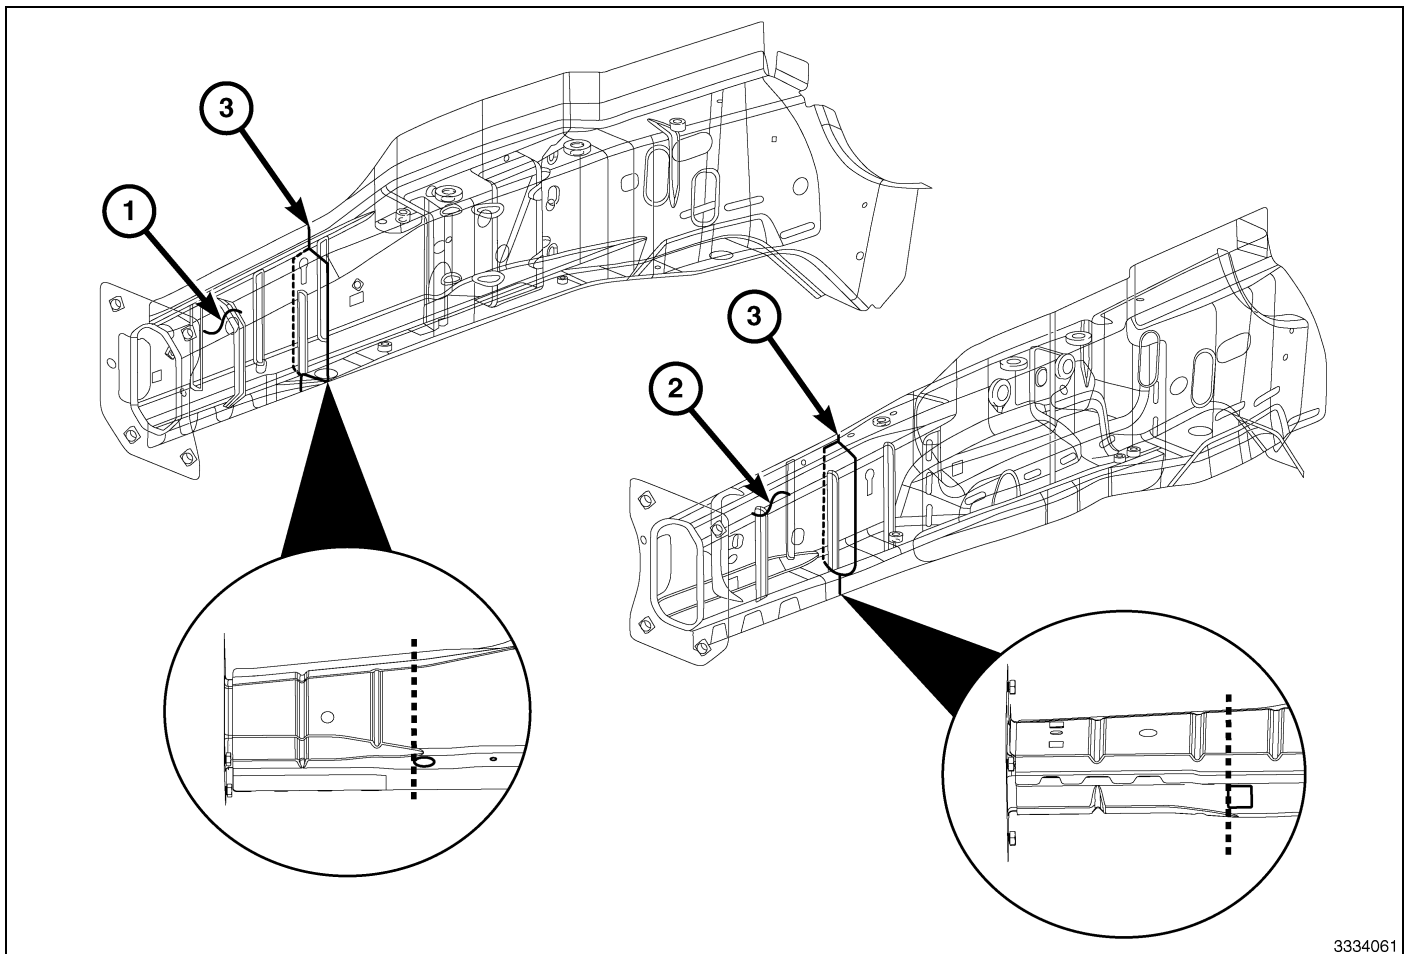

3334061

- 1 - RIGHT SIDE FRAME RAIL
- 2 - LEFT SIDE FRAME RAIL
- 3 - PRINCIPAL LOCATION POINTS
- 4 - SECTIONING CUT LINE

3. Confirm no damage exists rearward of the principal location points (PLP). The PLP's are located on the bottom face of the rail- the right rail (1) PLP is round and the left rail (2) is square. If there is damage beyond PLP than the entire rail must be replaced.
4. Remove welds holding the lower radiator crossmember to the damaged rail (if the crossmember or both rails are damaged remove completely).
5. Using forward leading edge of the PLP, mark the rails sectioning cut line (4) as shown in the illustration.

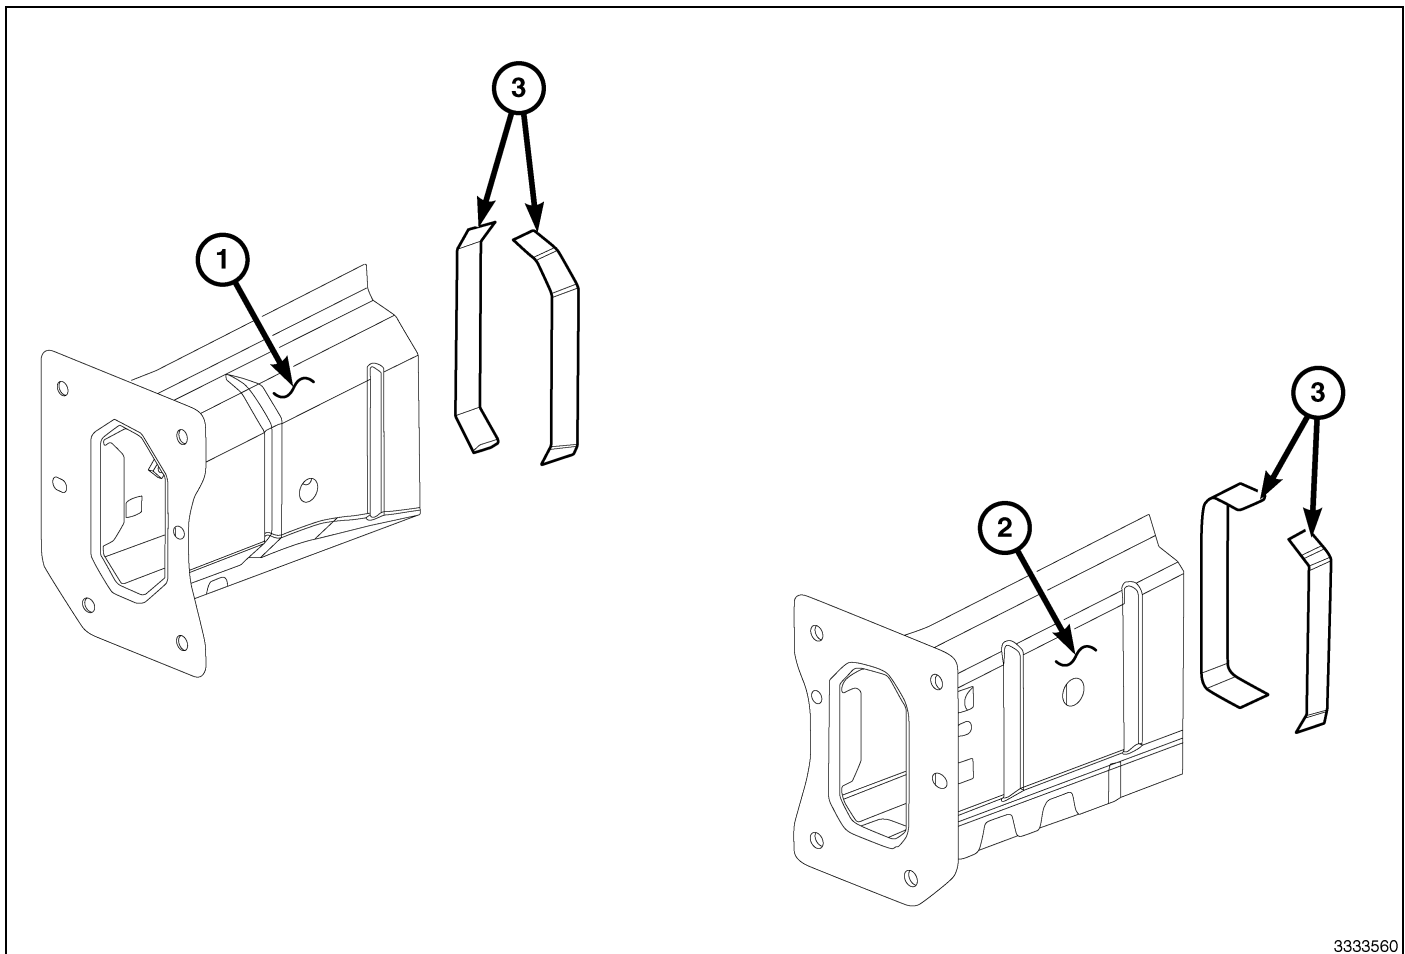


3333560

1 - REPLACEMENT RIGHT SIDE FRAME RAIL

2 - REPLACEMENT LEFT SIDE FRAME RAIL

3 - WELD BACKERS

6. Cut the damaged rail off using a cut-off wheel, reciprocating saw or equivalent.
7. Mark the replacement rail and cut off the rail tip exactly as was done to the damaged rail.
8. From the remaining replacement part, mark and cut a 19mm. (0.75in.) strip and remove the weld flanges, top and bottom. These pieces will be the weld backer.

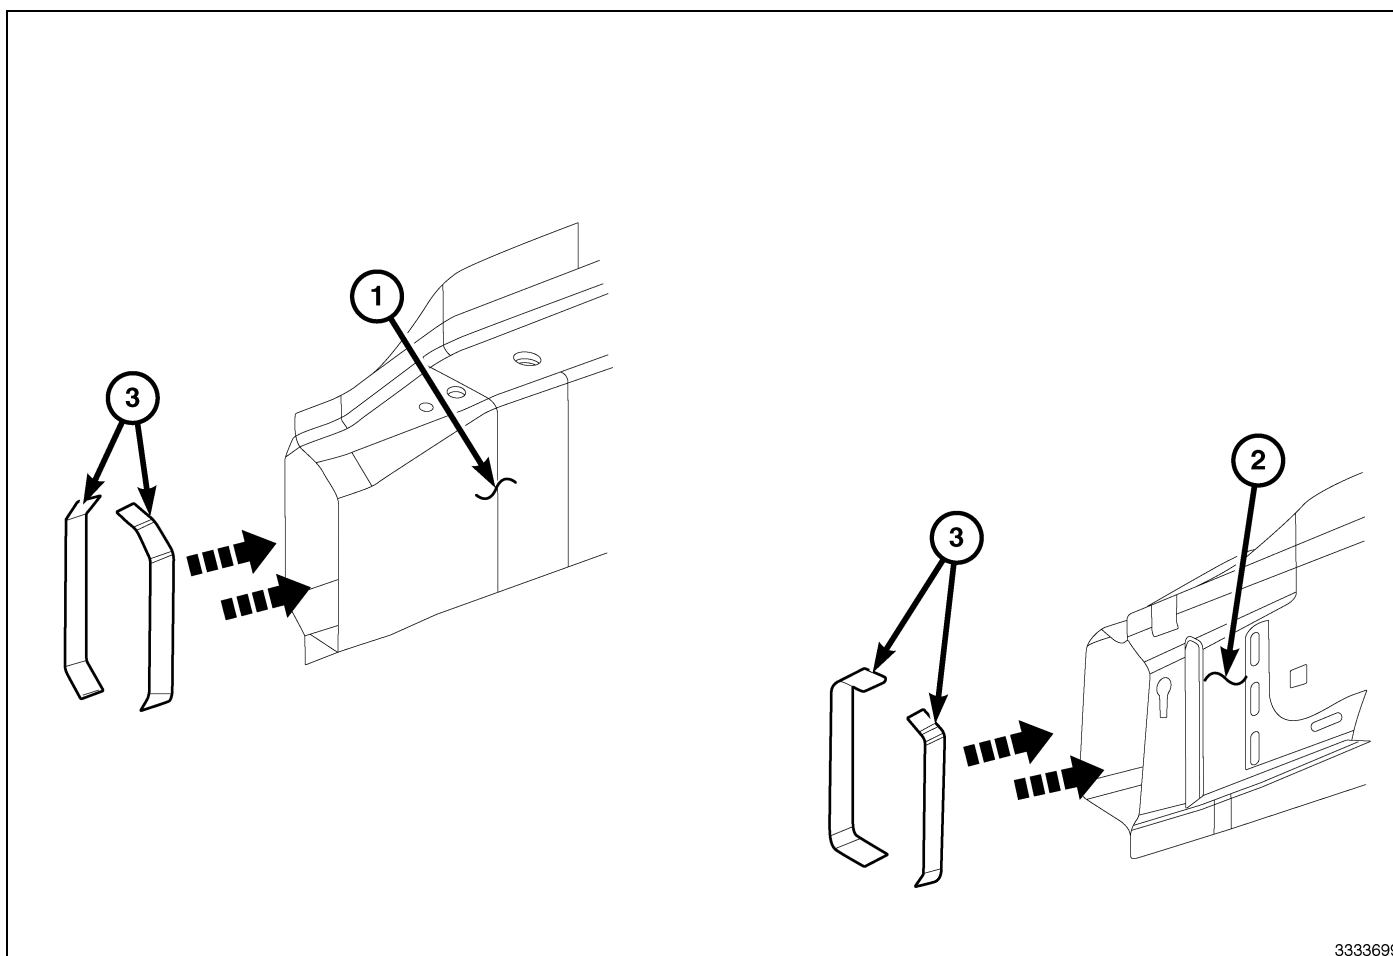


3333699

1 - ORIGINAL RIGHT SIDE FRAME RAIL

2 - ORIGINAL LEFT SIDE FRAME RAIL

3 - WELD BACKERS

9. Smooth all cut edges of any roughness or burrs, and create a slight taper for weld purposes.
10. Remove all e-coat from the rail components within 12.5mm. (0.5in.) of the joint, and also from the weld-backers.
11. Prepare the welder per the weld chart found in Weld Process, (Refer to Collision Information - Specifications)
12. Install the weld-backers (3) into the frame rail, centering them on the cut edge. Clamp and tack weld into position when proper fit is confirmed.

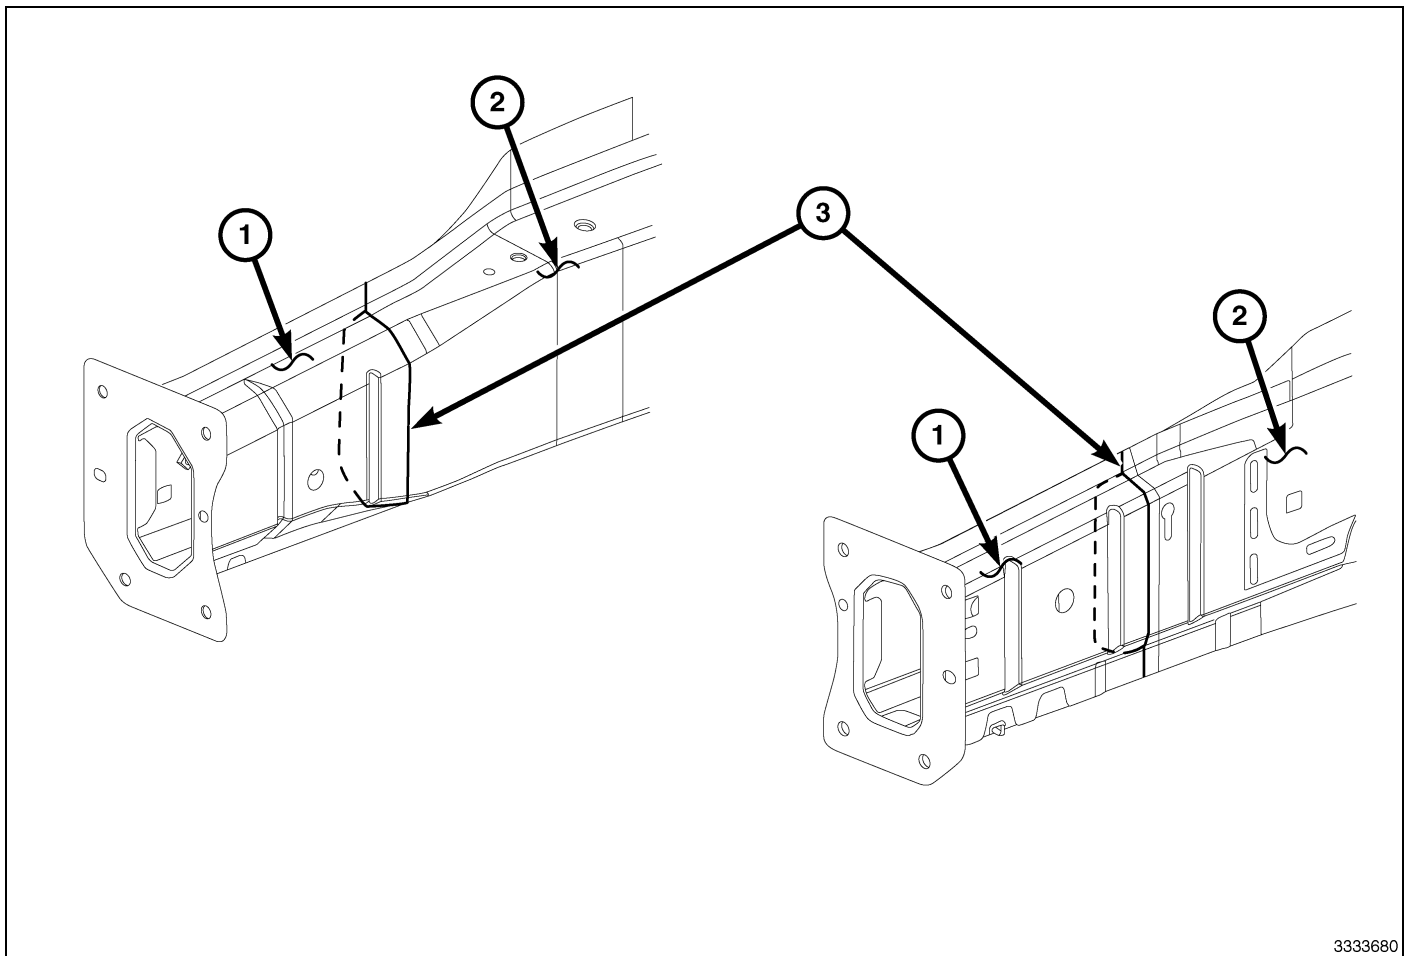


3333680

1 - REPLACEMENT FRAME RAILS

2 - ORIGINAL FRAME RAILS

3 - WELD JOINTS


13. Fit the replacement tip to the rail and when proper positioning has been confirmed using 3-dimensional measuring equipment, tack weld into place.
14. Finish welding the butt-joint (3) using a skip stitch method until the full length of the joint is completely welded. To avoid excessive heat buildup and distortion, move between the inner and outer rail during welding. Remove any weld in the PLP hole to restore the original shape.
15. Dress the welds without removing any of the base material.
16. Either install new or reposition the lower radiator crossmember, and weld to the rail.

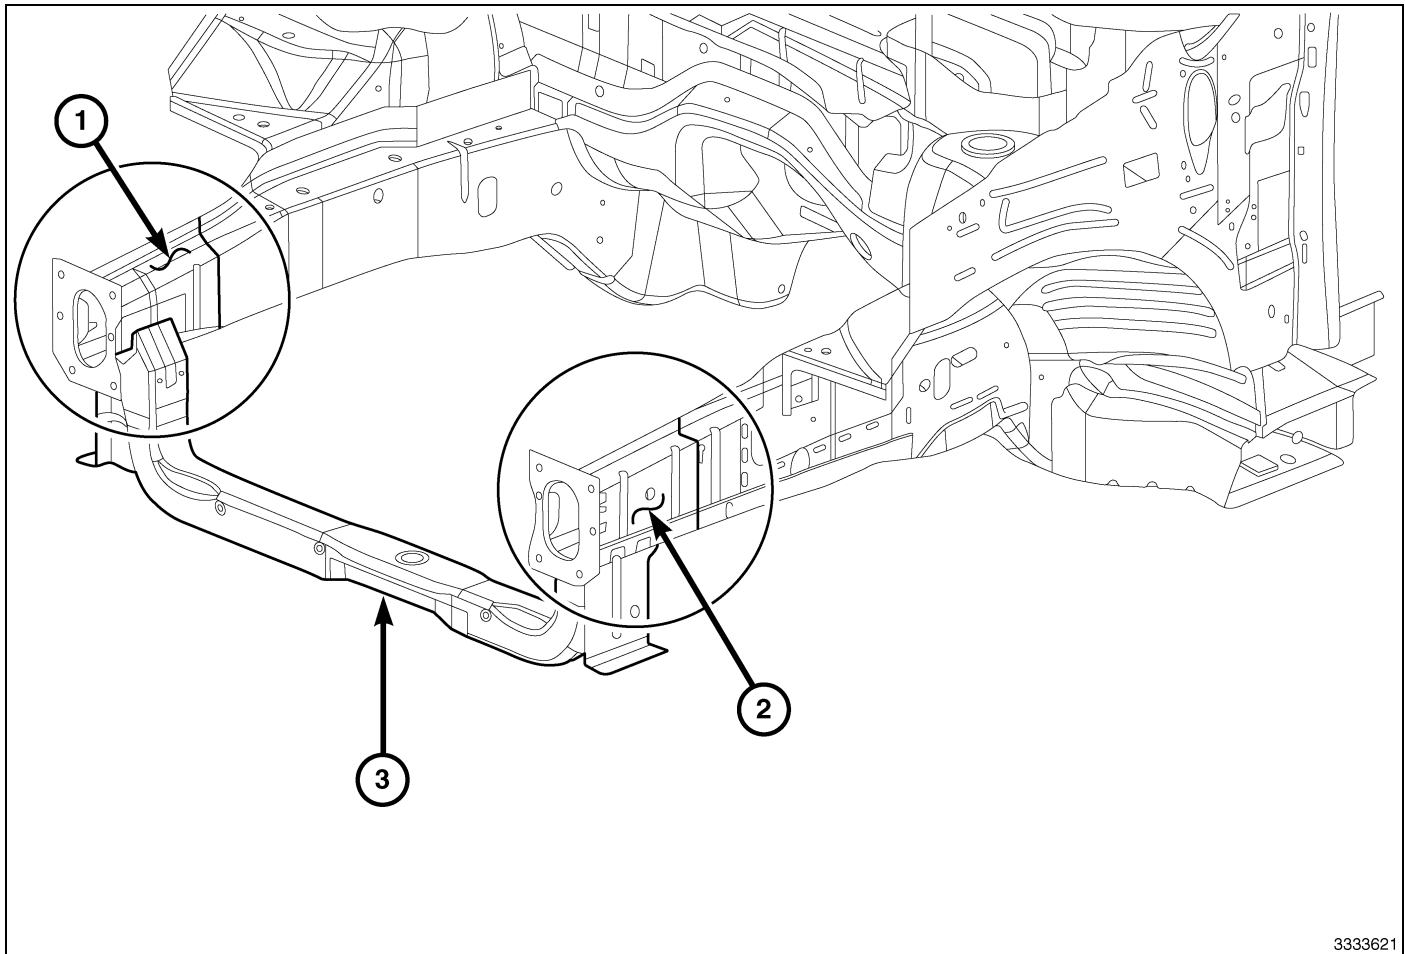

3333621

- 1 - REPAIRED RIGHT SIDE FRAME RAIL
- 2 - REPAIRED LEFT SIDE FRAME RAIL
- 3 - LOWER RADIATOR CROSSMEMBER

17. Clean all the repaired areas and apply refinish and corrosion protection coatings to interior and exterior of the rail.
18. Complete the remainder of repairs.

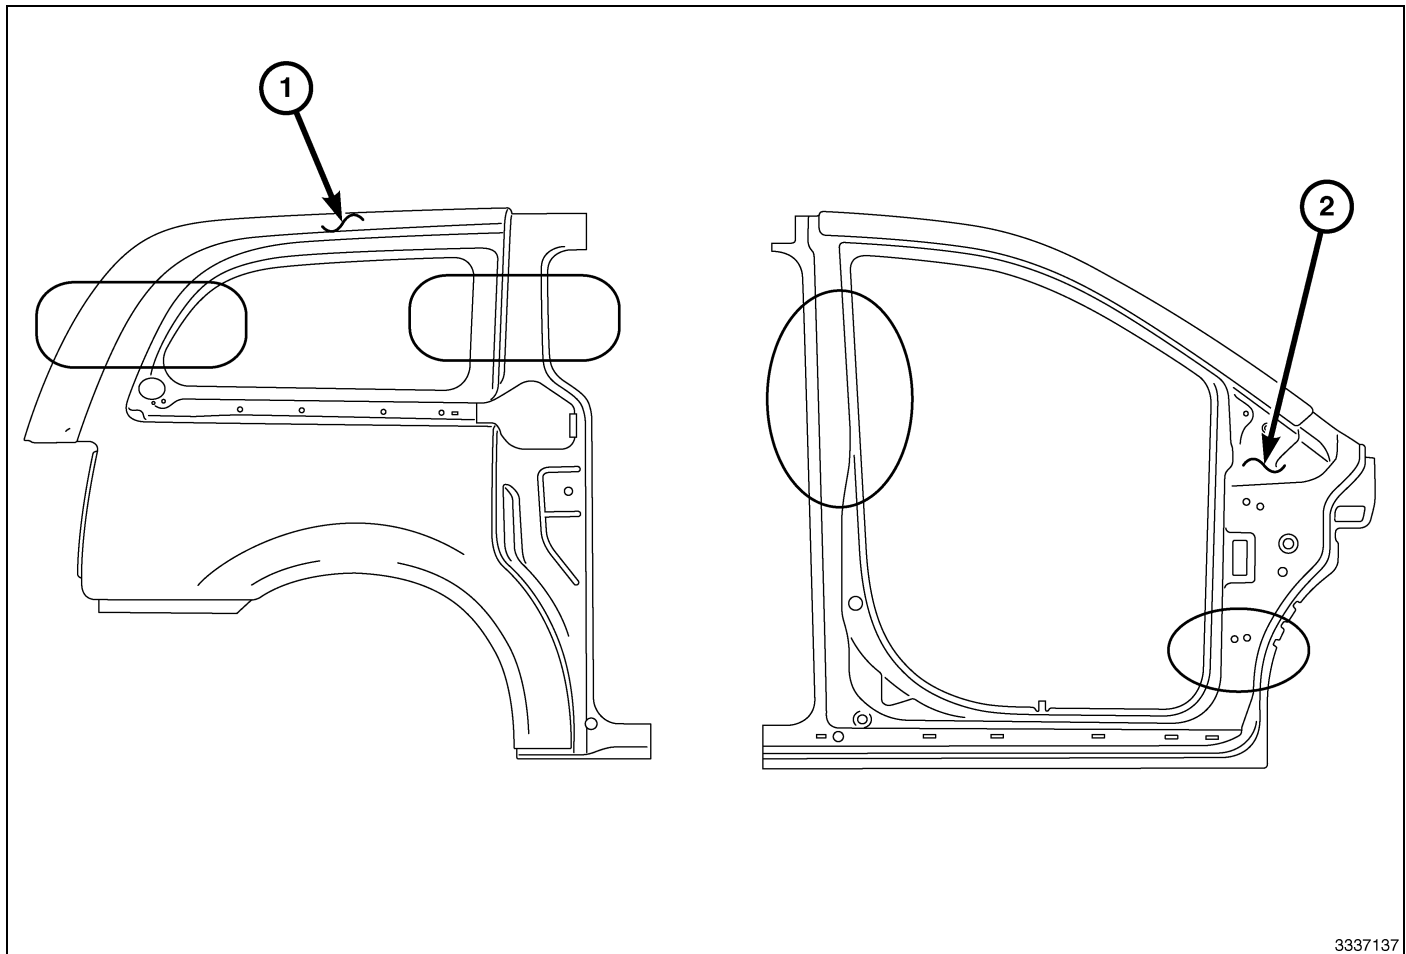Body Side Aperture***Outer Body Side Aperture***

NOTE: Right side shown, left side typical


NOTE: Sectioning permitted within the outlined areas

1 - REAR OUTER BODY SIDE APERTURE

2 - FRONT OUTER BODY SIDE APERTURE

The body side aperture has several areas in which it may be sectioned. Outlined areas represent general sectioning areas and may be sectioned within.

Butt-joint with a 13mm. (0.5in.) weld backer is to be used in all sectioning areas of the outer body side aperture.

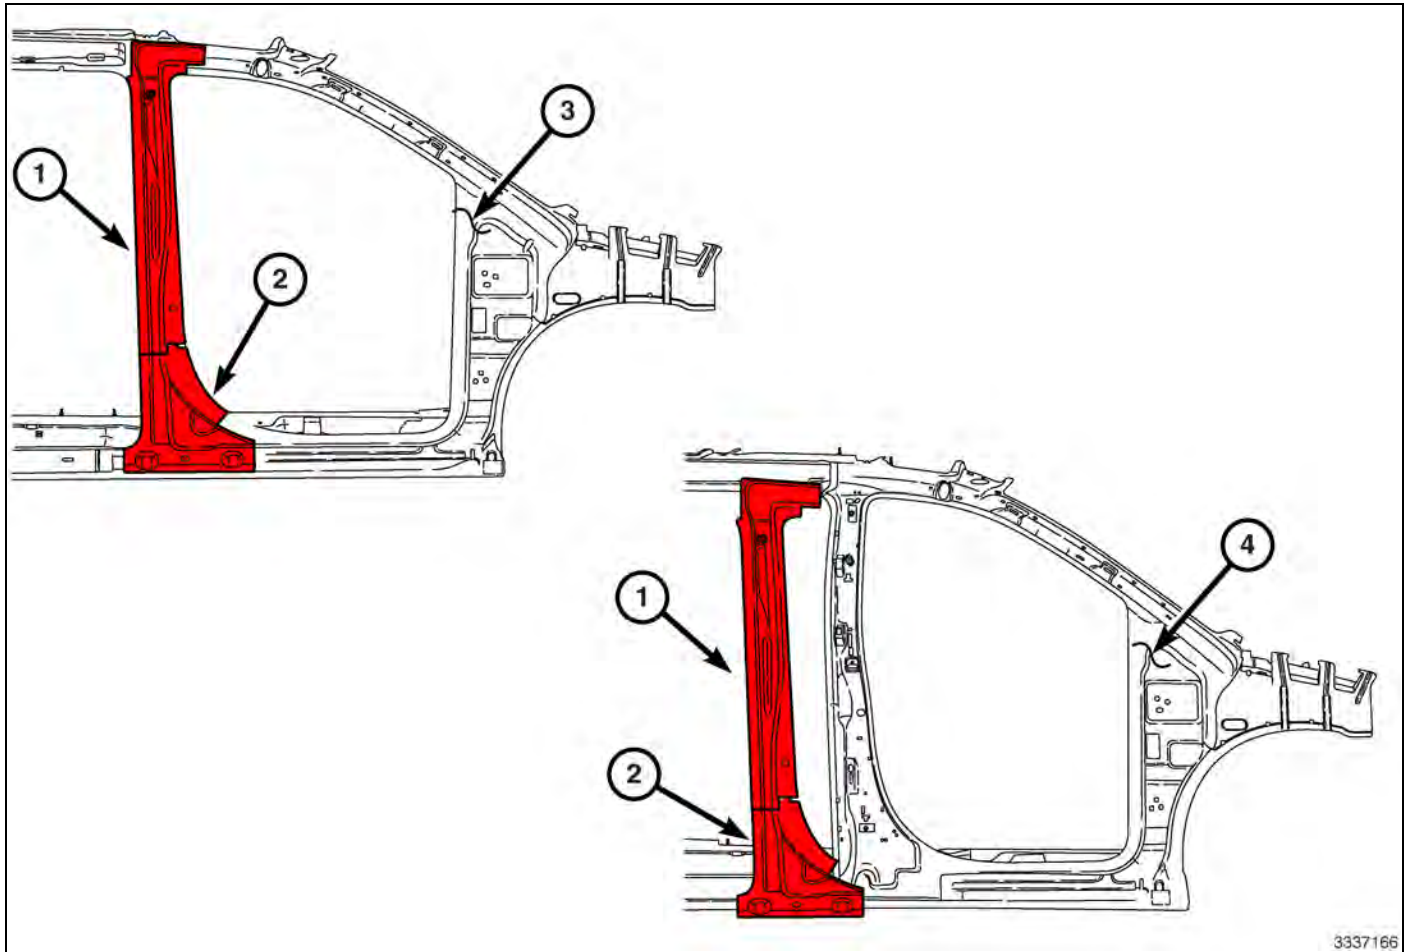B-Pillar Reinforcement - Do Not Section

Do Not Section


NOTE: Right side shown, left side typical

NOTE: Lower portion of the B-pillar reinforcement may be replaced at the factory joint, For further information refer to Lower B-Pillar Reinforcement

- 1 - B-PILLAR REINFORCEMENT (UPPER) **DO NOT SECTION**
- 2 - B-PILLAR REINFORCEMENT (LOWER) INNER BODY SIDE APERTURE **DO NOT SECTION**
- 3 - INNER BODY SIDE APERTURE
- 4- INNER BODY SIDE APERTURE (EXPANDED VIEW)

B-pillar reinforcement upper and lower may never be sectioned within the panels.

Replacement at the factory weld location is the only acceptable repair. The Lower B-pillar reinforcement may be replaced at the factory joint, **if damage extends into the upper portion, full reinforcement replacement is required.**

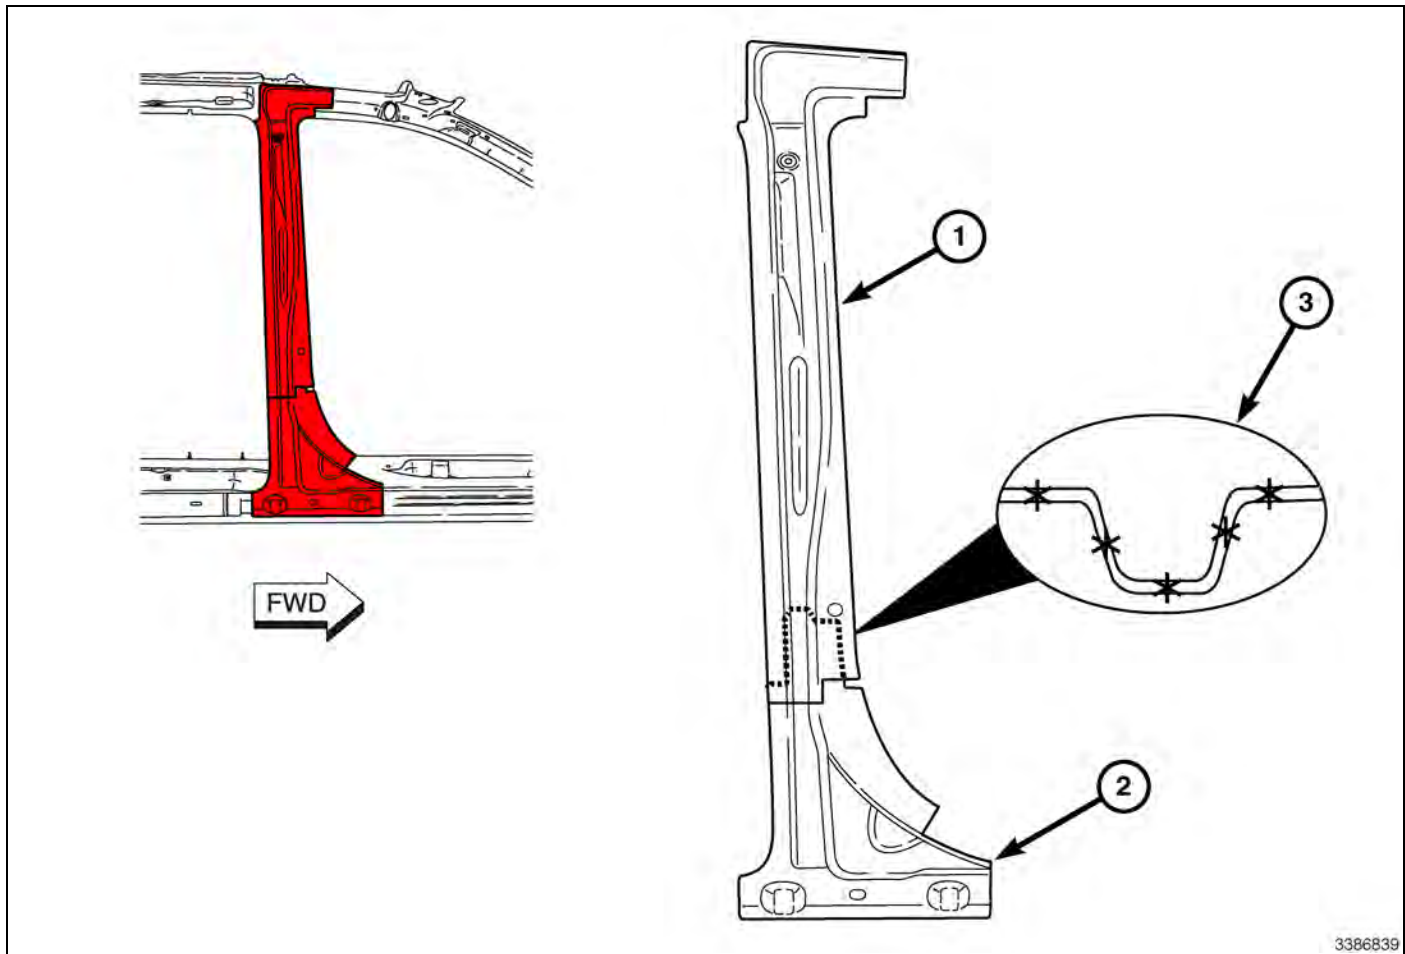Lower B-Pillar Reinforcement

NOTE: Right side shown, left side typical

- 1 - UPPER B-PILLAR
- 2 - LOWER B-PILLAR
- 3 - CROSS SECTION VIEW

The Lower B-pillar (2) can be replaced at the joint where it meets with the Upper B-pillar (1). Boron steel is utilized on the top portion (1) of the reinforcement. It will be necessary to use a **Tungsten Carbide Drill Bit** to release the spot welds along the area where the upper and lower sections join. Spot welds are located on all sides of the joint as shown in cross section view (3).

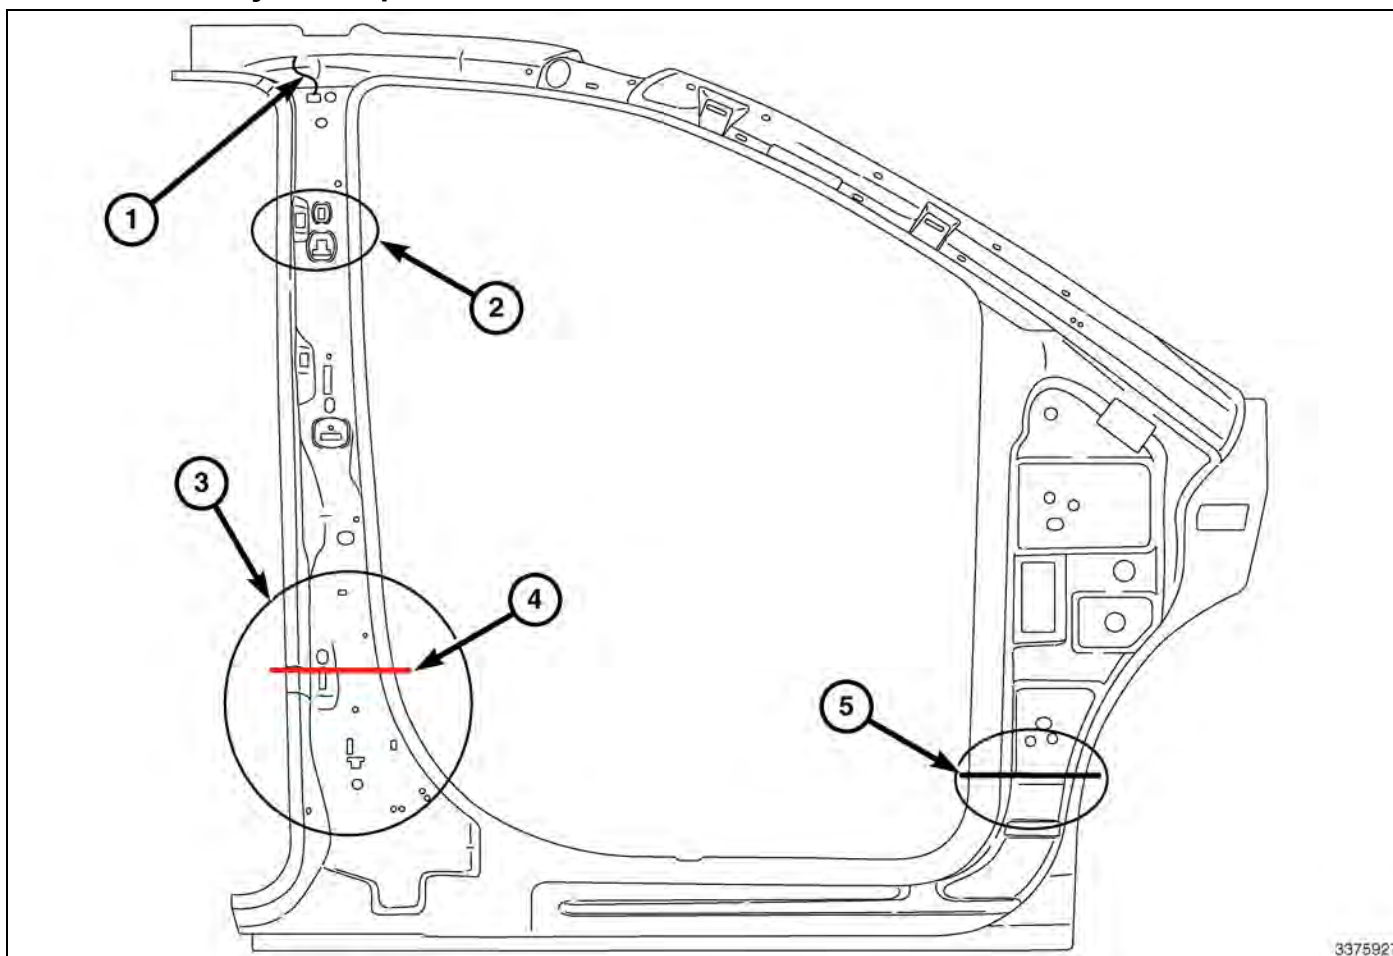
Front Inner Body Side Aperture

Fig. 19 Front Inner Body Side Aperture

NOTE: Right side shown, left side typical

NOTE: Avoid directly lining up inner B-pillar section joint with same location as B-pillar reinforcement joint

- 1 - FRONT INNER BODY SIDE APERTURE
- 2 - ADJUSTABLE SEAT BELT TURNING LOOP LOCATION
- 3 - INNER B-PILLAR SECTION LOCATION
- 4 - AVOID (SEE NOTE)
- 5 - A-PILLAR SECTIONING LOCATION

Section the Inner A-pillar (5) between the top of reinforcement box and below bolt pattern on the lower hinge.

Preferred sectioning of Inner B-pillar (3) is above or below the seam where the upper and lower B-pillar reinforcements join (4).

The body side inner assembly A-pillar and B-pillar are to be sectioned using "Modified Lap-Joints". Further information on "Modified Lap-Joint" can be found in "Weld / Weld Bonding" section (Refer to Collision Information - Standard Procedure).

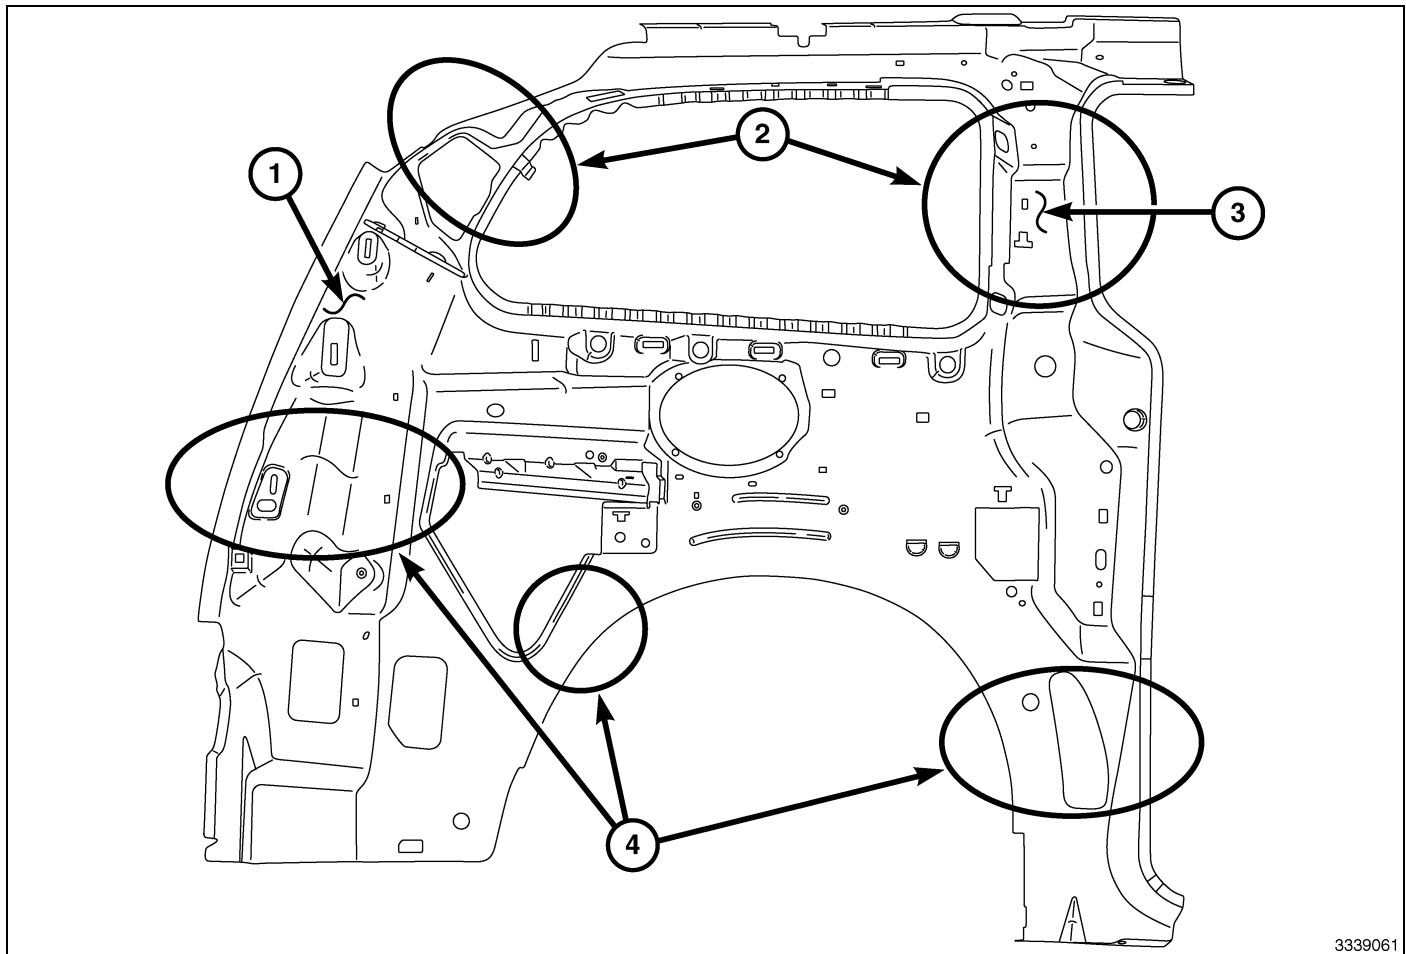
Rear Inner Body Side Aperture

Fig. 20 Rear Inner Body Side Aperture


NOTE: Right side shown, left side typical

- 1 - REAR INNER BODY SIDE APERTURE
- 2 - UPPER SECTIONING LOCATIONS (SECONDARY)
- 3 - ADJUSTABLE SEAT BELT TURNING LOOP (ATL)
- 4 - LOWER SECTIONING LOCATIONS (PRIMARY)

Outlined areas represent general sectioning areas within.

Sectioning along the lower portion (4) is the preferred locations. When damage extent makes it necessary, section in the upper locations (2).

The body side inner assembly is to be sectioned using modified lap-joints. Further information on "Modified Lap-Joint" can be found in "Weld / Weld Bonding" section, (Refer to Collision Information - Standard Procedure)

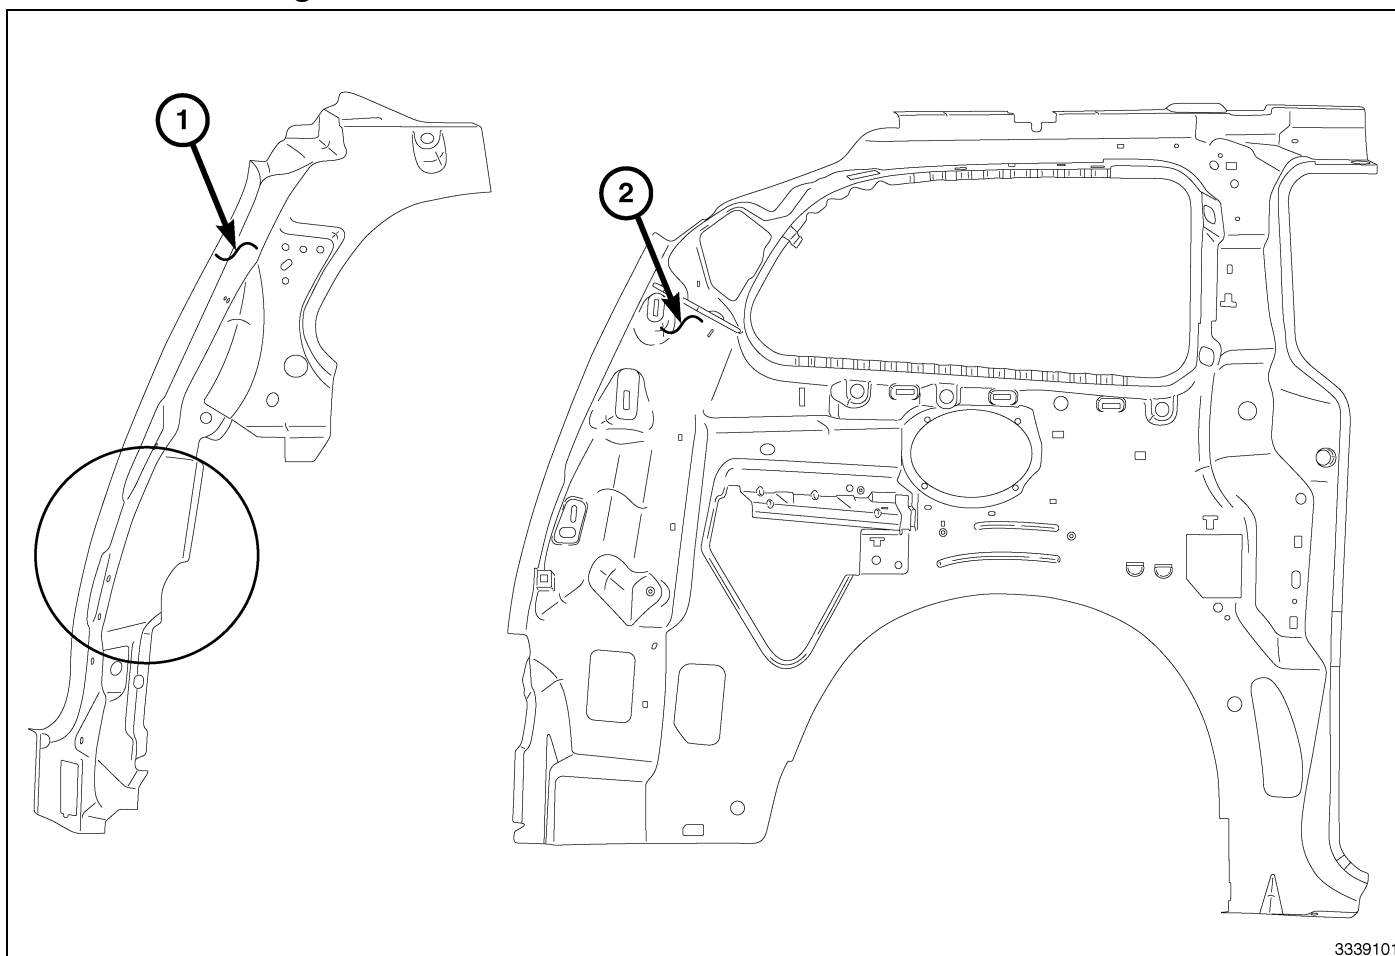D-Pillar Drain Trough***Drain Trough***

NOTE: Sectioning permitted within the outlined areas

NOTE: Right side shown, left side typical

1 - DRAIN TROUGH


2 - INNER BODY SIDE APERTURE

Outlined area represents general sectioning areas within.

Lower damage to the Liftgate Opening Drain Trough, and access to sill components are the most common need for Drain Trough sectioning. Drain Trough sectioning will allow for partial replacement, without disturbing unnecessary components.

When sectioning the Drain Trough a "Modified Lap-Joint" is to be used. Further information on "Modified Lap-Joint" can be found in "Weld / Weld Bonding" section, (Refer to Collision Information - Standard Procedure).

Rear Rail

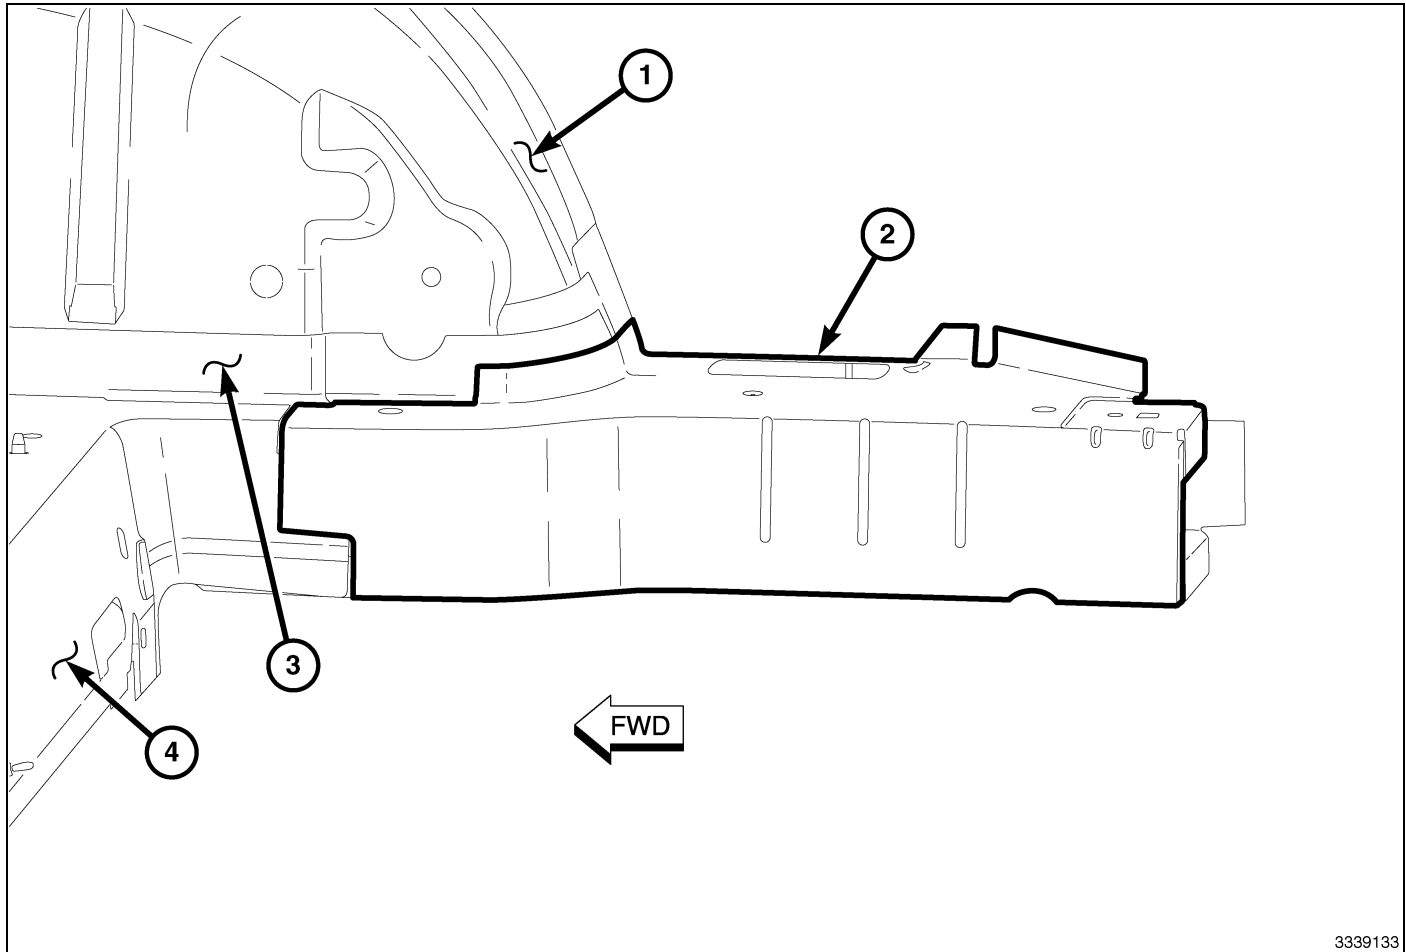

Rail w/ Cover


NOTE: Right side shown, left side typical

NOTE: View shown with Stow and Go Tub removed

- 1 - INNER WHEELHOUSE
- 2 - 3RD ROW SEAT RAIL COVER PANEL
- 3 - REAR RAIL
- 4 - REAR CROSSMEMBER

NOTE: Repair must be performed with rear "Stow and Go" Tub removed

Remove the rear floor pan cover to fully expose the lower rail sectioning area. It will be necessary to replace the cover with a replacement part.

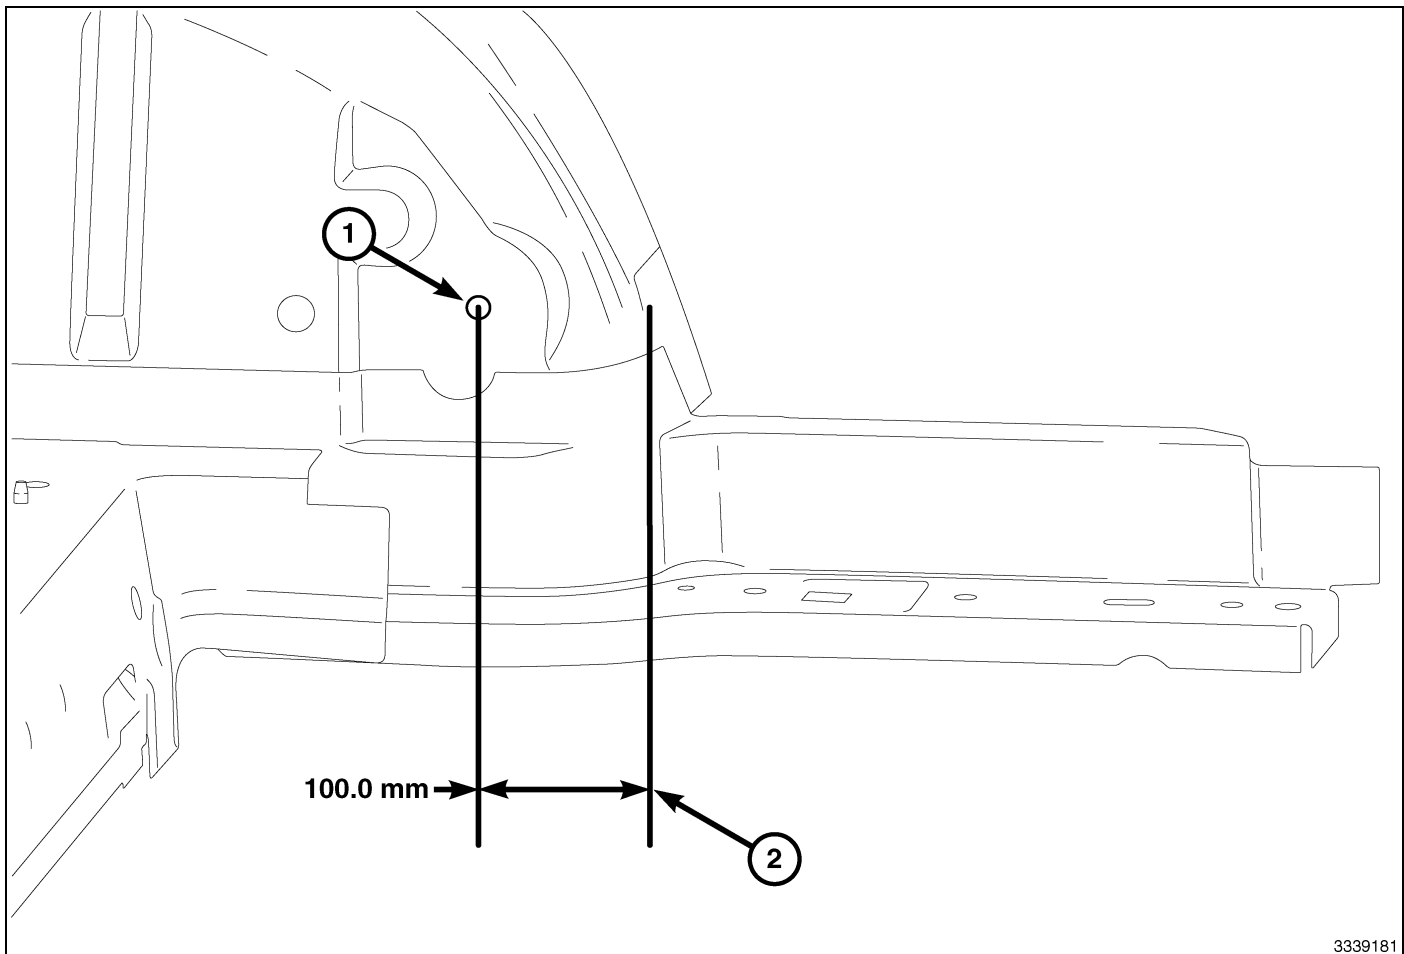

3339181

1 - SEAT BELT ANCHOR STUD

2 - SECTIONING CUT LINE

The rear rail is to be sectioned 100mm. (4in.) after the seat belt anchor stud (1). The rail is to be sectioned using a butt-joint. Weld one side of the butt-joint completely. Clean the adjacent side and weld the length of the joint again.

CORROSION PROTECTION

Corrosion Protection Restoration

"Corrosion protection" encompasses all the materials and coatings which protect a vehicle from corrosion and include:

- Coated steels
- E-coat primer on the complete body
- Body sealing to eliminate water and air intrusion where panels join
- Structural adhesives in some joints
- Chip resistant primer applications on the entire body
- Paint application
- Underbody corrosion protection
- Inner panel corrosion protection added to repair areas

Corrosion protection must be restored during a repair anytime it may have been compromised. All areas that have been subjected to structural pulls, clamping, straightening, welding, or any other any other operation that may have imparted damage to the corrosion protection system will need to be addressed.

In the repair process corrosion protection is addressed in three phases: pre-refinish, refinish and post-refinish.

Pre-refinish

In the pre-finish phase, structural adhesives, seam sealers and other applied coatings are installed. Sheet metal seams are sealed to prevent water intrusion into the "dry" areas of the vehicle, such as passenger compartment, and also to

prevent intrusions of contaminants, such as water and road salt, into seams causing corrosion. Lap joints, hem flanges, and any panel mating locations need to be addressed during the repair and treated to duplicate the original vehicle build.

All bare metal should be etch primed prior to applying seam sealer, following the refinish material provider's instructions for doing so, unless the manufacture of the sealer specifically states otherwise.

When working around pinch weld flanges, seam sealer should be installed to duplicate the original appearance and function. If it is unclear whether the original sealing material **between** the flanges is strictly a sealer or structural adhesive, always default to a structural adhesive such as Mopar part #05083855AA, Fusor 112B, or 3M 08116. Refer to the welding and joining section of the Body Repair Manual for additional information related to weld-bonding and welding around adhesives and sealers.

Roof and closure panels will require the use of Anti-Flutter foam. Where inner panel supports meet external panels, the proper replacement materials in these areas are Mopar part #04864015AB, or equivalent, or Fusor 121, or 3M 04274 (NVH dampening material).

All hem flanges on closure panels should be sealed whether sealer is apparent or not. This includes those disturbed during the repair, and those on new replacement panels. Either duplicate the existing bead in shape or size, or where one is not obvious, seal the hem flange in a discrete fashion. Hem flanges should be sealed using Mopar part #04318026, Fusor 129, or 3M 08308.

Lap joints, such as in floor pans, should be sealed to duplicate the sealer visible, but also addressed on any exterior surface by sealing the lap weather visible or not.

NOTE: Chrysler does not recommend the use of any type of "weld-thru" primer during repairs. Weld-bonding with corrosion protecting adhesives or sealers, along with final application of inner panel corrosion protection is the proper method.

Refinish

All painted surfaces should be coated using a Chrysler group LLC approved refinish material. The refinish process includes application of undercoats, primers (filler & sealer), basecoats and clearcoat. These approved materials have been tested to the same material standards as the production materials.

Post-refinish

All new panels, and repair areas, must have inner panel corrosion protection applied after the painting operation is complete, but before all the trim is reinstalled. Mopar Cavity Wax #68042970AA, or 3M Rustfighter #08891 should be applied to all interior cavities, weld flanges, hem flanges as well as any are affected by the repair especially where any type of welding was performed. Inner panel corrosion protection should be applied using "pressure pot" equipment with wands which provide 360-degree material coverage for closed cavities, and directional spray wands for visible coverage (Mopar kit #04271235). Additionally, the corrosion protecting material must be applied in two coats with a minimum 30-minute flash time between applications.

Wheel wells and underbody panels which have been involved in the repair process should also have a final undercoating applied. Use Mopar #05093417AA, or equivalent, and apply with "pressure pot" style application equipment.

Any disturbed or removed NVH foam needs to be replaced. Use Mopar part #05142864AA, Fusor 130, or 3M 8463.

Following this arrangement, choice of materials, and proper application, the repaired vehicle should be as well protected against corrosion as it was prior to the repair.

Material Locations

SEALERS AND SOUND DEADENERS

Terminology

Work Time : The length of time a sealer can continue to be applied or tooled effectively.

Set Time : Time when there is no longer product transfer.

Handling Time : The time when a part can be safely transported and sealer can no longer be tooled or repositioned.

Full Cure Time : Time when a sealer has reached it's full strength.

Paintable Time : Established time when refinish materials can safely be applied to a sealer.

Sealers

Brushable : Single component sealer applied with a brush.

Flowable : Sealer with low viscosity and self-leveling characteristics.

Pumpable : A two component or one component sealer that seals interior and exterior joints and voids.

Resistance Weld-through : Sealer / adhesive that can be used in conjunction with resistance spot welding.

Sealer Tape : Preformed sealer.

Sprayable : Sealer applied with a pneumatic dispenser to duplicate original textured appearance.

Thumb Grade : Heavy bodied sealer for sealing large gaps and filling voids. Should remain soft and pliable.

Sound Deadeners

Non-structural Flexible Acoustical : Flexible foam with sealing and sound deadening properties.

Non-Structural Ridged Acoustical : Ridged foam with sealing and sound deadening properties.

Mastic Pads : Sound deadener pad that is preformed to fit a specific area.

Identifying Sealers

Several types of sealers and sound deadeners are used during assembly. Therefore, specific applications may not be identified in this publication. General applications and the various types of products for repair will be featured to identify and replace OEM sealers and sound deadeners.

Helpful Sealer Tips

- Check shelf life or expiration date prior to beginning sealer applications.
- Be sure "work time" is appropriate for sealer application.
- Temperature, humidity and thickness of sealer will affect the work, set and paintable times.
- Test fit replacement panels prior to installation to insure tight fit and proper seal.
- Equalize 2K Products according to adhesive manufacturer's recommendations.
- Always follow manufacturer's recommendations for storage, usage and application to achieve best performance of the product.

SOUND DEADENER LOCATIONS

DESCRIPTION	FIGURE
Dash (Left Hand Drive)	(Fig. 21)
Dash (Right Hand Drive)	(Fig. 22)
Front Floor Pan (Left Hand Drive)	(Fig. 23)
Front Floor Pan (Right Hand Drive)	(Fig. 24)
Mid Floor Pan	(Fig. 25)
Seat Tubs	(Fig. 26)
Standard Roof	(Fig. 27)
Sunroof Roof	(Fig. 28)
Front Wheelhouse	(Fig. 29)
Rear Wheelhouses	(Fig. 30)


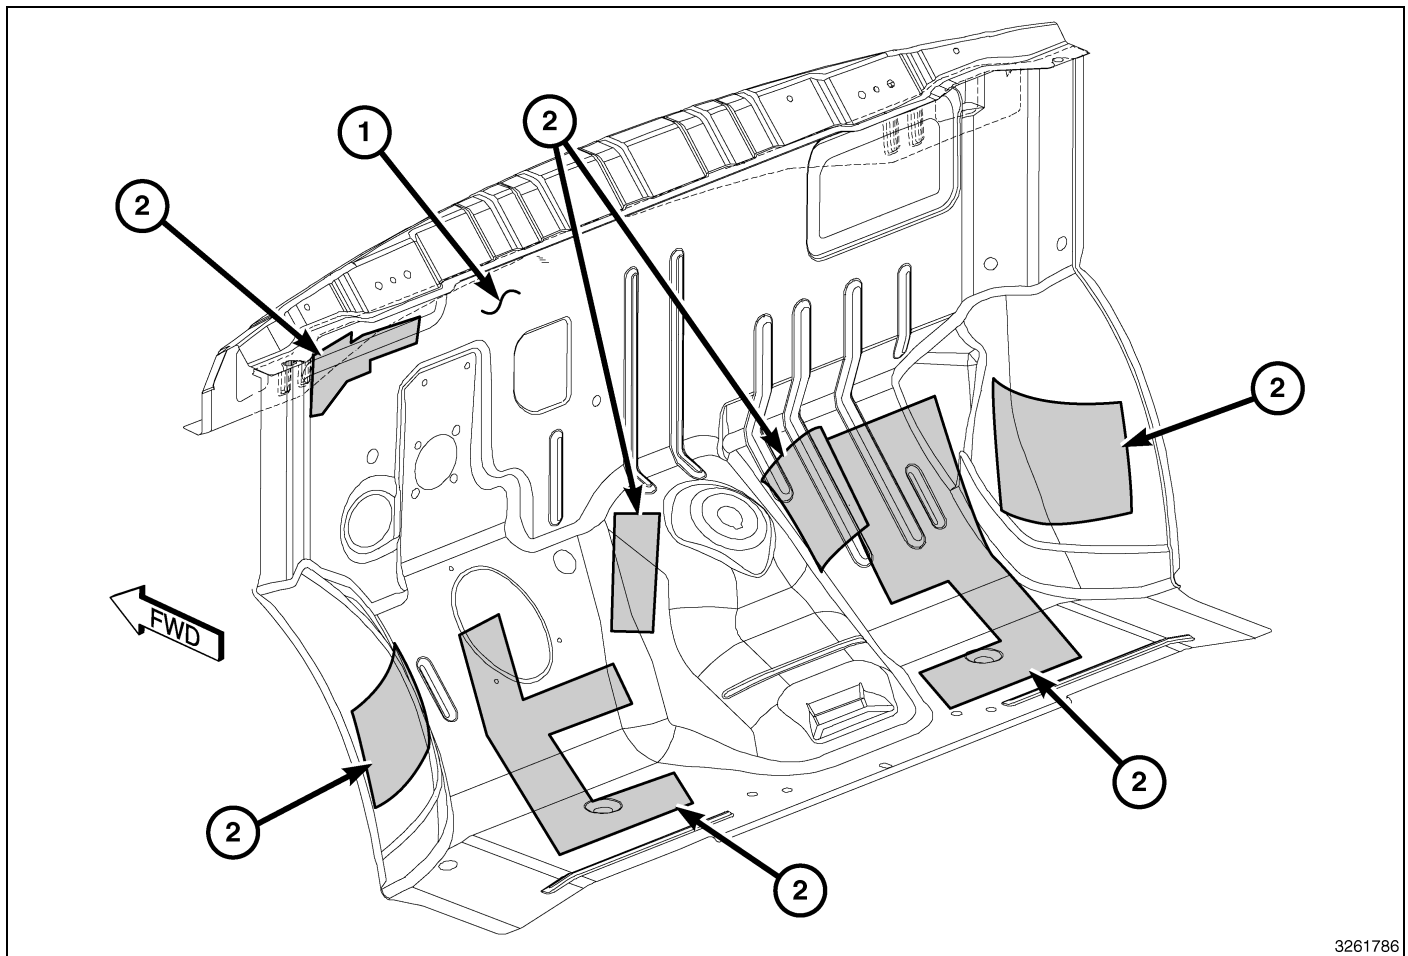


Fig. 21 DASH (LEFT HAND DRIVE)

1 - DASH

2 - LIQUID APPLIED SOUND DEADENER

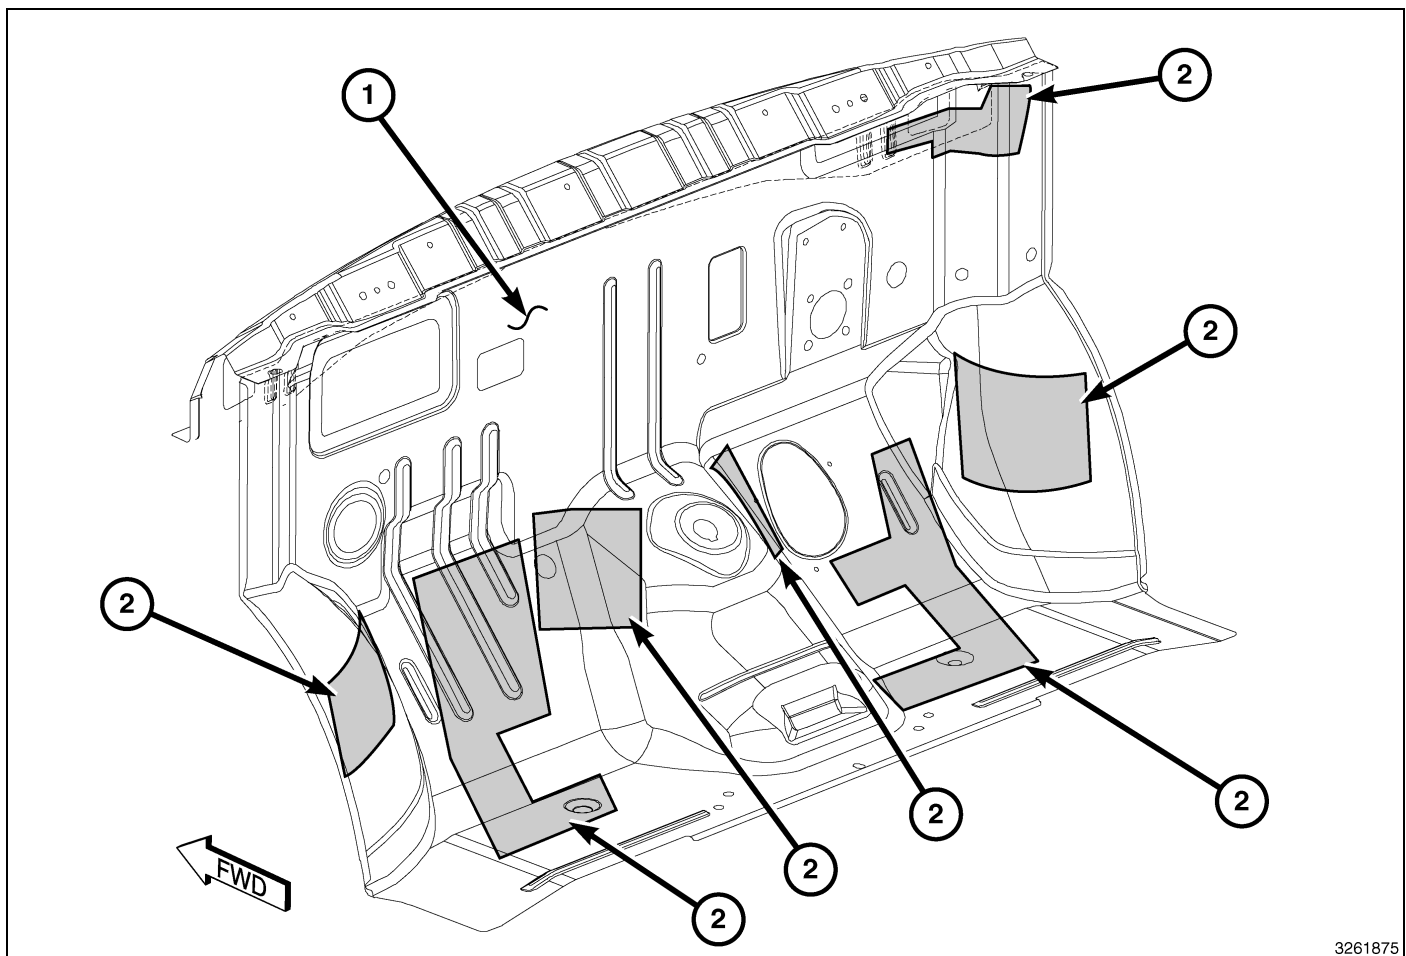

3261875

Fig. 22 DASH (RIGHT HAND DRIVE)

1 - DASH

2 - LIQUID APPLIED SOUND DEADENER


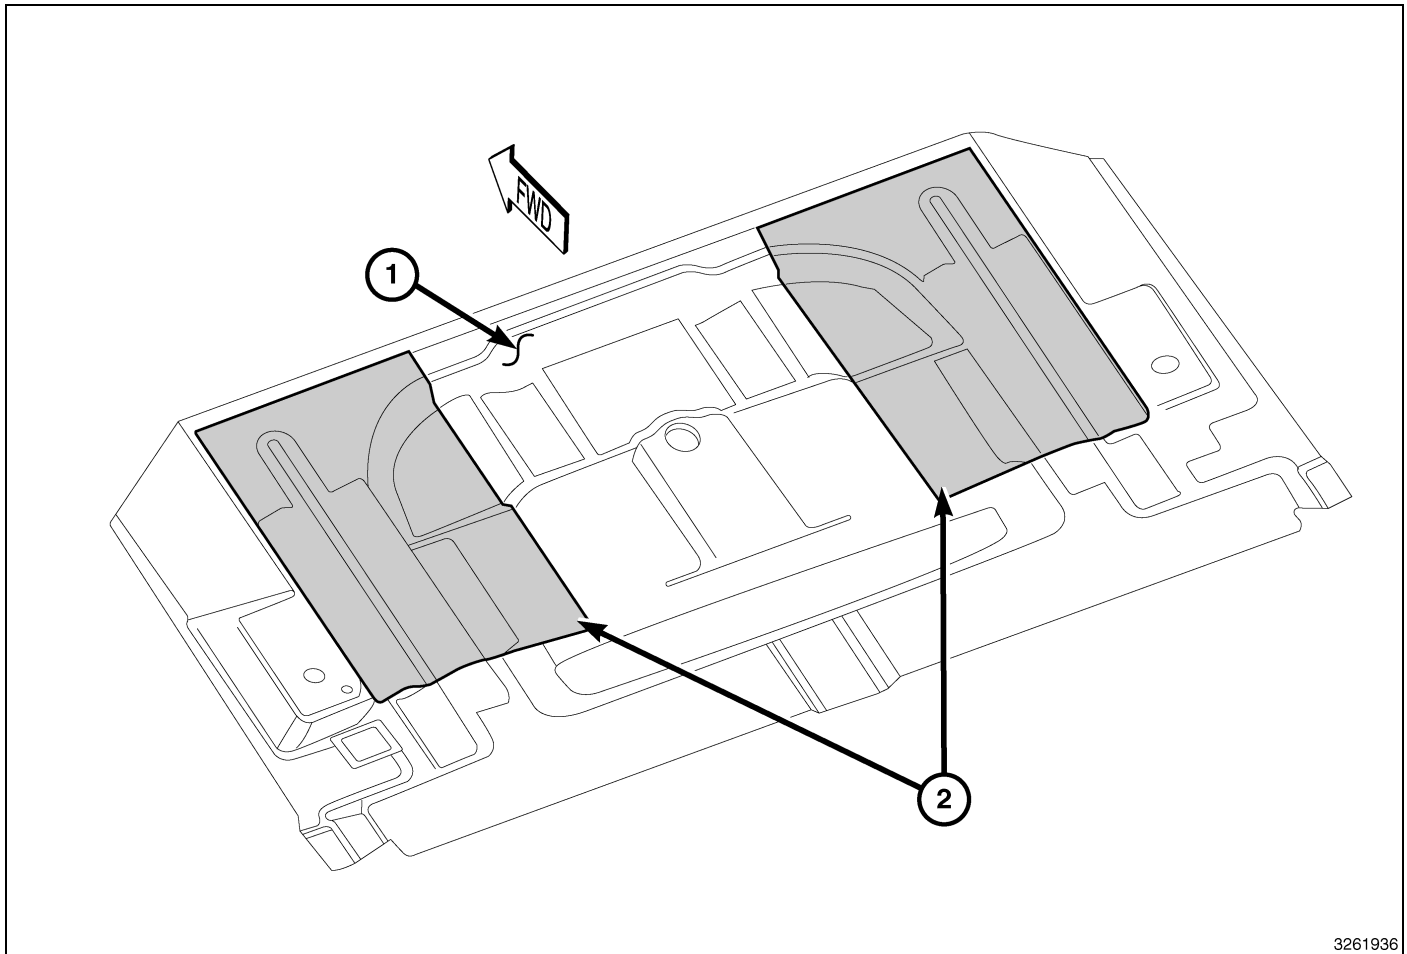


Fig. 23 FRONT FLOOR (LEFT HAND DRIVE)

1 - FRONT FLOOR (RIGHT HAND DRIVE)

2 - LIQUID APPLIED SOUND DEADENER

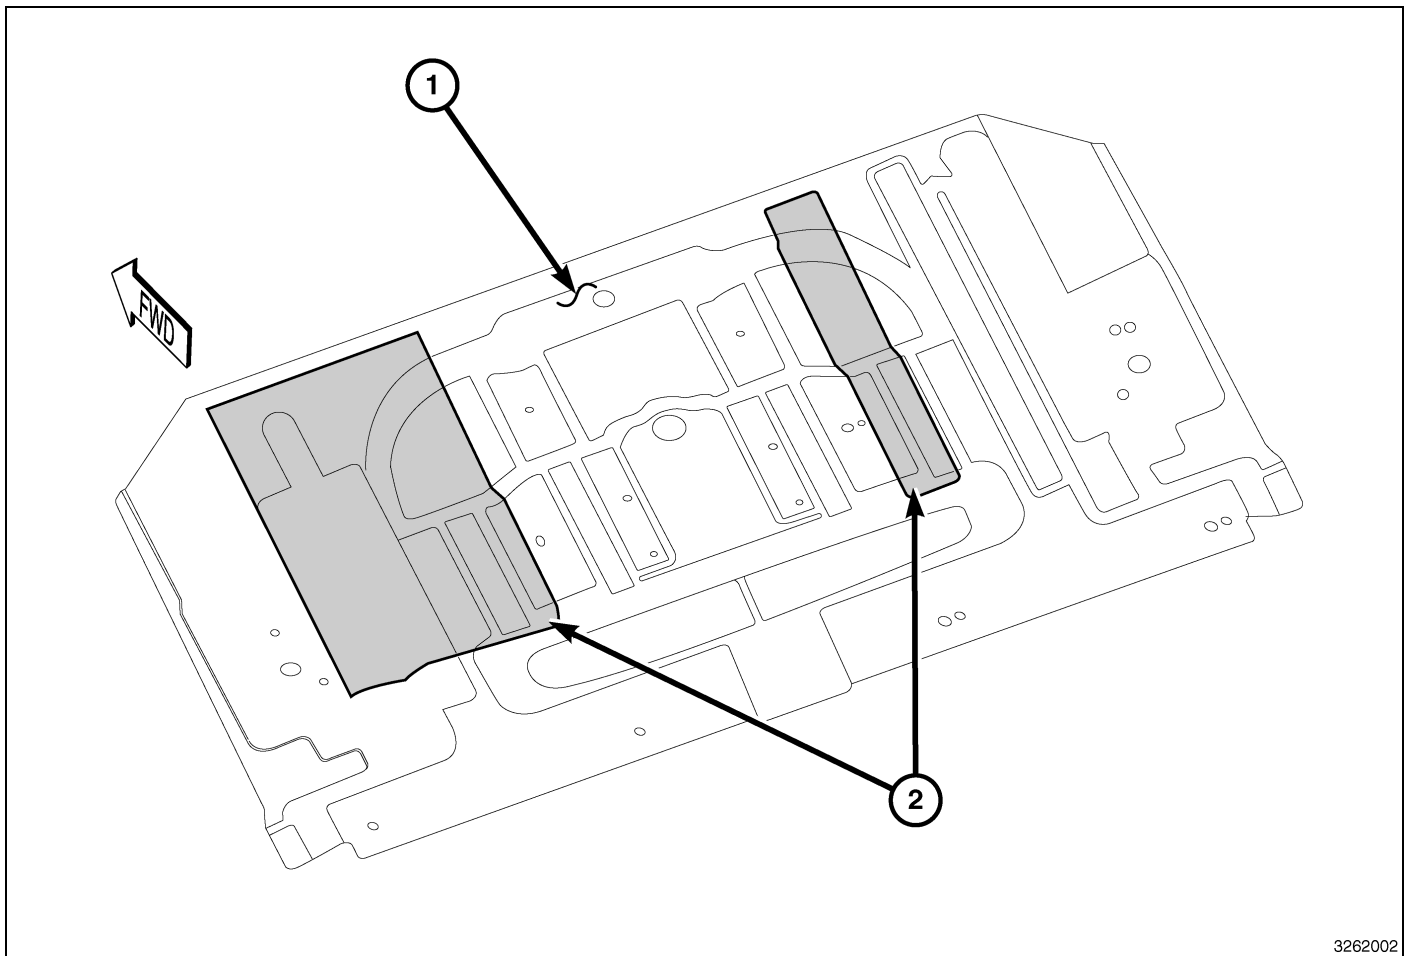

3262002

Fig. 24 FRONT FLOOR (RIGHT HAND DRIVE)

1 - FRONT FLOOR (RIGHT HAND DRIVE)

2 - LIQUID APPLIED SOUND DEADENER


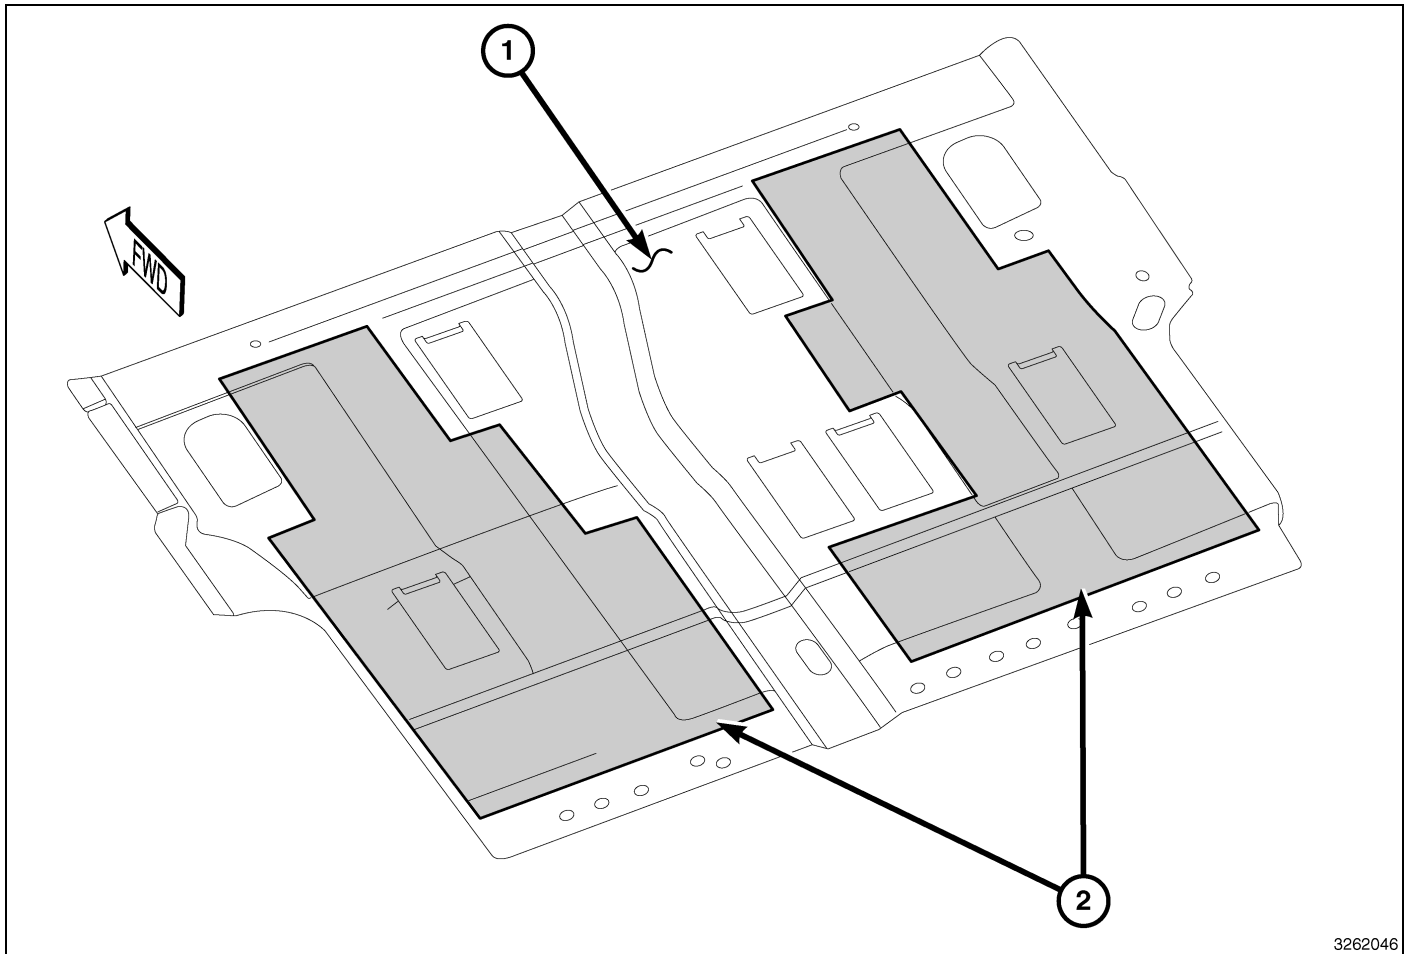


Fig. 25 MID FLOOR

1 - MID FLOOR

2 - LIQUID APPLIED SOUND DEADENER

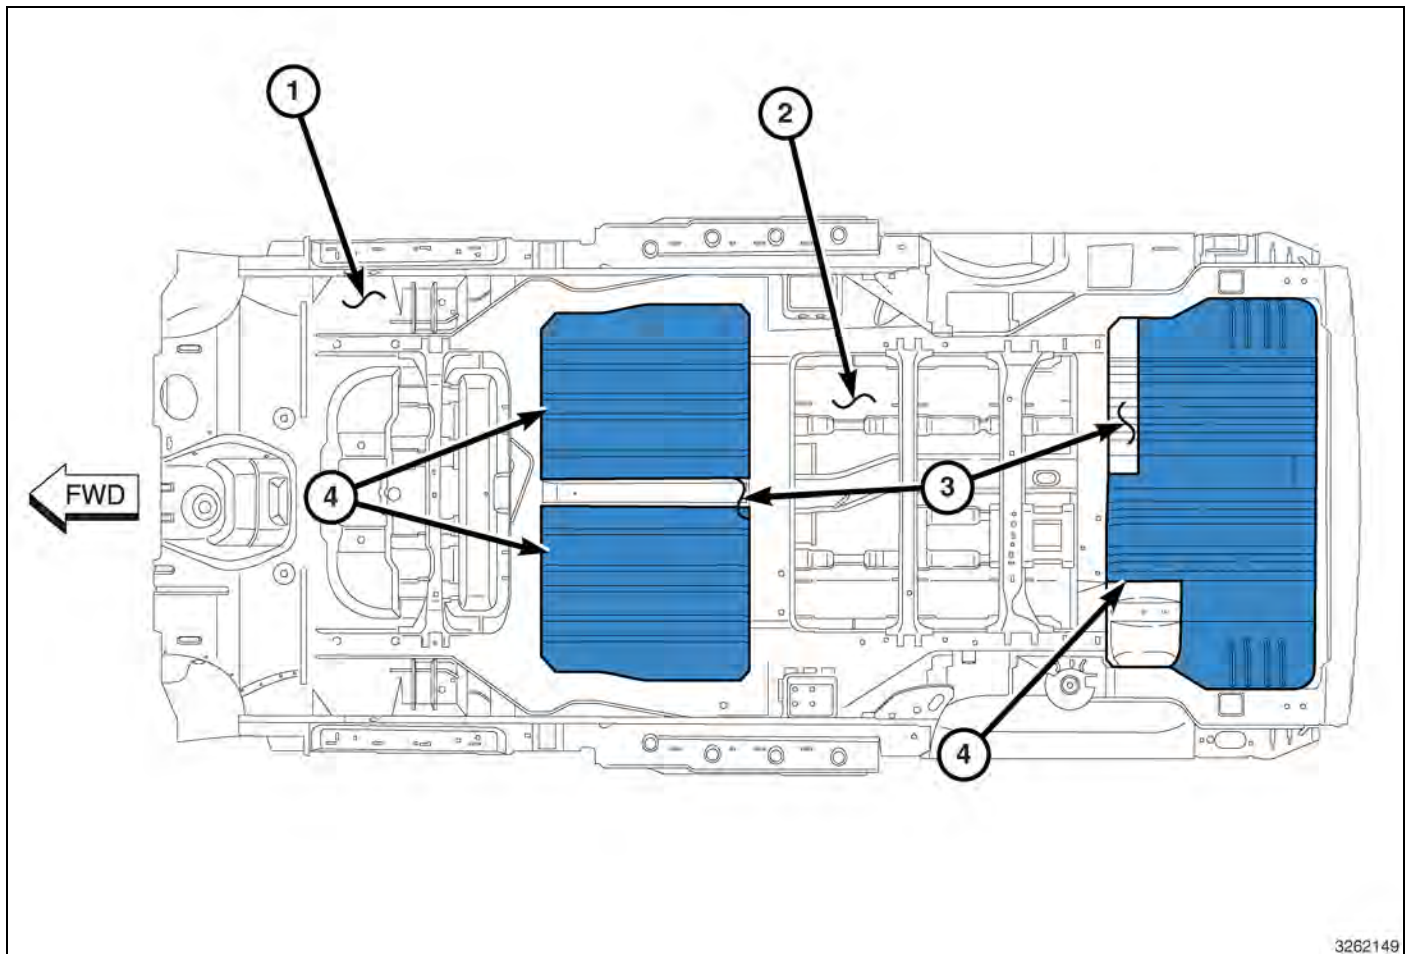

3262149

Fig. 26 SEAT TUBS

- 1 - FRONT FLOOR
- 2 - MID FLOOR
- 3 - SEAT TUBS
- 4 - UNDERCOAT FLUID DEADENER

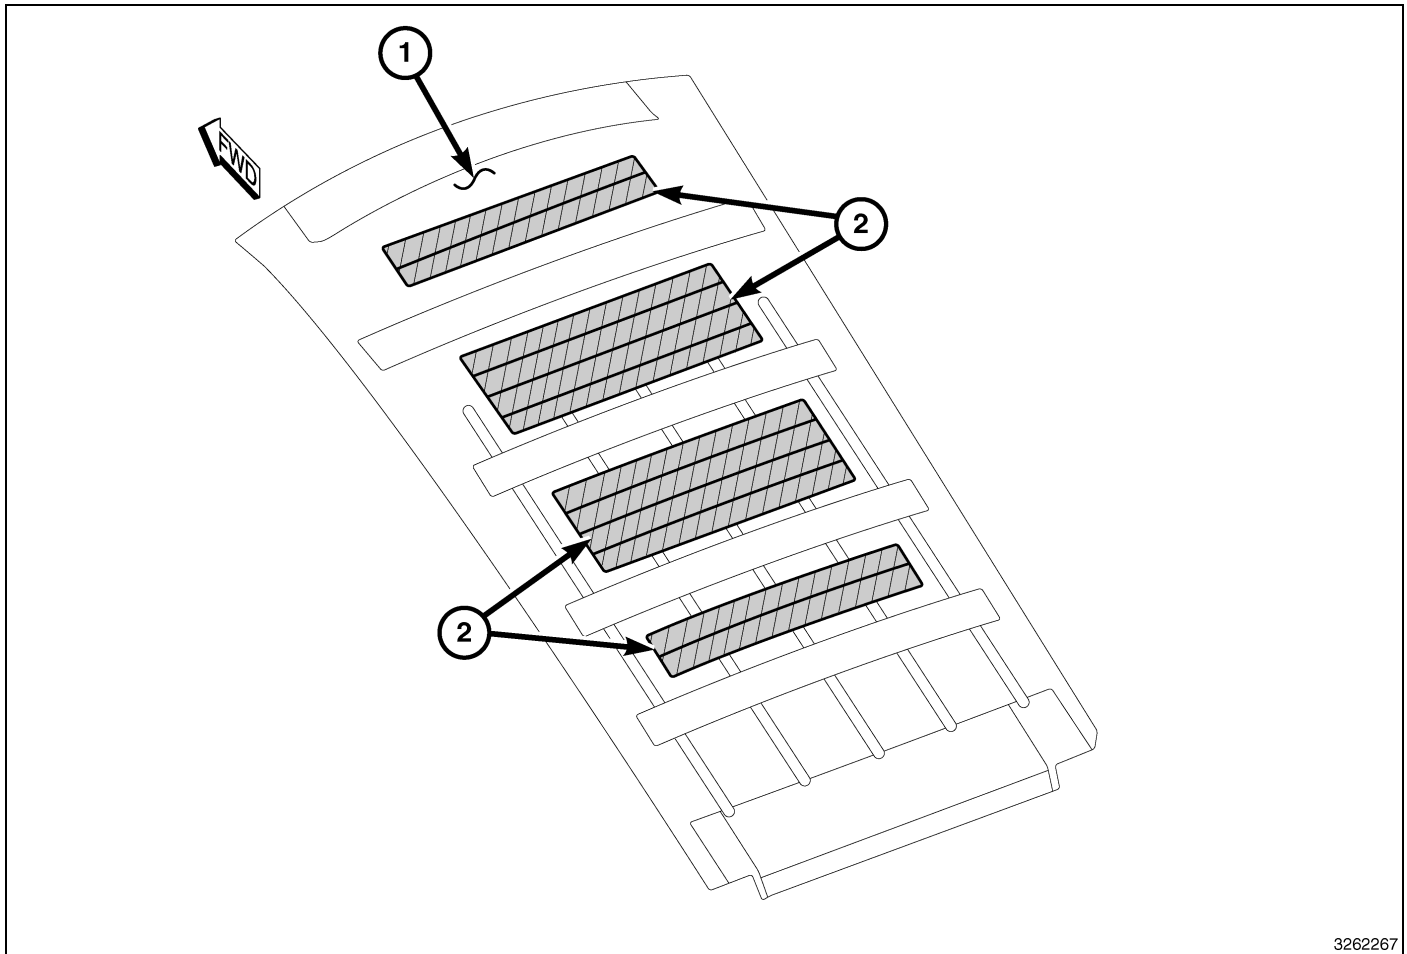


Fig. 27 STANDARD ROOF

1 - STANDARD ROOF

2 - LIQUID APPLIED SOUND DEADENER

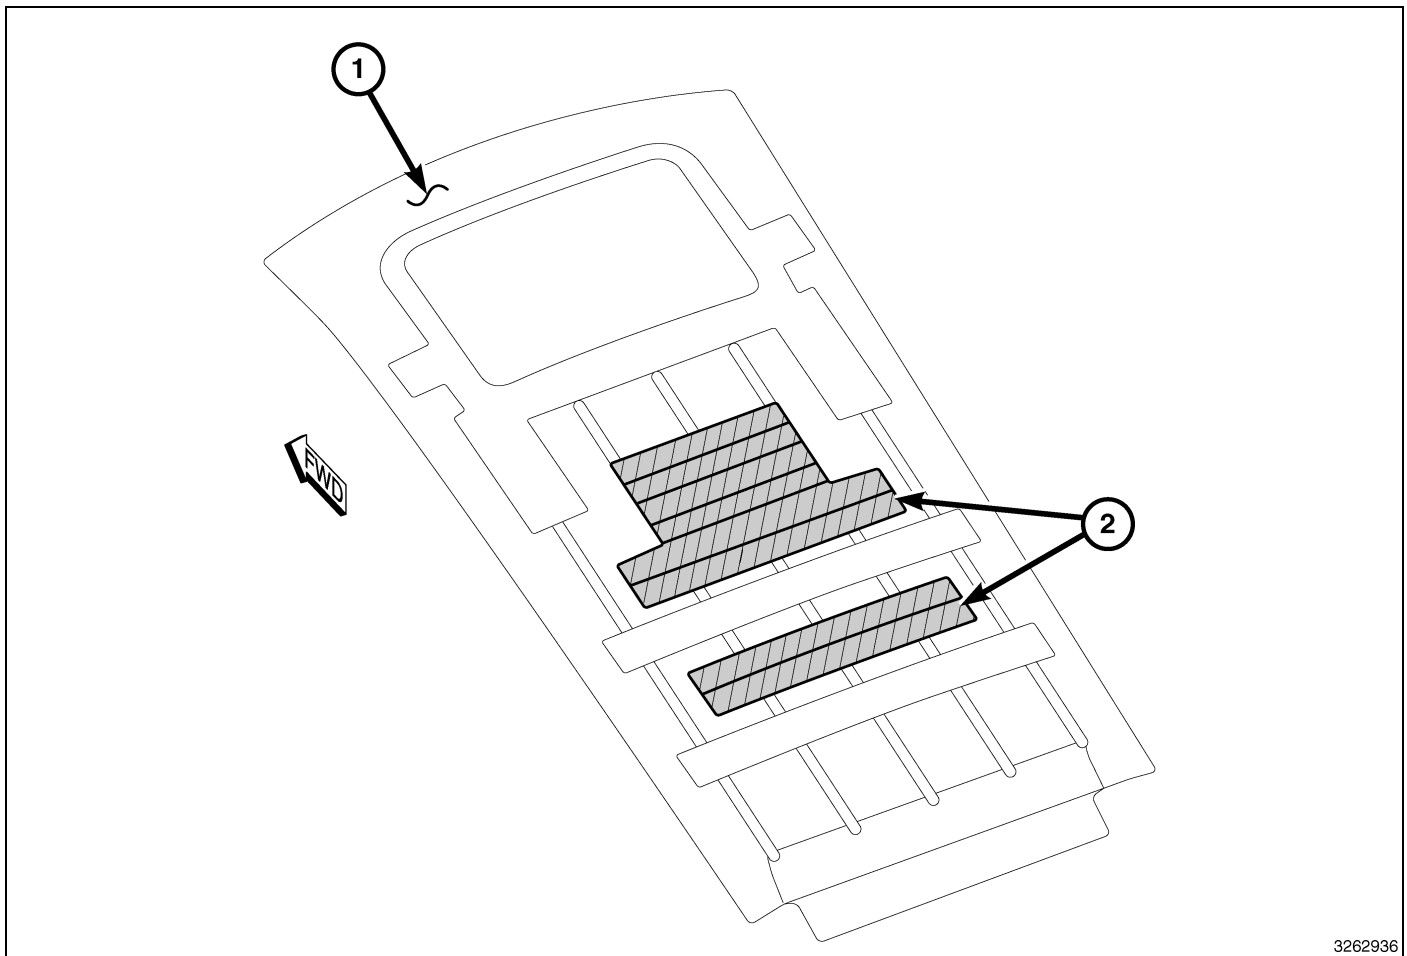


Fig. 28 SUNROOF ROOF

1 - SUNROOF ROOF

2 - LIQUID APPLIED SOUND DEADENER



Fig. 29 FRONT WHEELHOUSE

NOTE: Right hand shown, left hand typical

- 1 - FRONT WHEELHOUSE
2 - LIQUID APPLIED SOUND DEADENER
3 - COVERAGE AREA

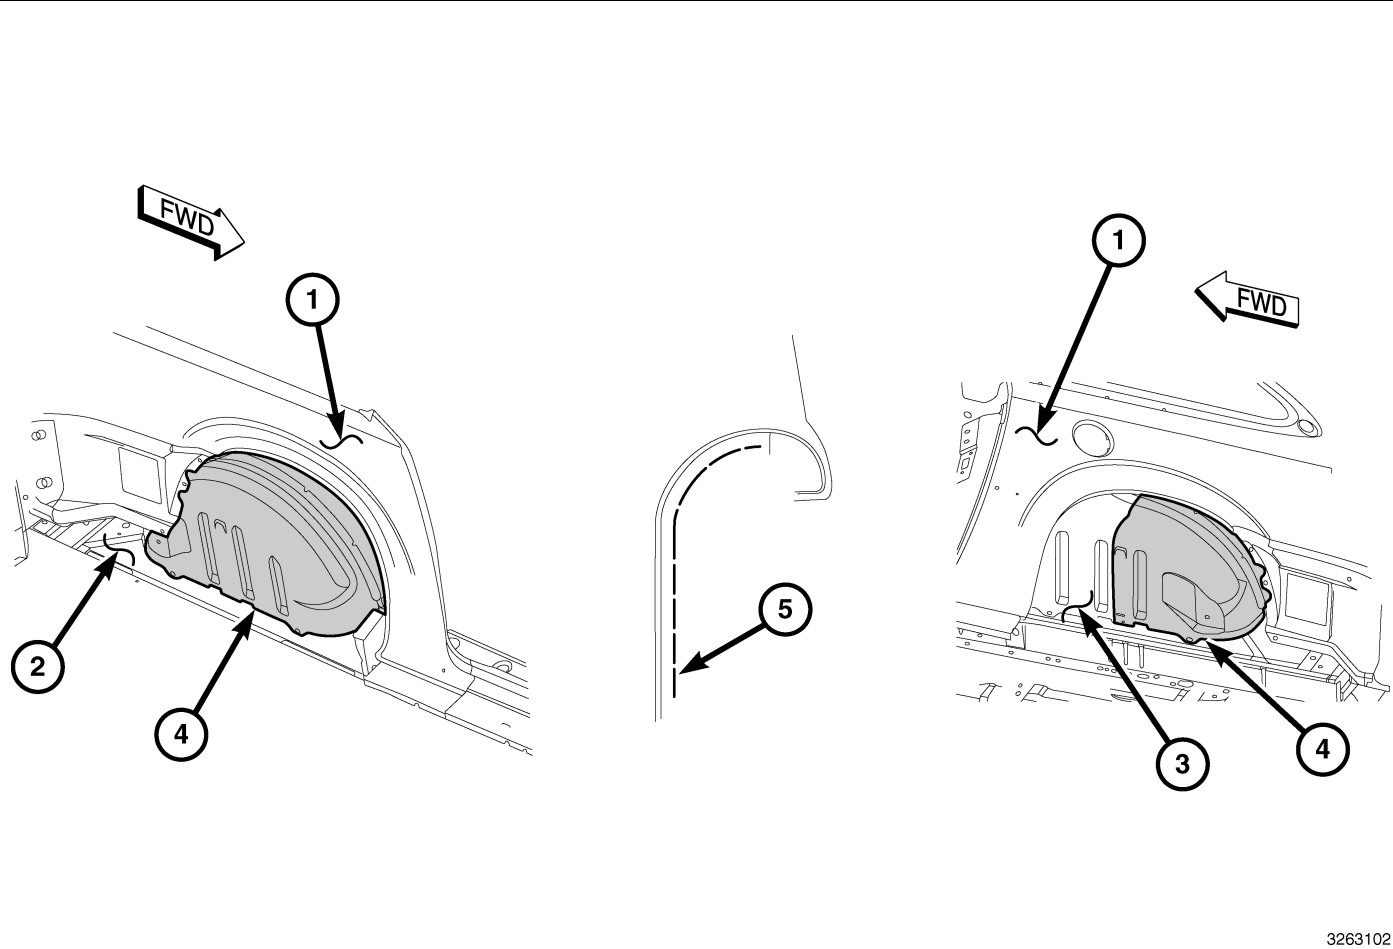


Fig. 30 REAR WHEELHOUSES

- 1 - OUTER BODY SIDE APERTURE
- 2 - RIGHT REAR WHEELHOUSE
- 3 - LEFT REAR WHEELHOUSE
- 4 - LIQUID APPLIED SOUND DEADENER
- 5 - COVERAGE AREA

SEALER LOCATIONS

Seam sealers should only be applied by trained technicians. Follow the manufacturer instructions for proper applications of products.

Any situation where it is undetermined weather it is structural adhesives or seam sealer always default to structural adhesive.

Seam sealers are only to be used topically, never within weld flanges or hem flanges. All sealers being replaced should duplicate the factory style sealer in shape and size.

For additional information refer to Corrosion Protection, (Refer to Collision Information - Standard Procedure), and Sealer and Sound Description as found in,(Refer to Collision Information - Locations)

Chrysler approved replacement materials include -Mopar #04318026, Fusor 129, 3M 08308, or equivalent.

SEALER LOCATIONS	FIGURE
Roof / Front Body Side Aperture (1 of 2)	(Fig. 31)
Roof / Front Body Side Aperture (2 of 2)	(Fig. 32)
Upper Cowl / Front Body Side Aperture	(Fig. 33)

SEALER LOCATIONS	FIGURE
Shock Tower / Shock Tower Reinforcement	(Fig. 34)
Dash / Cowl Side Panel	(Fig. 35)
B-Pillar / Front Body Side Aperture	(Fig. 36)
Outer Roof Rail / Upper Roof Rail	(Fig. 37)
Body Side Outer / Slider Door Striker Reinforcement	(Fig. 38)
Outer Body Side Sill / Outer Body Side Aperture (Front and Rear)	(Fig. 39)
Front Floor Pan / Dash Panel Inner Side Sill	(Fig. 40)
Outer Rear Wheelhouse / Inner Quarter Panel Complete (1 of 2)	(Fig. 41)
Outer Rear Wheelhouse / Inner Quarter Panel Complete (2 of 2)	(Fig. 42)
Outer Wheelhouse / Inner Quarter Rear Jack Reinforcement (1 of 2)	(Fig. 43)
Outer Wheelhouse / Inner Quarter Rear Jack Reinforcement (2 of 2)	(Fig. 44)
Rear Wheelhouse Body / Side Aperture Inner Panel (1 of 2)	(Fig. 45)
Rear Wheelhouse Body / Side Aperture Inner Panel (2 of 2)	(Fig. 46)
Roof / Body Side Aperture	(Fig. 47)
Roof / Liftgate Drain Trough (1 of 2)	(Fig. 48)
Roof / Liftgate Drain Trough (2 of 2)	(Fig. 49)
Third Row Tub Rail Cover / Rear Quarter Inner	(Fig. 50)
Tail Lamp Can (1 of 2)	(Fig. 51)
Tail Lamp Can (2 of 2)	(Fig. 52)

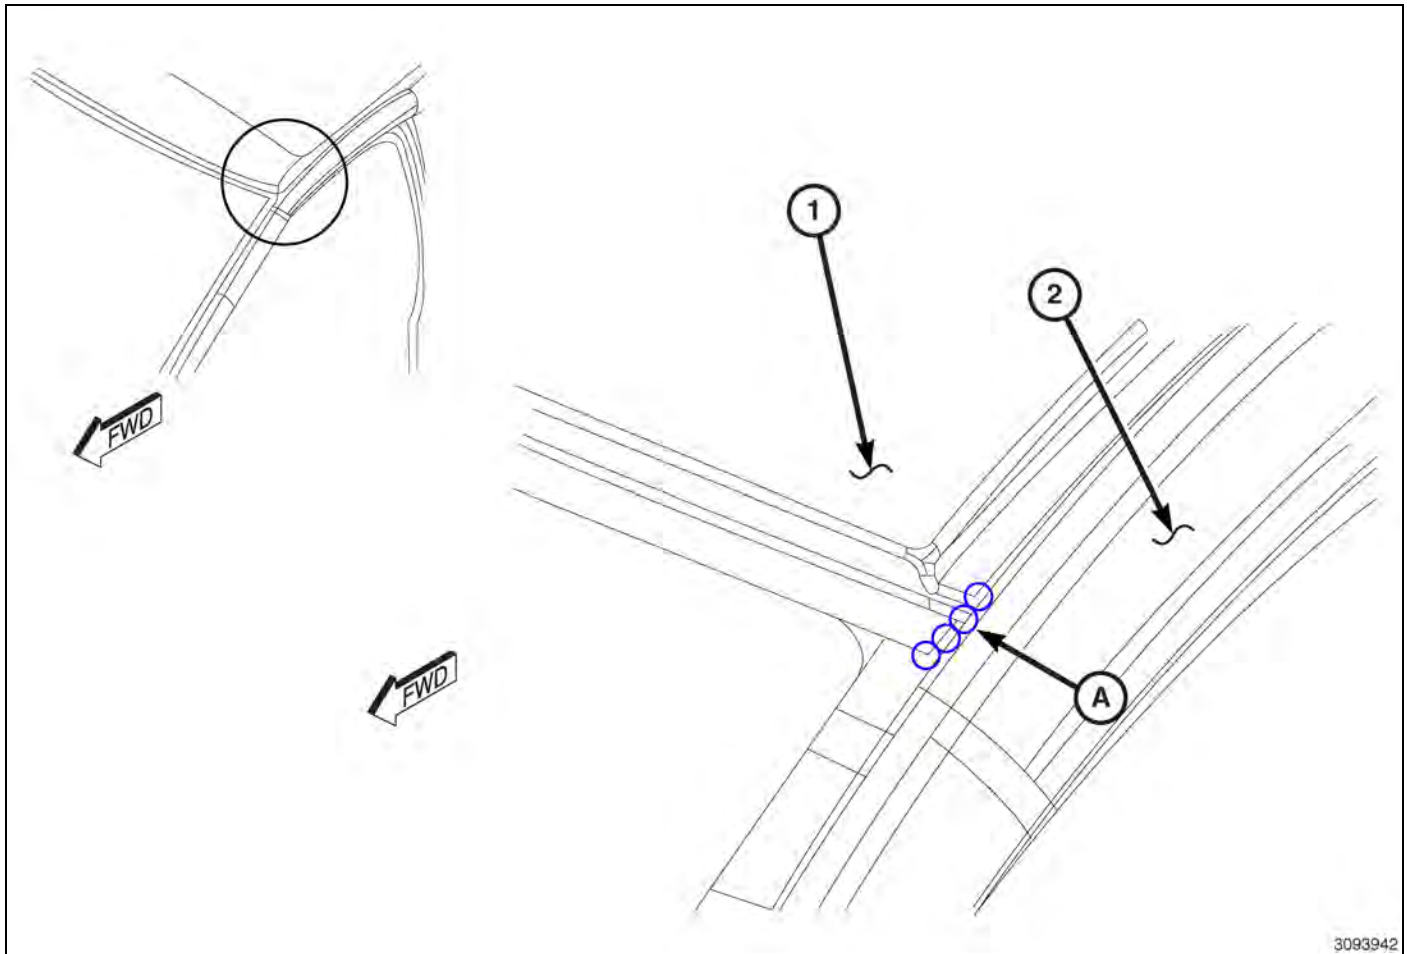


Fig. 31 Roof / Front Body Side Aperture (1 of 2)

NOTE: Left side shown, right side typical

A - SEAM SEALER

1 - ROOF PANEL

2 - BODY SIDE APERTURE FRONT PANEL

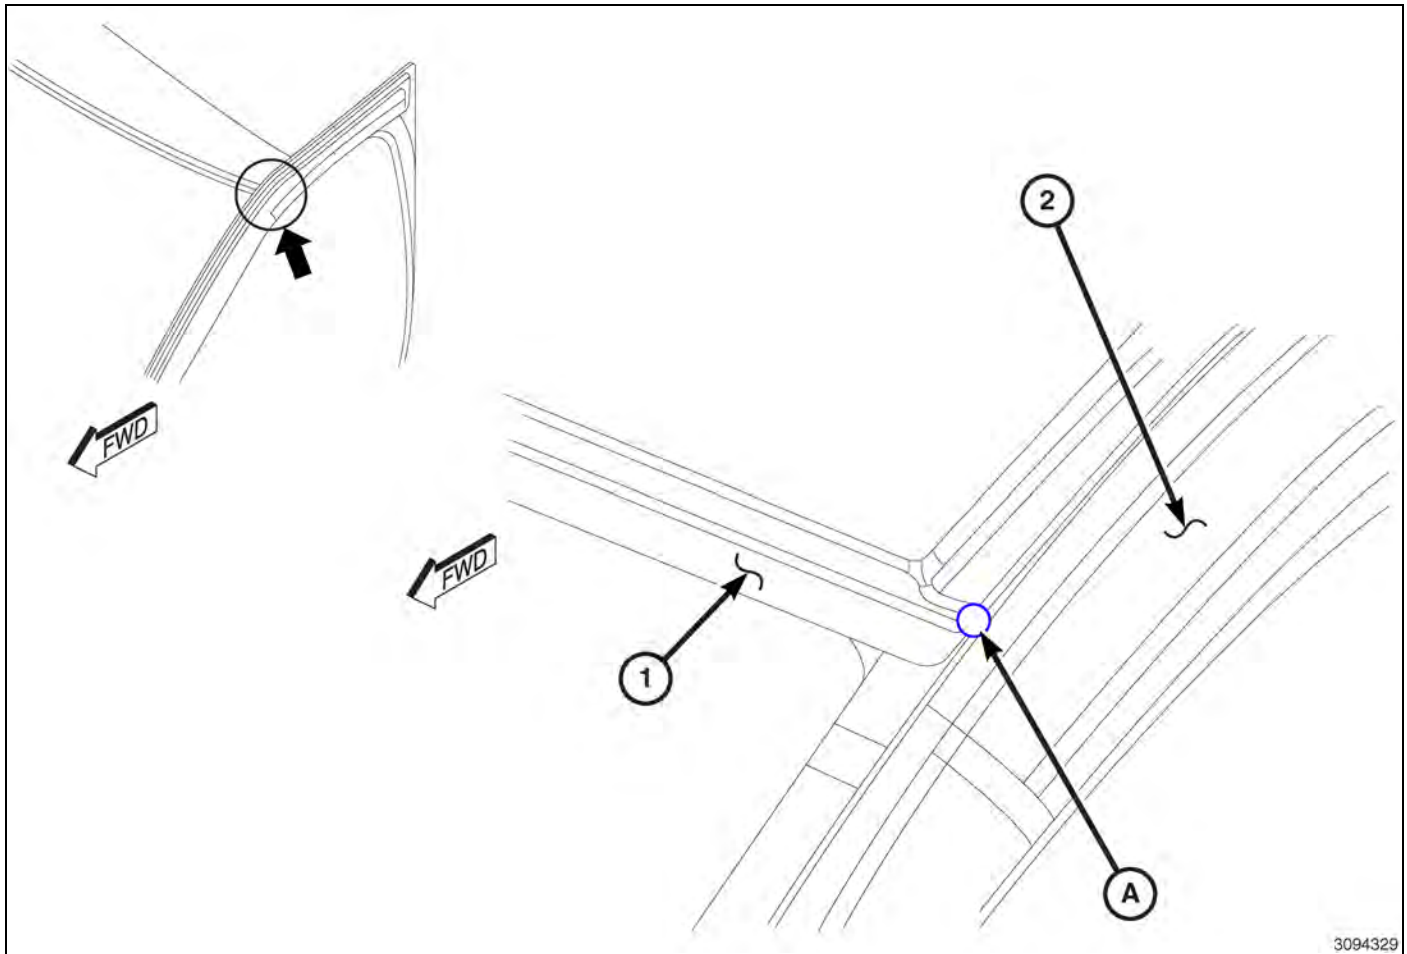



Fig. 32 Roof / Front Body Side Aperture (2 of 2)

NOTE: Left side shown, right side typical

A - SEAM SEALER (THUMB GRADE)

1 - ROOF PANEL

2 - BODY SIDE APERTURE FRONT PANEL

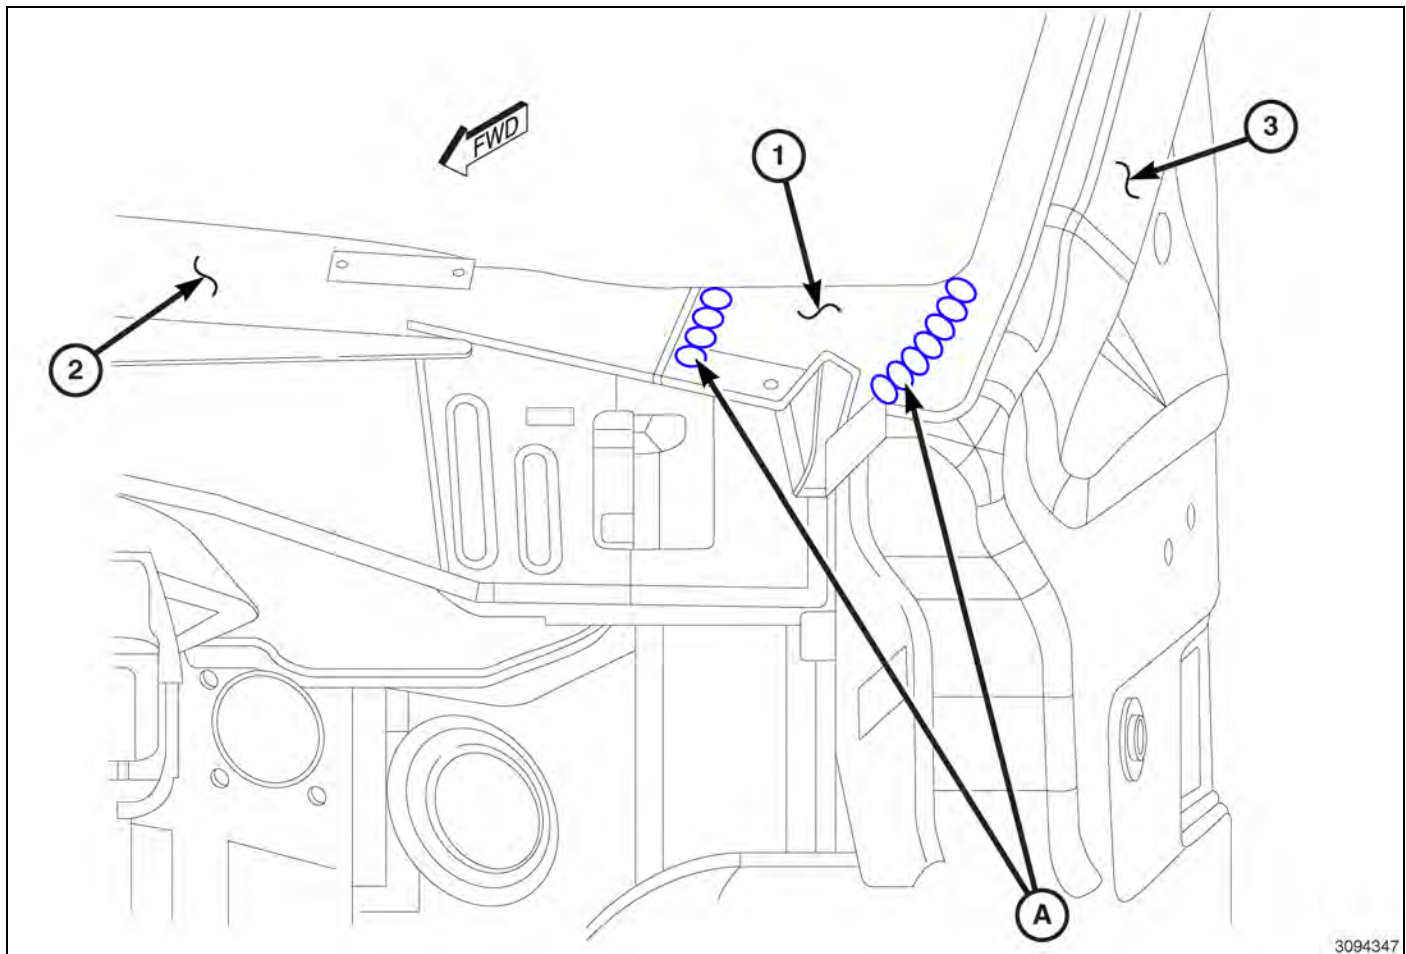

3094347

Fig. 33 Upper Cowl / Front Body Side Aperture

NOTE: Left side shown, right side typical

A - SEAM SEALER

Collision Information SIDE APERTURE FRONT INNER

2 - COWL PLENUM UPPER PANEL

3 - BODY SIDE APERTURE FRONT OUTER

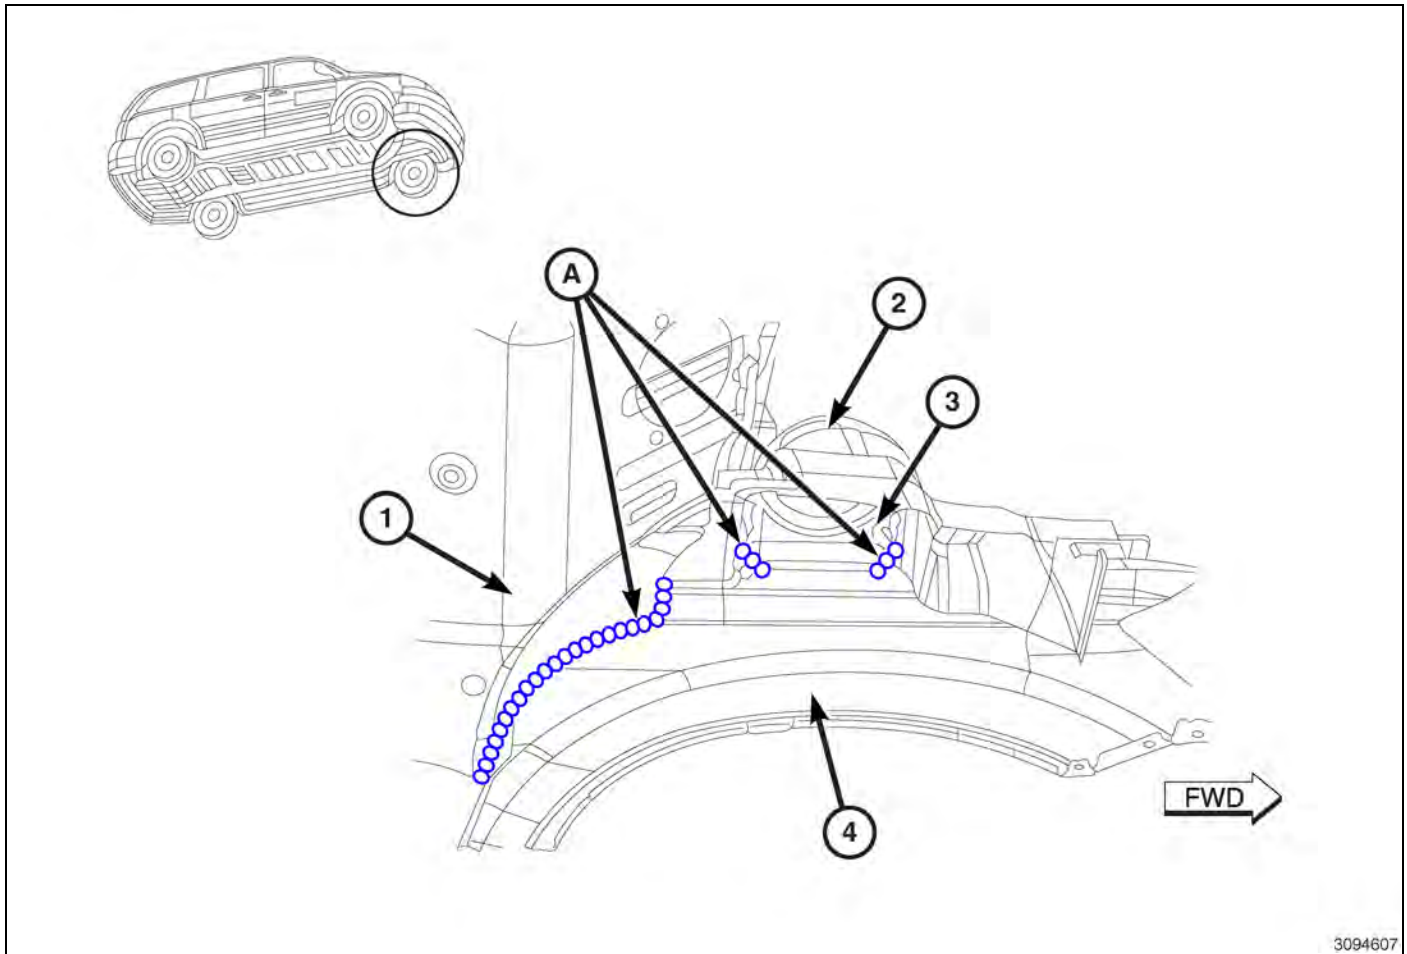


Fig. 34 Shock Tower / Shock Tower Reinforcement

NOTE: Left side shown, right side typical

- A - SEAM SEALER
- 1 - DASH PANEL
- 2 - FRONT SUSPENSION ISOLATION TOWER
- 3 - TOWER CAP
- 4 - LEFT FENDER (INNER FACE)

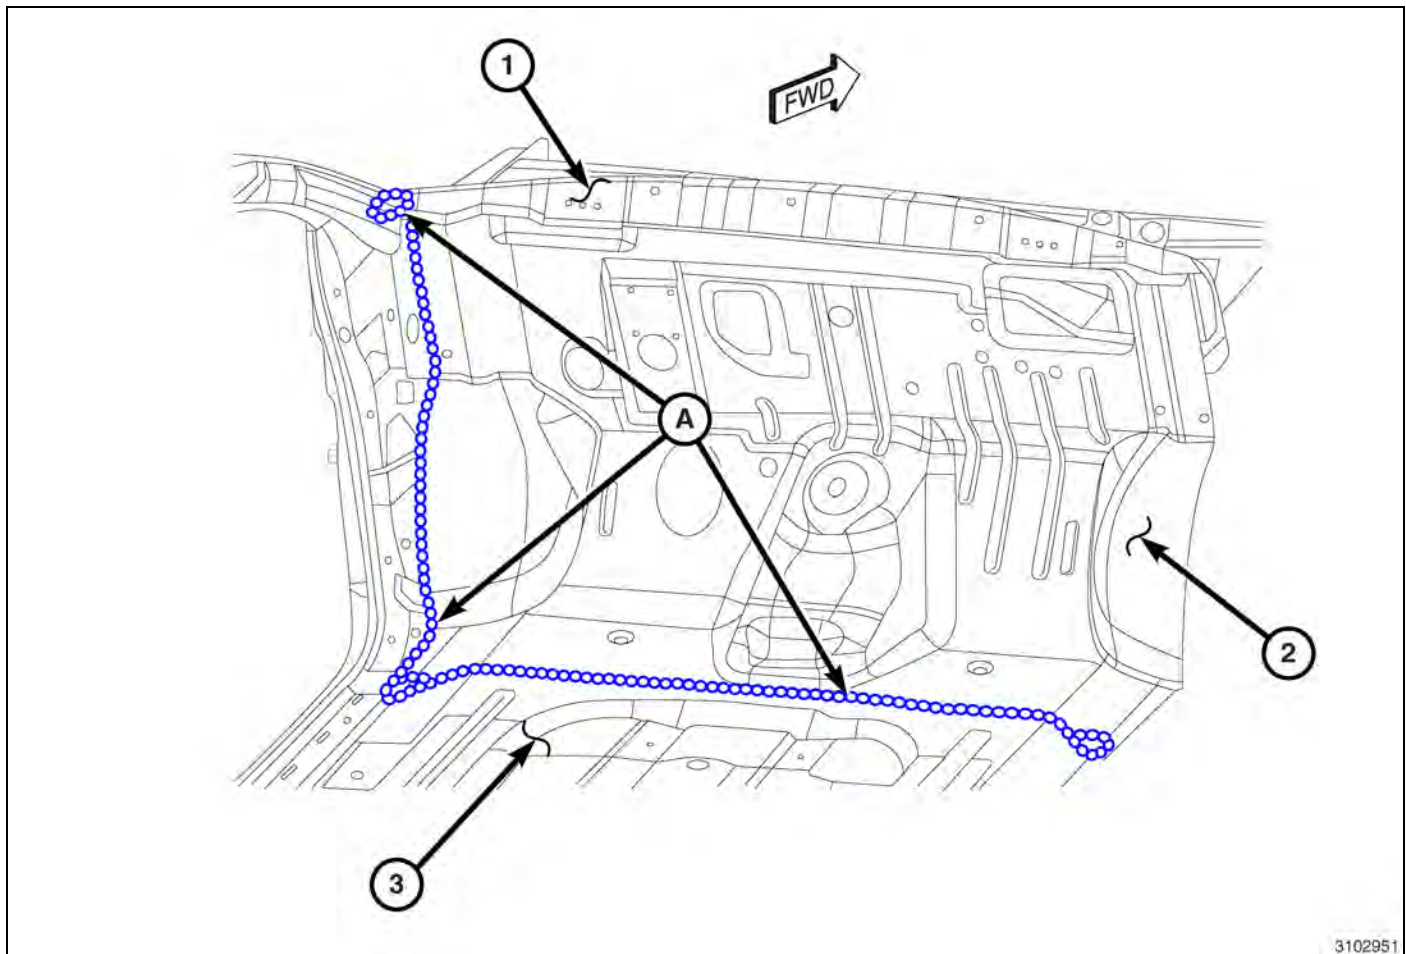


Fig. 35 Dash / Cowl Side Panel

NOTE: Right side shown, left side typical

- A - SEAM SEALER
- 1 - PLENUM PANEL
- 2 - DASH PANEL
- 3 - FRONT FLOOR

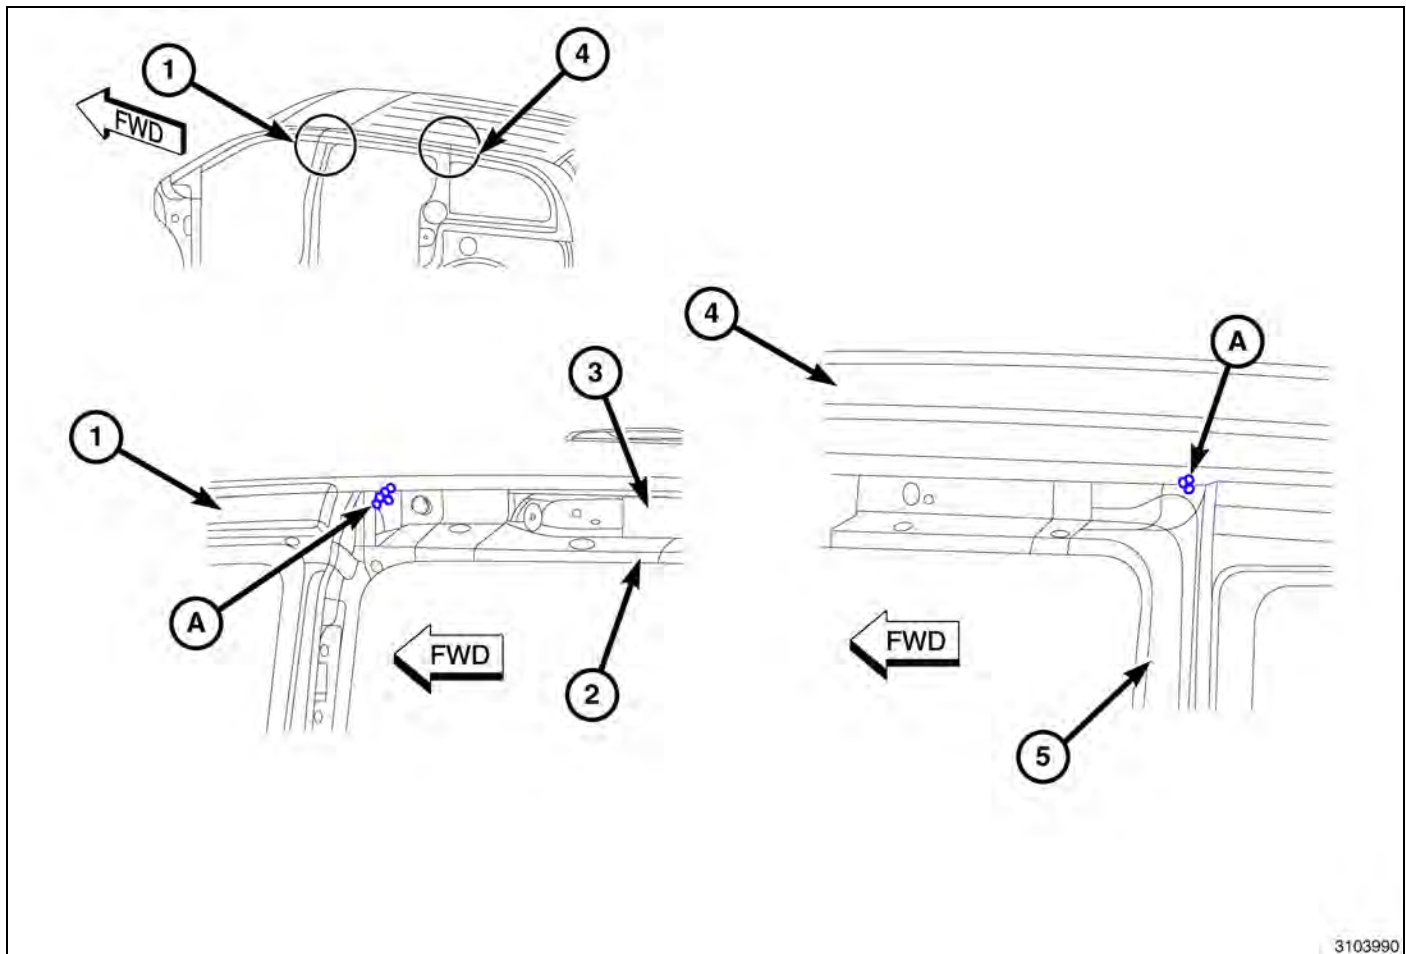


Fig. 36 B-Pillar / Front Body Side Aperture

NOTE: Left side shown, right side typical

A - SEAM SEALER (THUMB GRADE)

1 - FRONT BODY SIDE APERTURE

2 - ROOF RAIL SLIDING DOOR PANEL

3 - ROOF RAIL UPPER OUTER PANEL

4 - ROOF PANEL

5 - BODY SIDE APERTURE REAR

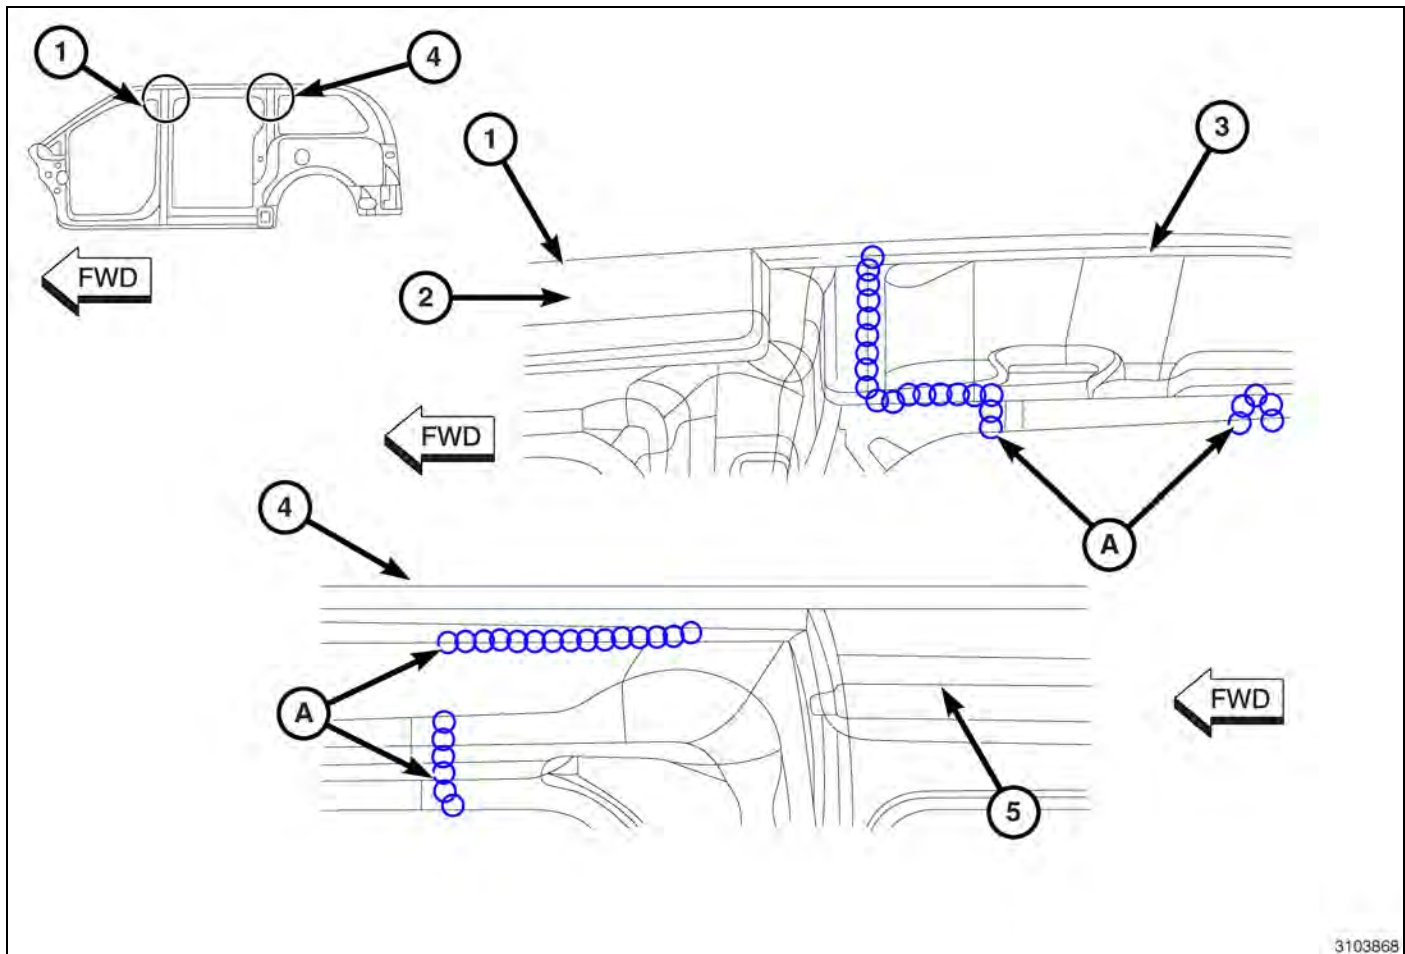


Fig. 37 Outer Roof Rail / Upper Roof Rail

NOTE: Left side shown, right side typical

A - SEAM SEALER (THUMB GRADE)

1 - B-PILLAR VIEW

2 - BODY SIDE APERTURE FRONT

3 - ROOF RAIL UPPER OUTER PANEL

4 - ROOF/C-PILLAR VIEW

5 - BODY SIDE APERTURE REAR

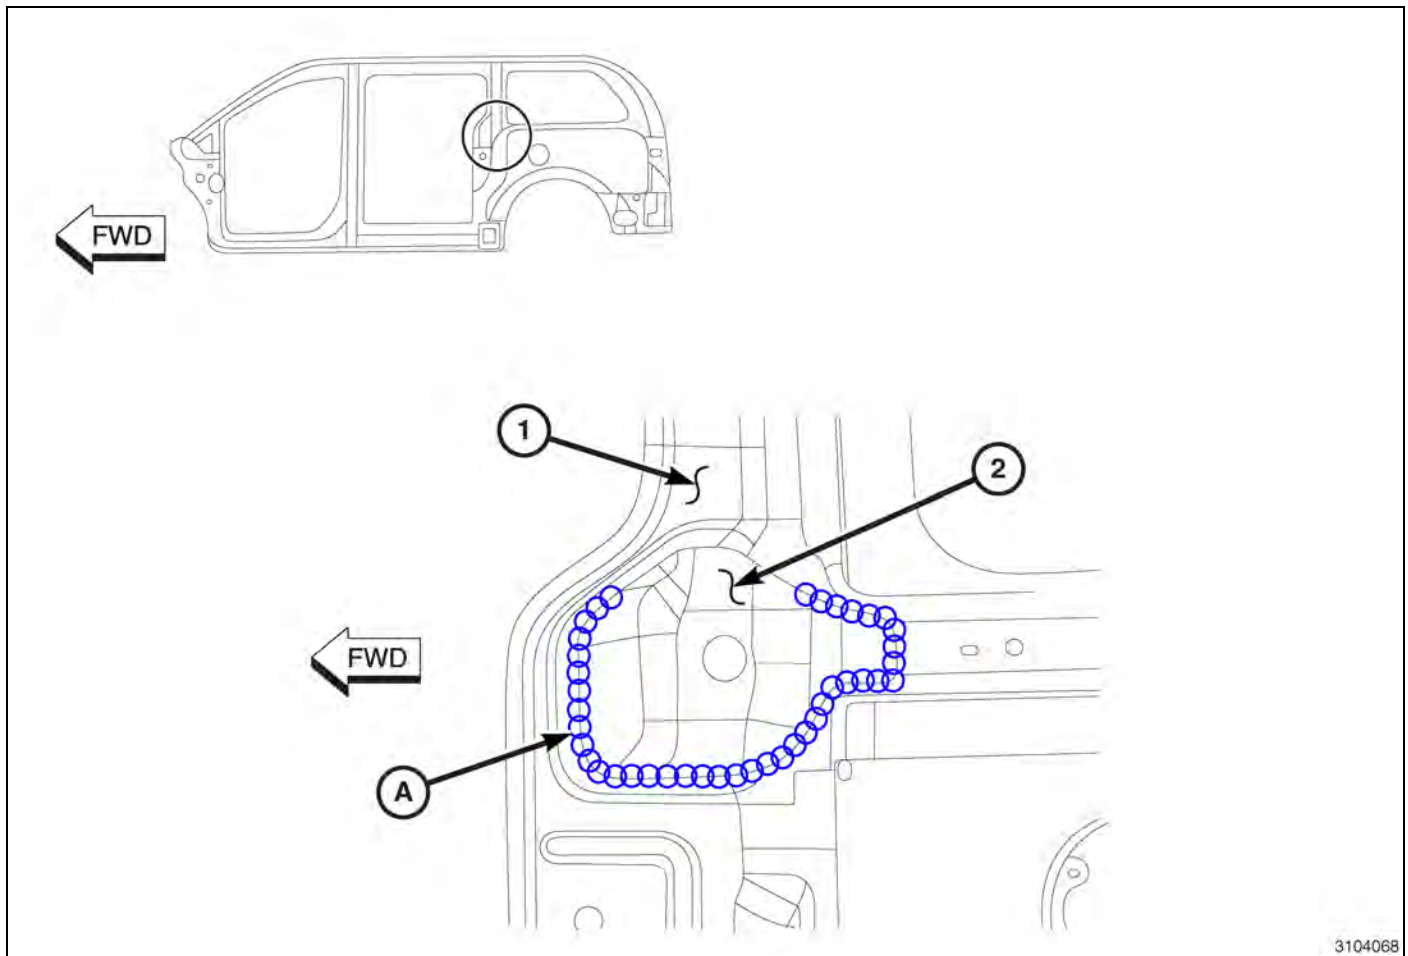


Fig. 38 Body Side Outer / Slider Door Striker Reinforcement

NOTE: Left side shown, right side typical

A - SEAM SEALER

Collision Information SIDE APERTURE REAR PANEL

2 - BODY SIDE APERTURE SLIDING DOOR LATCH STRIKER REINFORCEMENT

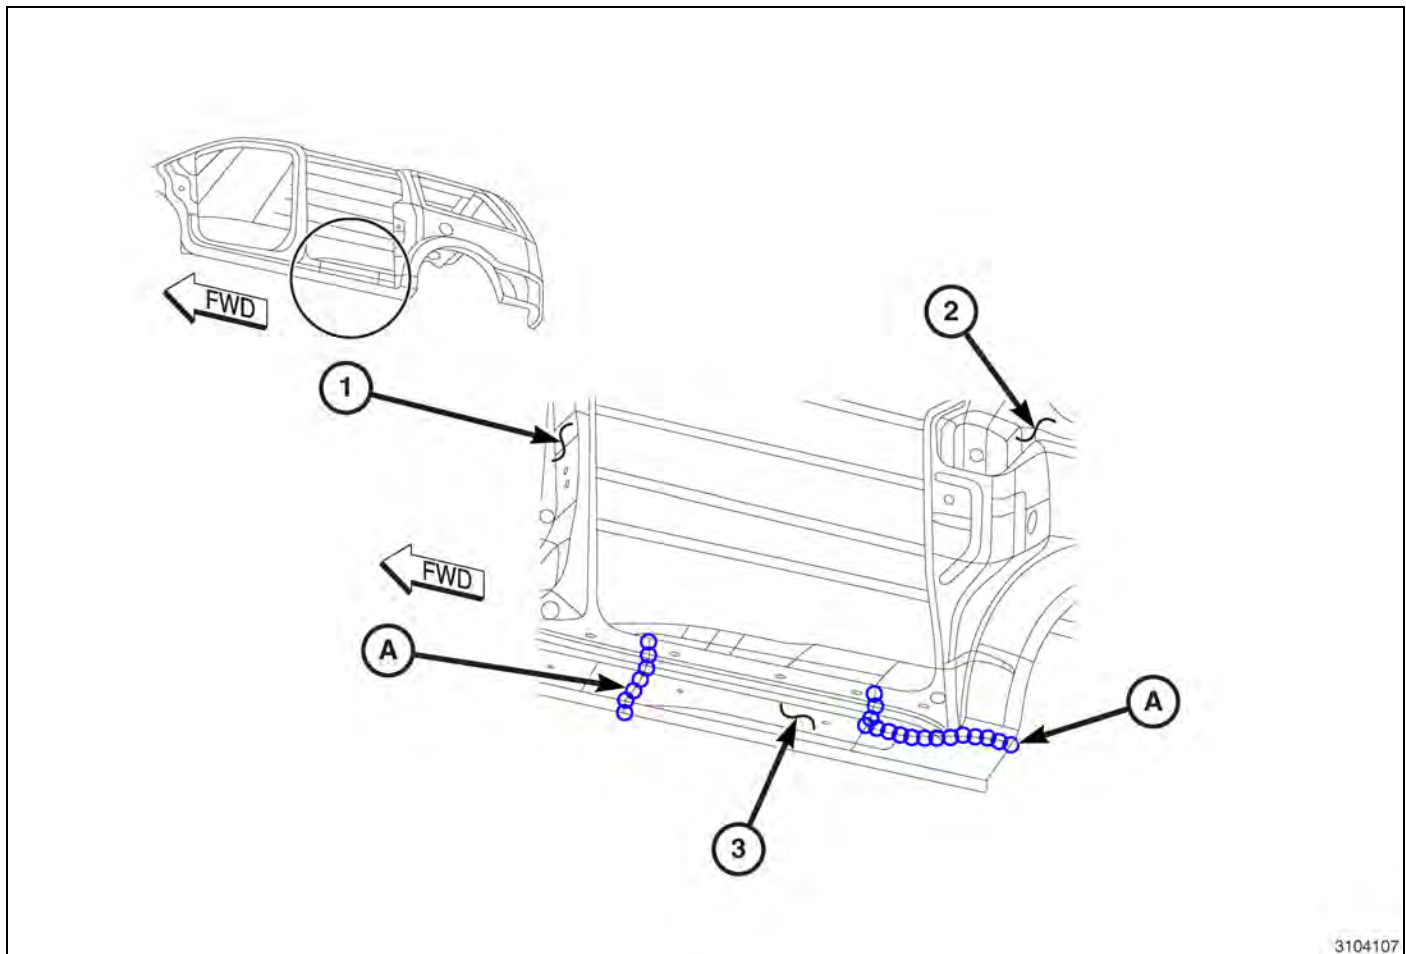


Fig. 39 Outer Body Side Sill / Outer Body Side Aperture (Front and Rear)


NOTE: Left side shown, right side typical

A - SEAM SEALER (THUMB GRADE)

Collision Information SIDE APERTURE FRONT

2 - BODY SIDE APERTURE REAR

3 - BODY SIDE SILL OUTER

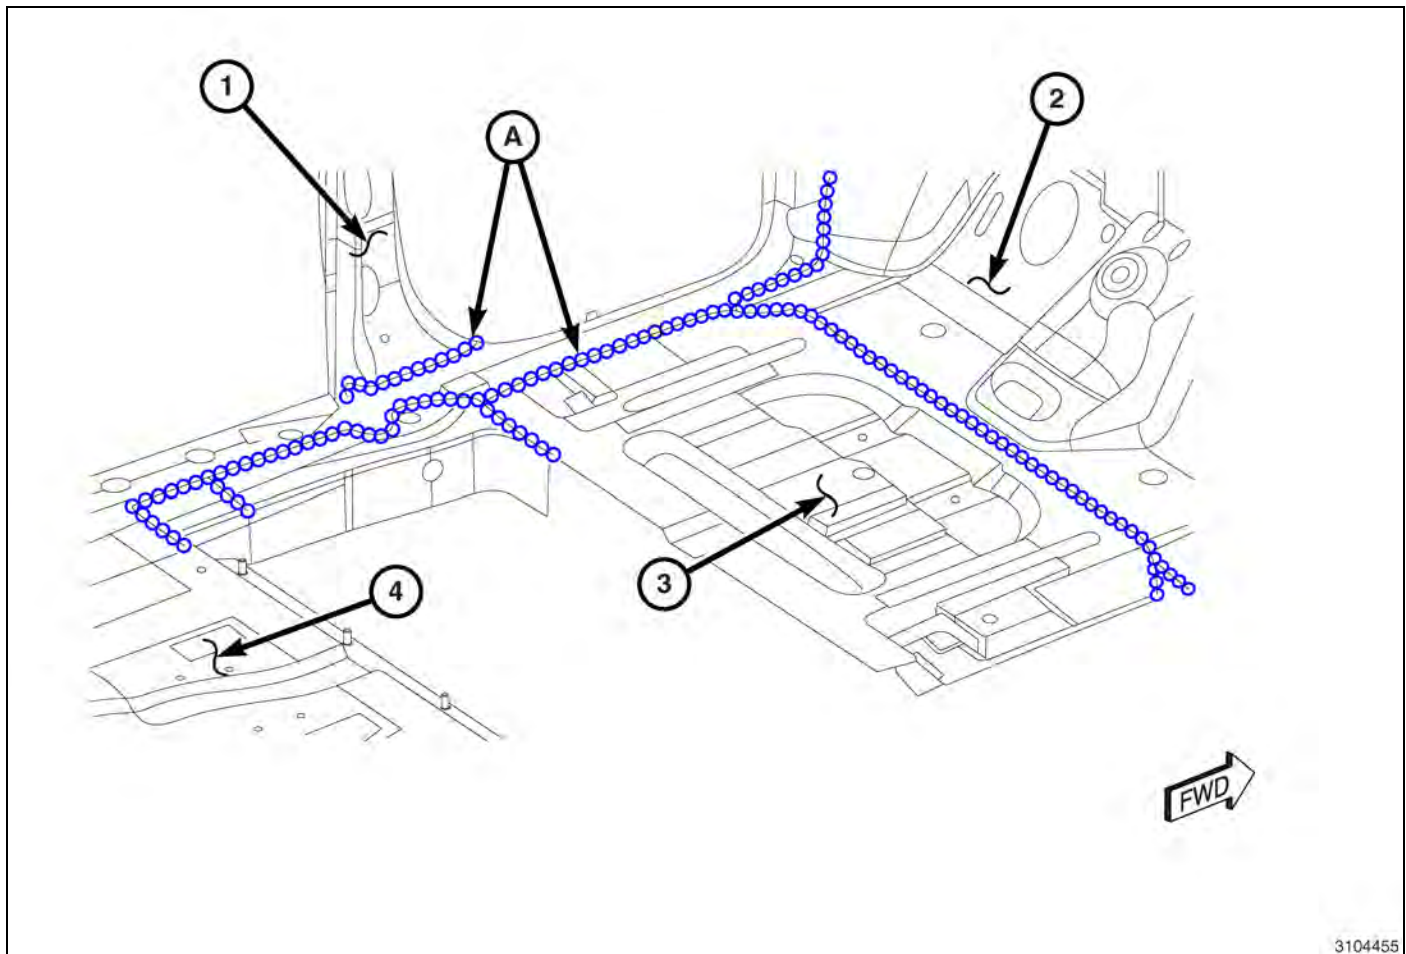

3104455

Fig. 40 Front Floor Pan / Dash Panel Inner Side Sill

NOTE: Left side shown, right side typical

A - SEAM SEALER

Collision Information SIDE APERTURE FRONT INNER

2 - DASH PANEL

3 - FRONT FLOOR

4 - MID FLOOR

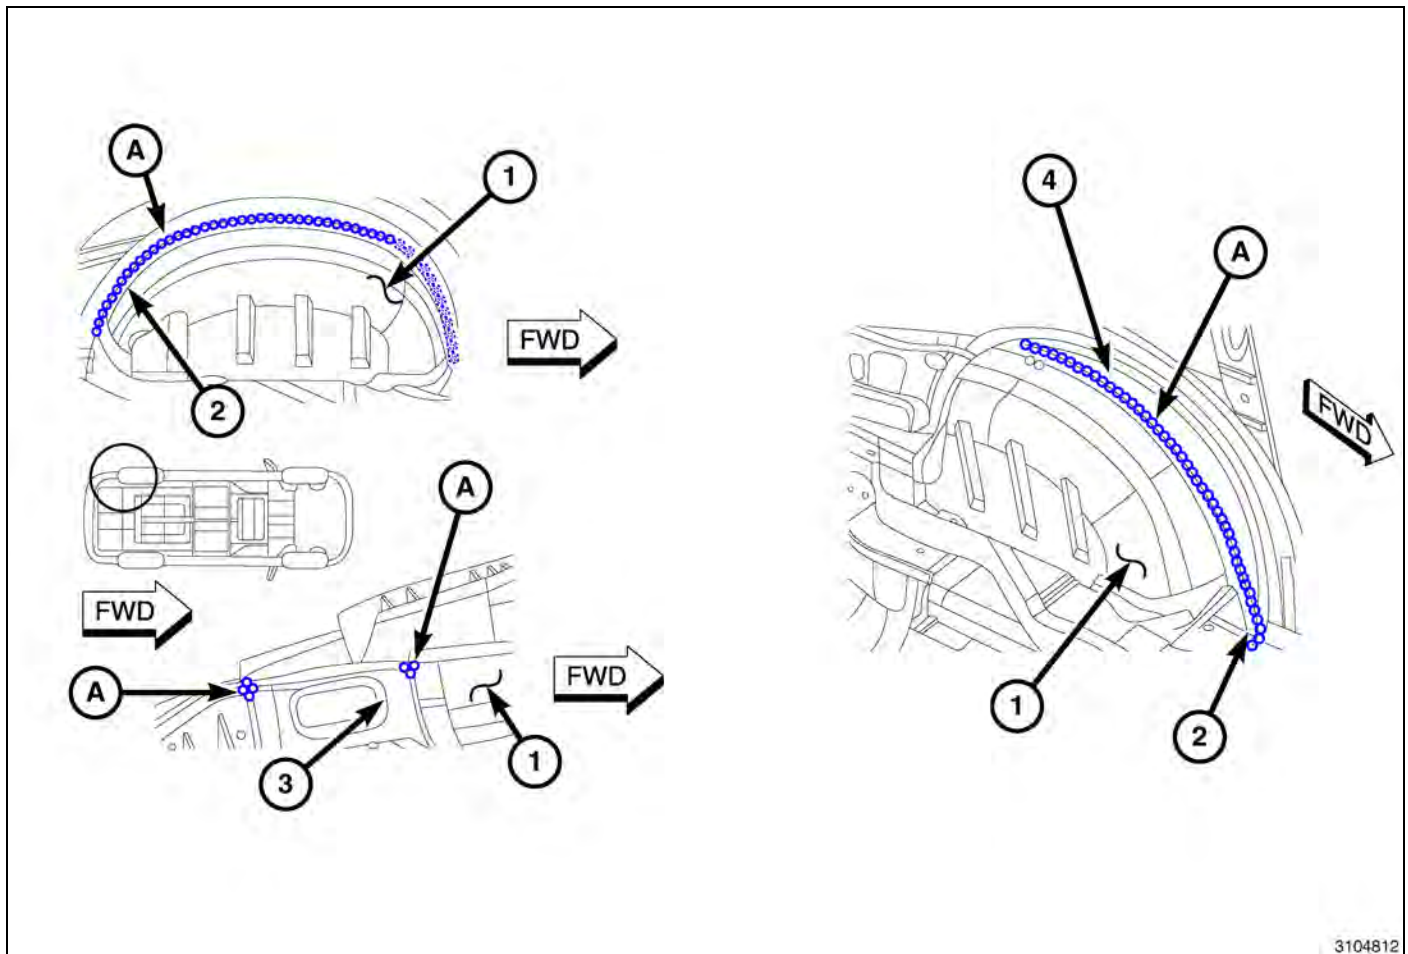


Fig. 41 Outer Rear Wheelhouse / Inner Quarter Panel Complete (1 of 2)


NOTE: Left side shown, right side typical

A - SEAM SEALER

1 - REAR WHEELHOUSE INNER

2 - QUARTER INNER PANEL

3 - 3RD ROW SEAT RAIL COVER

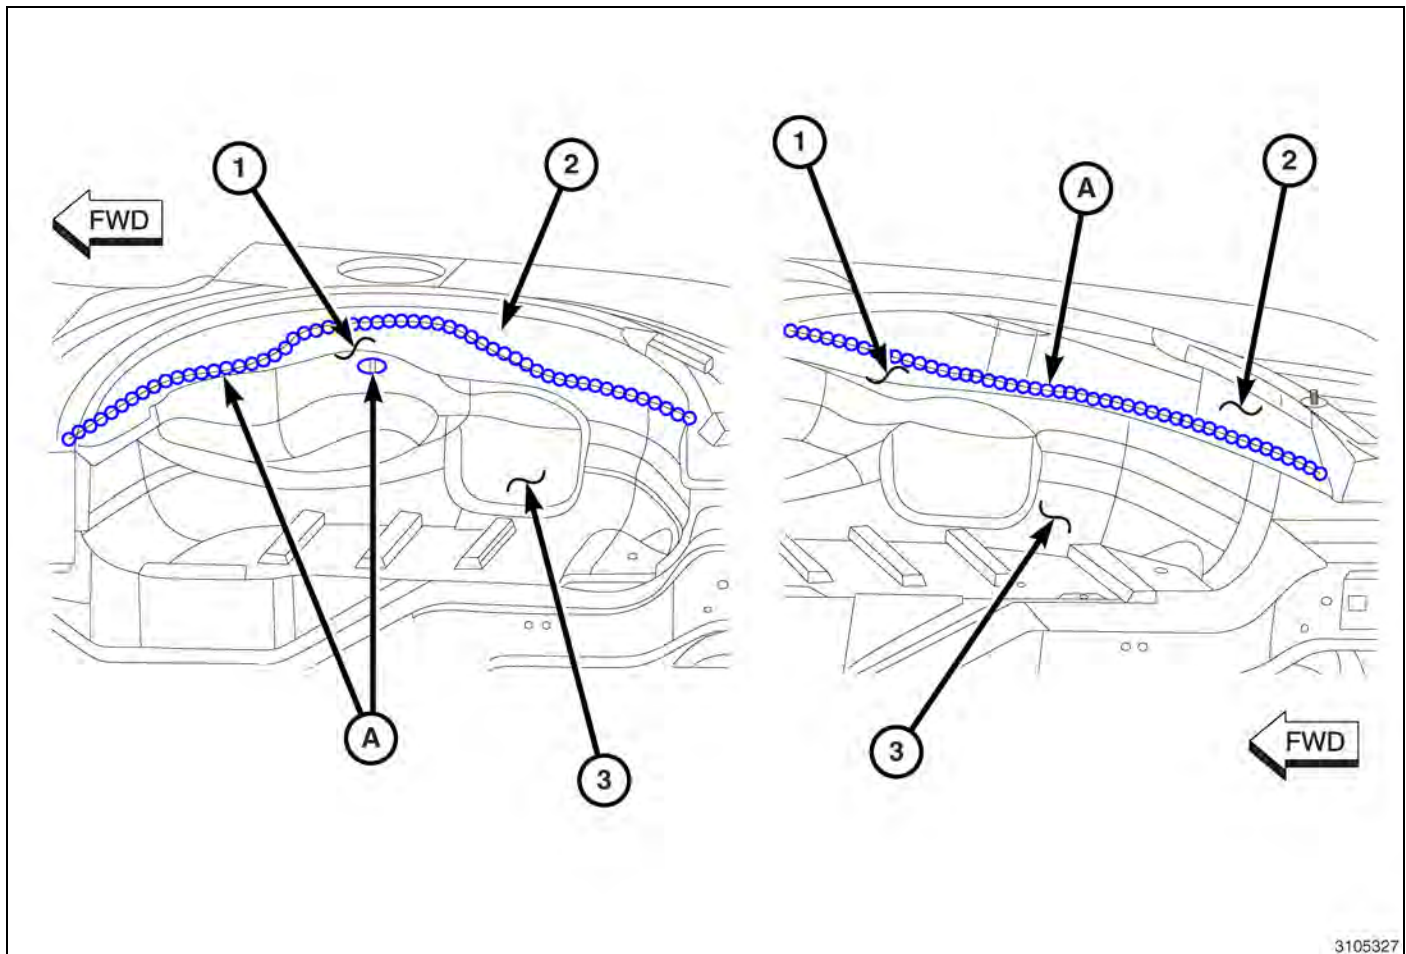

3105327

Fig. 42 Outer Rear Wheelhouse / Inner Quarter Panel Complete (2 of 2)


NOTE: Left side shown, right side typical

A - SEAM SEALER

1 - QUARTER INNER

2 - REAR OUTER WHEELHOUSE

3 - REAR INNER WHEELHOUSE

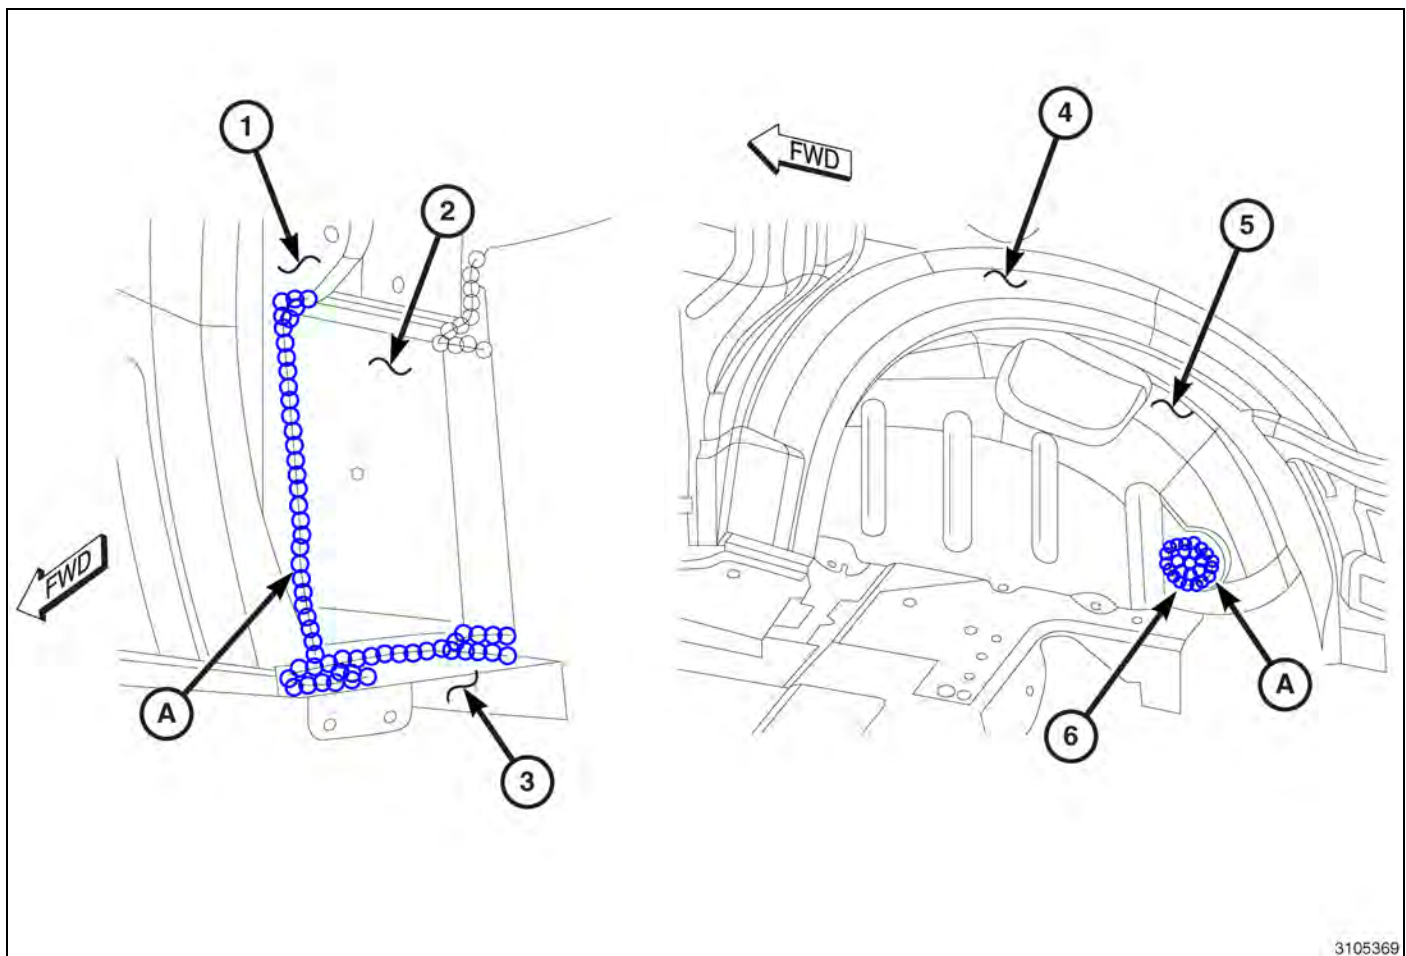

3105369

Fig. 43 Outer Wheelhouse / Inner Quarter Rear Jack Reinforcement (1 of 2)

NOTE: Left Side Only

A - SEAM SEALER

1 - QUARTER INNER REAR PANEL

2 - QUARTER INNER REAR JACK REINFORCEMENT

3 - BODY SIDE SILL OUTER

4 - BODY SIDE OUTER

5 - REAR WHEELHOUSE INNER PANEL

6 - SWIVEL MOUNTED 2ND REAR STUD PLATE

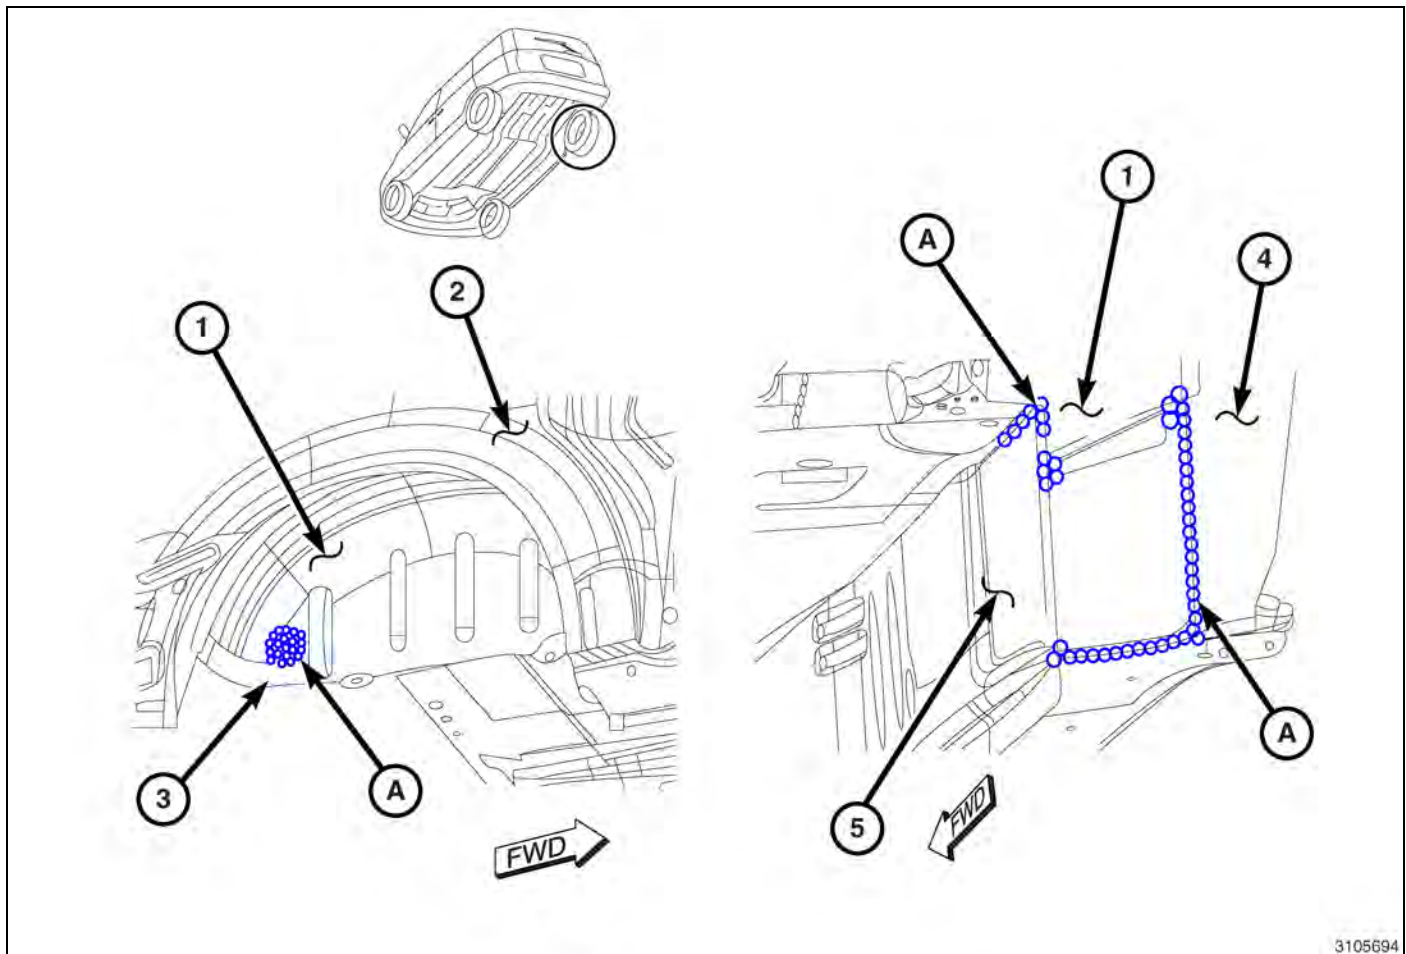


Fig. 44 Outer Wheelhouse / Inner Quarter Rear Jack Reinforcement (2 of 2)

NOTE: Right Side Only

A - SEAM SEALER


1 - REAR WHEELHOUSE INNER PANEL

2 - BODY SIDE OUTER

3 - SWIVEL MOUNTED 2ND REAR STUD PLATE

4 - REAR WHEELHOUSE OUTER PANEL

5 - BODY SIDE SILL INNER

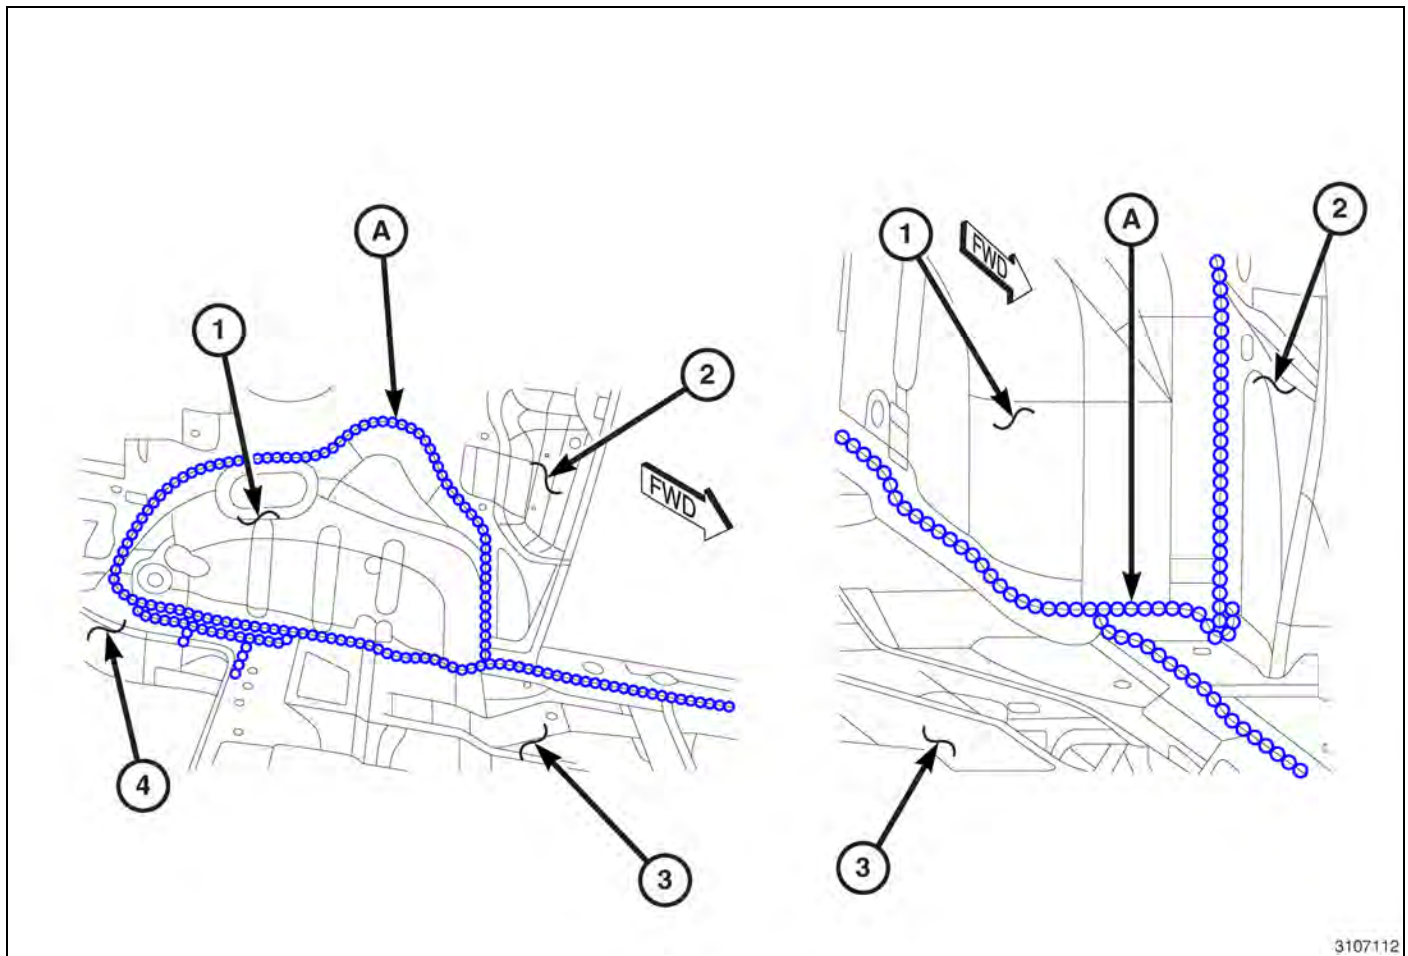

3107112

Fig. 45 Rear Wheelhouse Body / Side Aperture Inner Panel (1 of 2)

NOTE: Left Side Only


A - SEAM SEALER

1 - REAR WHEELHOUSE INNER

2 - BODY SIDE INNER

3 - MID FLOOR

4 - 3RD ROW SEAT RAIL COVER

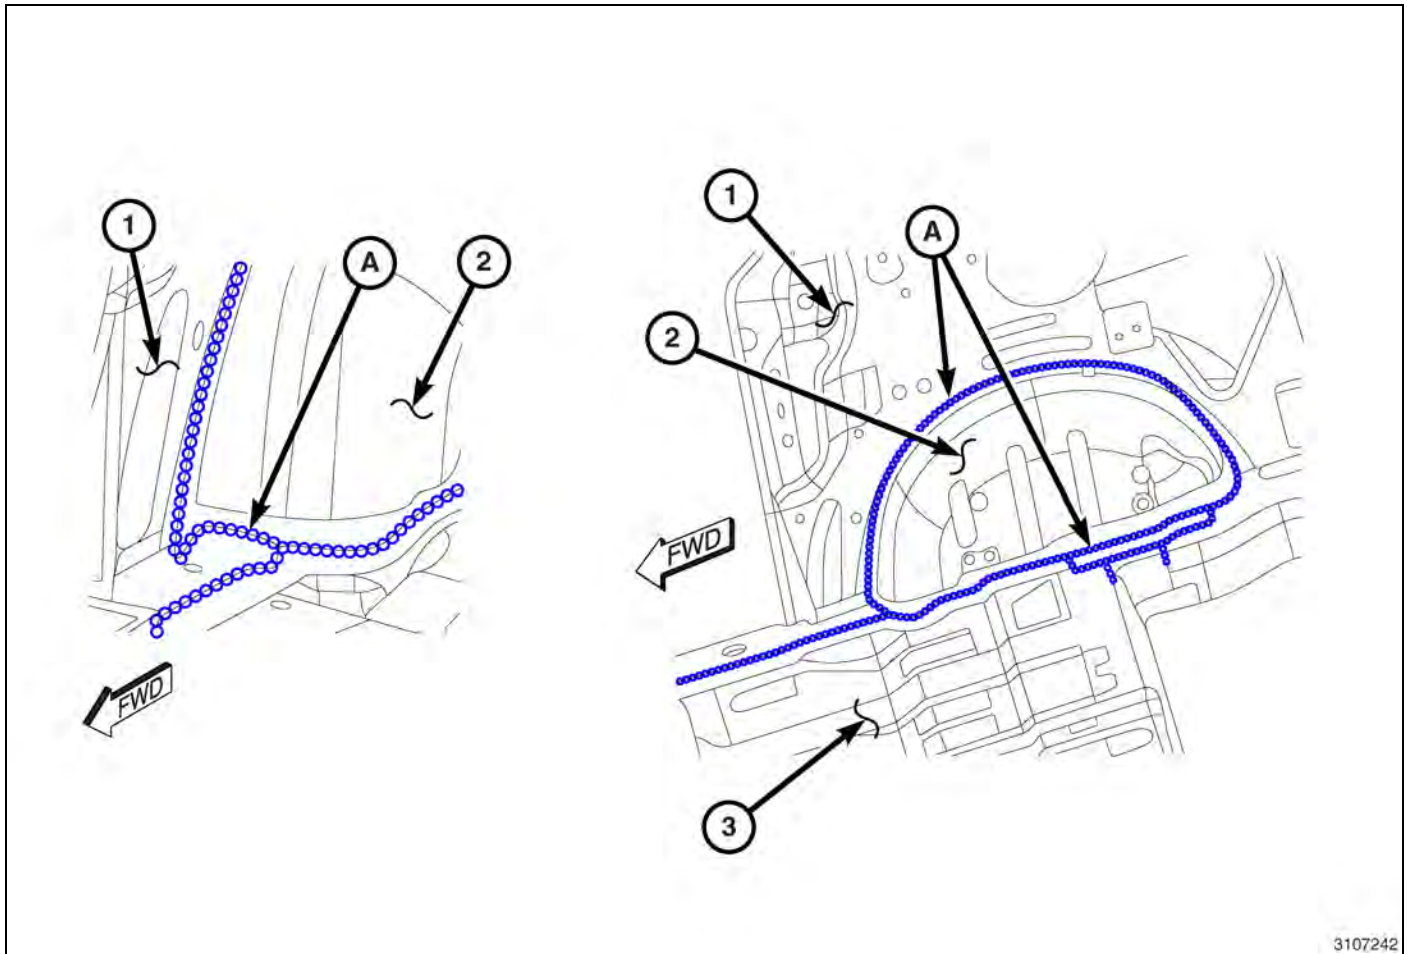

3107242

Fig. 46 Rear Wheelhouse Body / Side Aperture Inner Panel (2 of 2)

NOTE: Right Side Only

A - SEAM SEALER

Collision Information SIDE INNER PANEL

2 - INNER WHEELHOUSE

3 - MID FLOOR PANEL

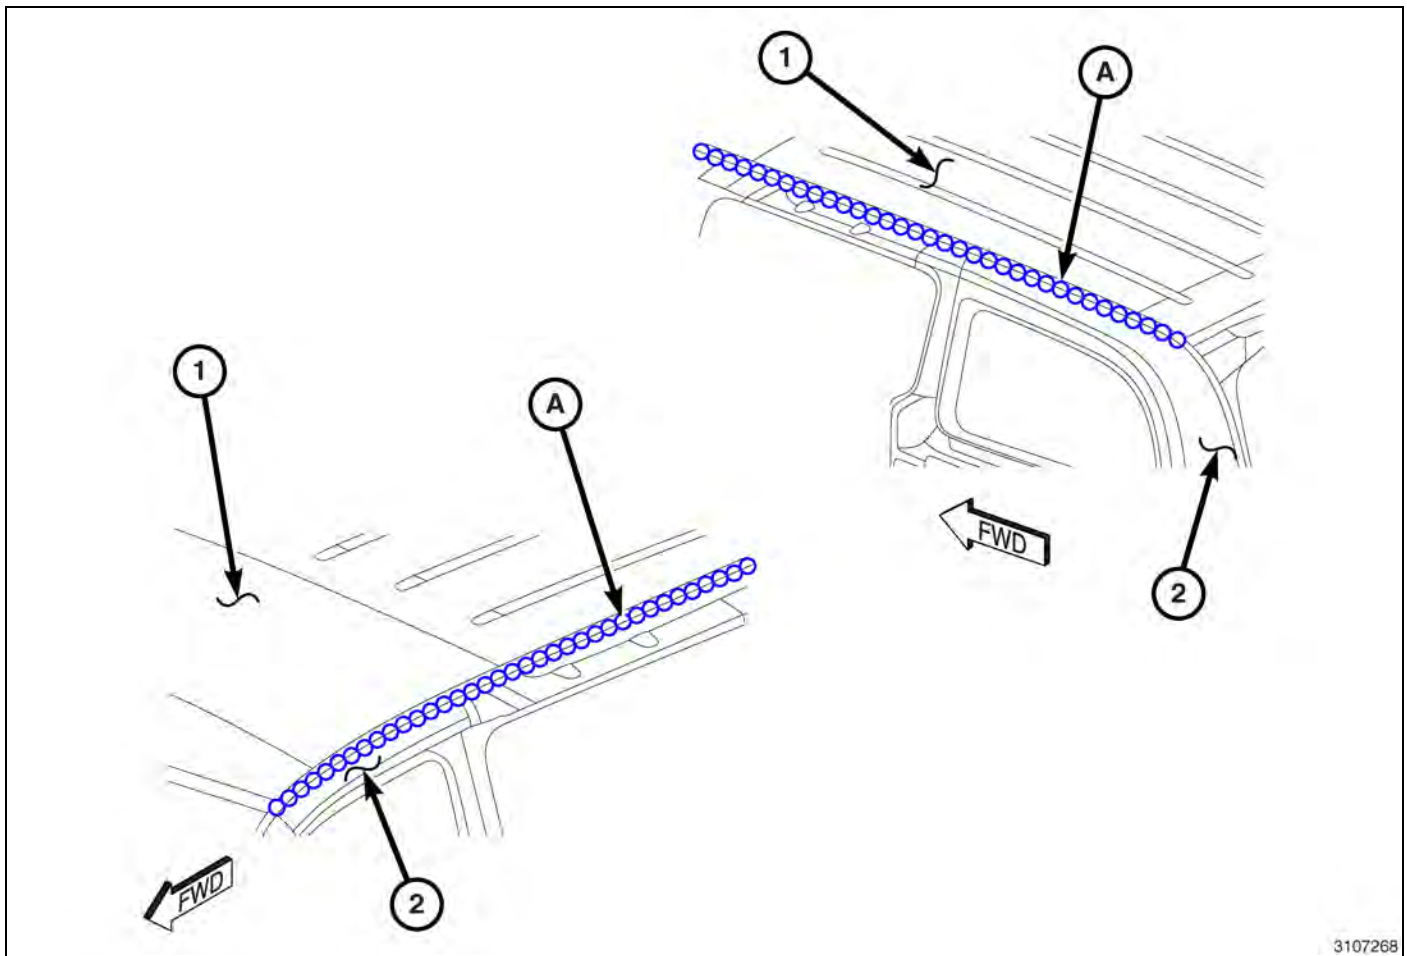


Fig. 47 Roof / Body Side Aperture

NOTE: Left side shown, right side typical

A - SEAM SEALER

1 - ROOF PANEL

2 - BODY SIDE APERTURE

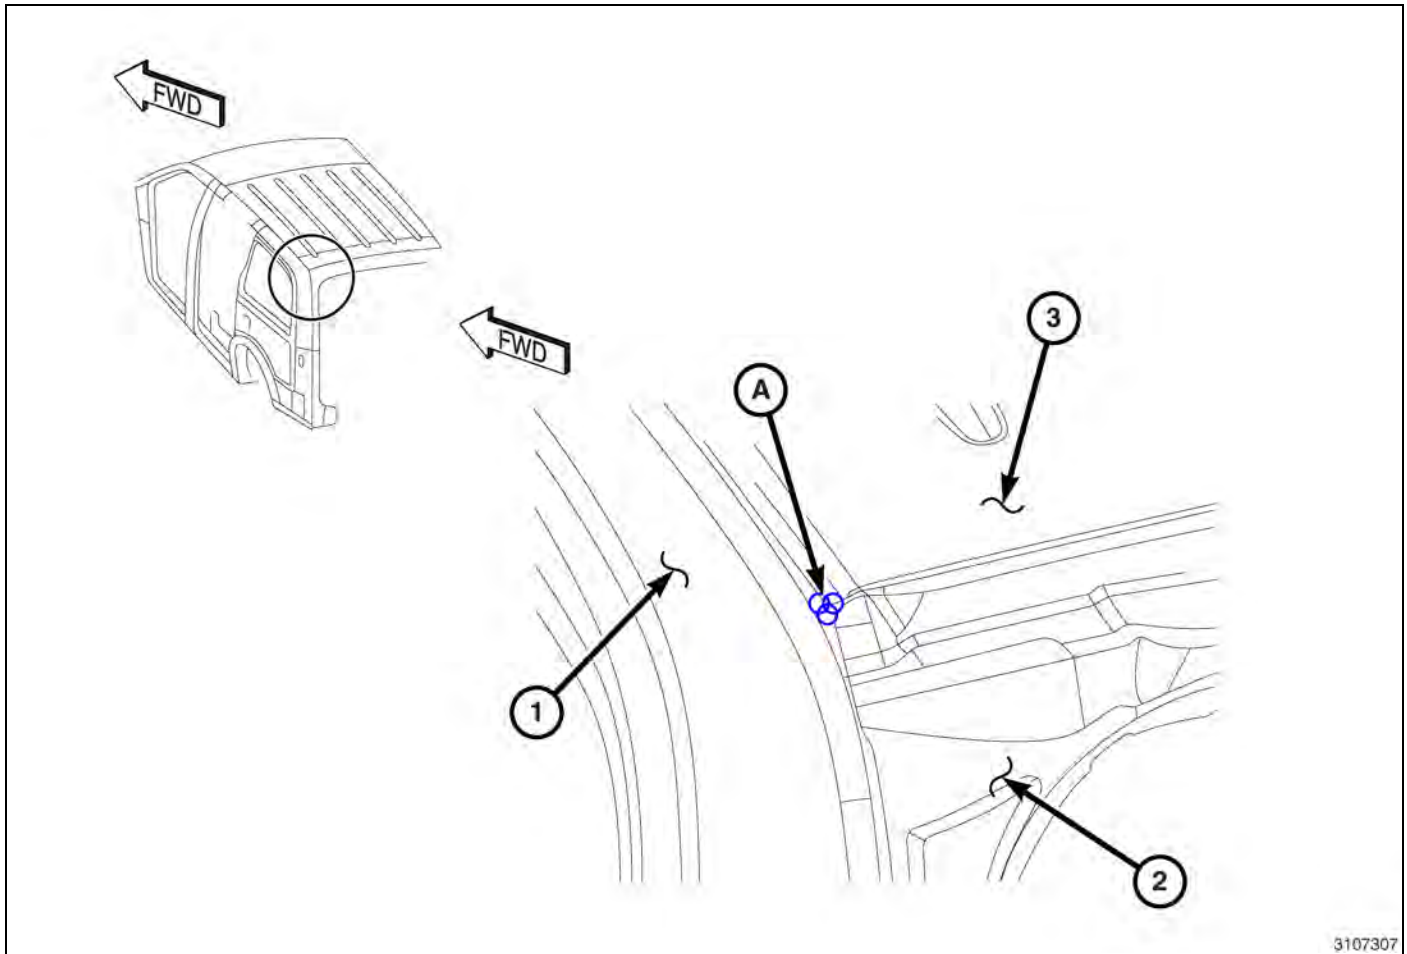


Fig. 48 Roof / Liftgate Drain Trough (1 of 2)

NOTE: Left side shown, right side typical

A - SEAM SEALER (THUMB GRADE)

Collision Information SIDE APERTURE REAR

2 - LIFTGATE OPENING DRAIN TROUGH

3 - ROOF

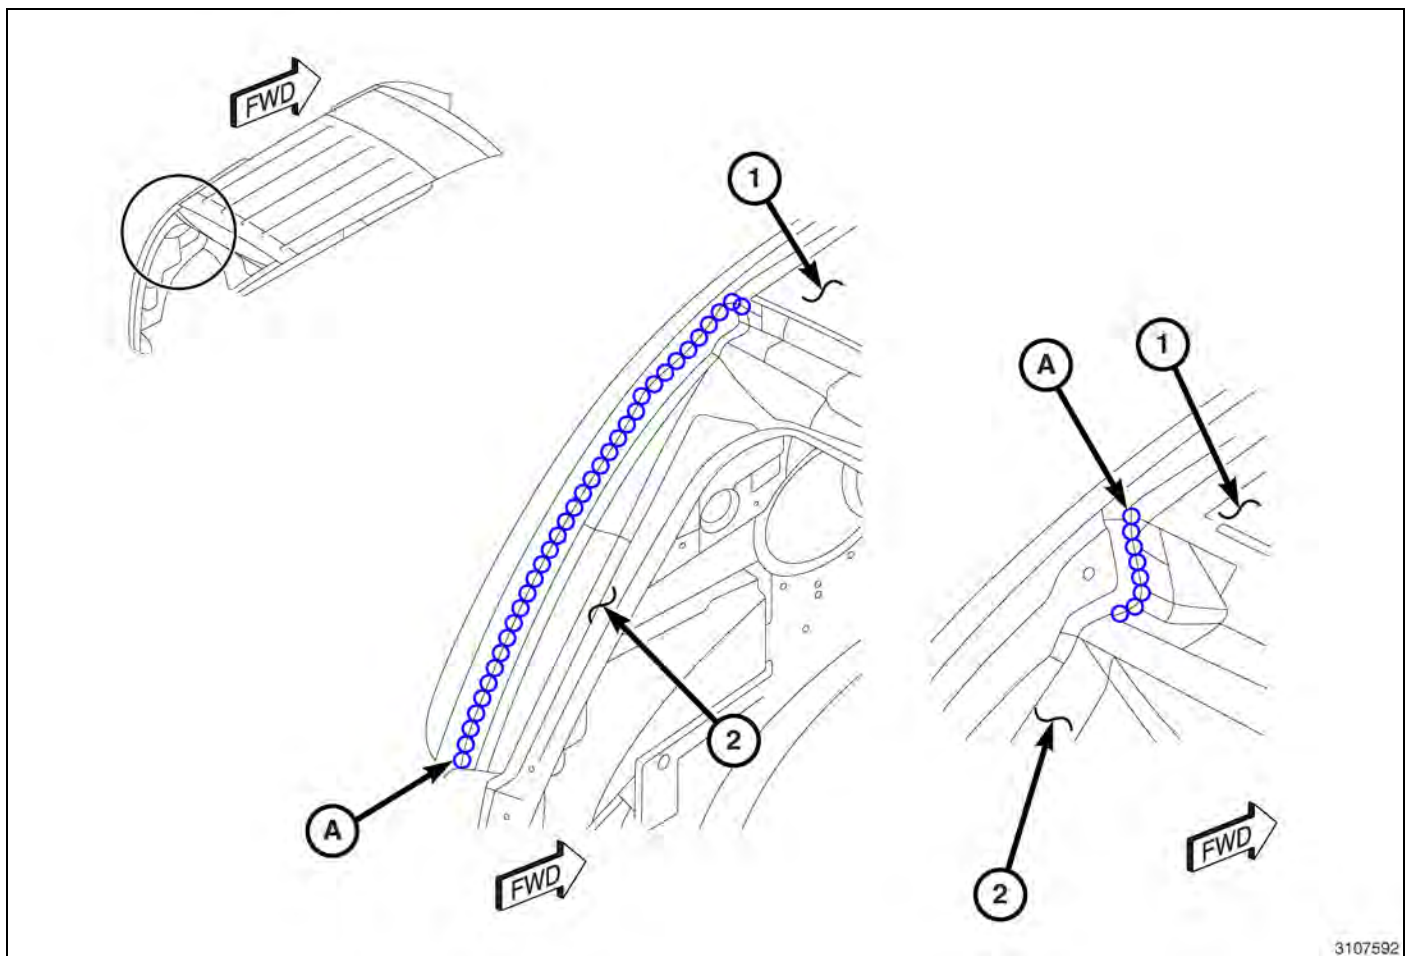



Fig. 49 Roof / Liftgate Drain Trough (2 of 2)

NOTE: Left side shown, right side typical

A - SEAM SEALER

1 - ROOF PANEL

2 - LIFTGATE OPENING DRAIN TROUGH

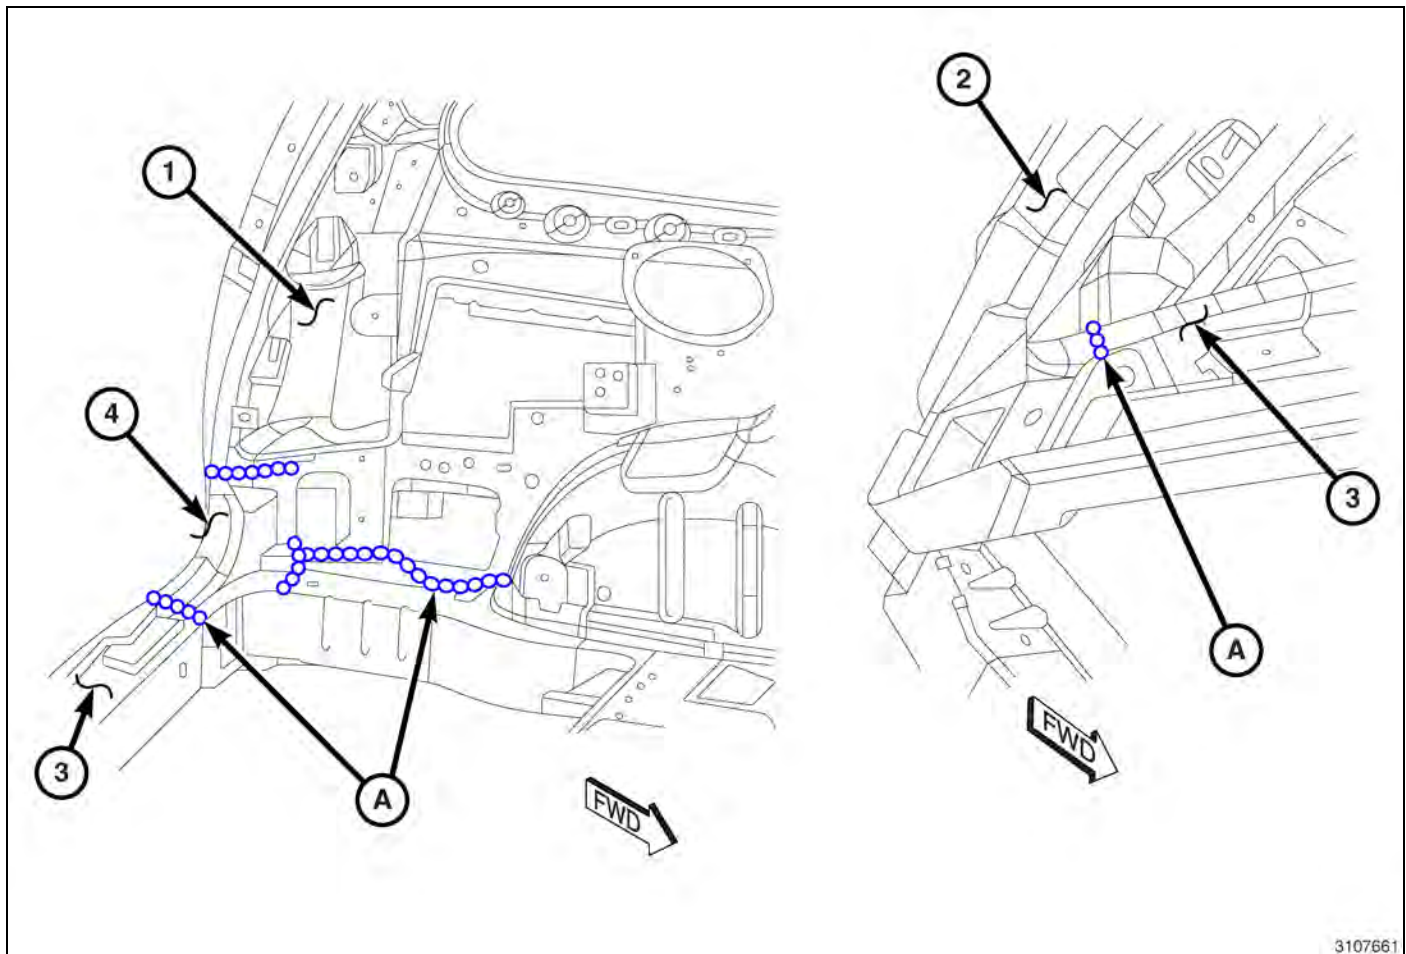

3107661

Fig. 50 Third Row Tub Rail Cover / Rear Quarter Inner

NOTE: Left side shown, right side typical

A - SEAM SEALER

1 - REAR QUARTER INNER

2 - LIFTGATE OPENING DRAIN TROUGH

3 - OPENING COVER

4 - OPENING EXTENSION

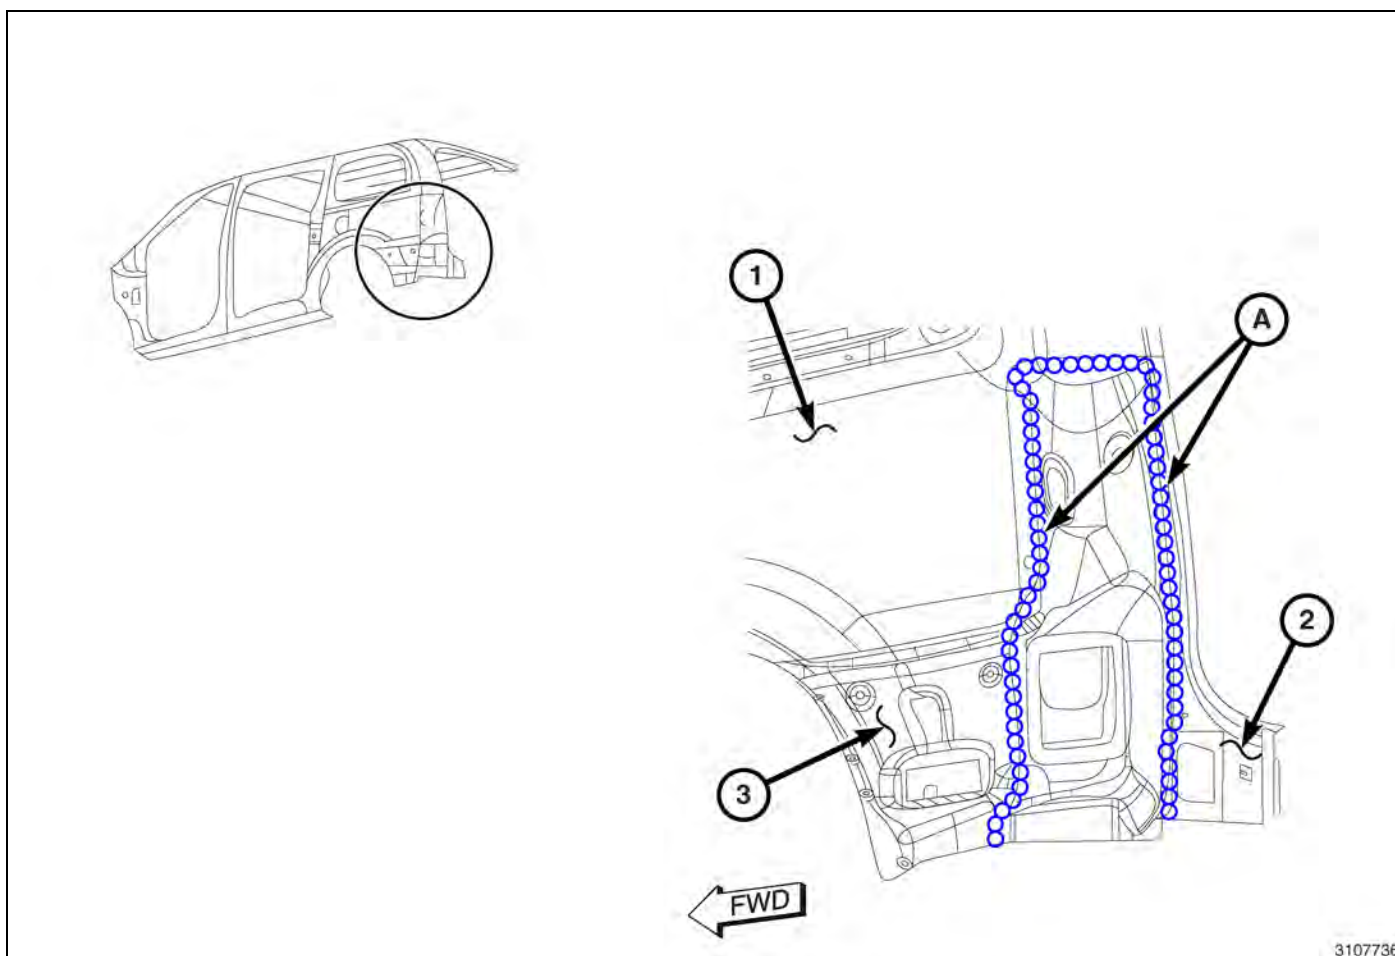


Fig. 51 Tail Lamp Can (1 of 2)

NOTE: Left side shown, right side typical

A - SEAM SEALER

Collision Information SIDE APERTURE REAR

2 - LIFTGATE OPENING DRAIN TROUGH

3 - RETAINER REAR FACIA TO APERTURE BRACKET

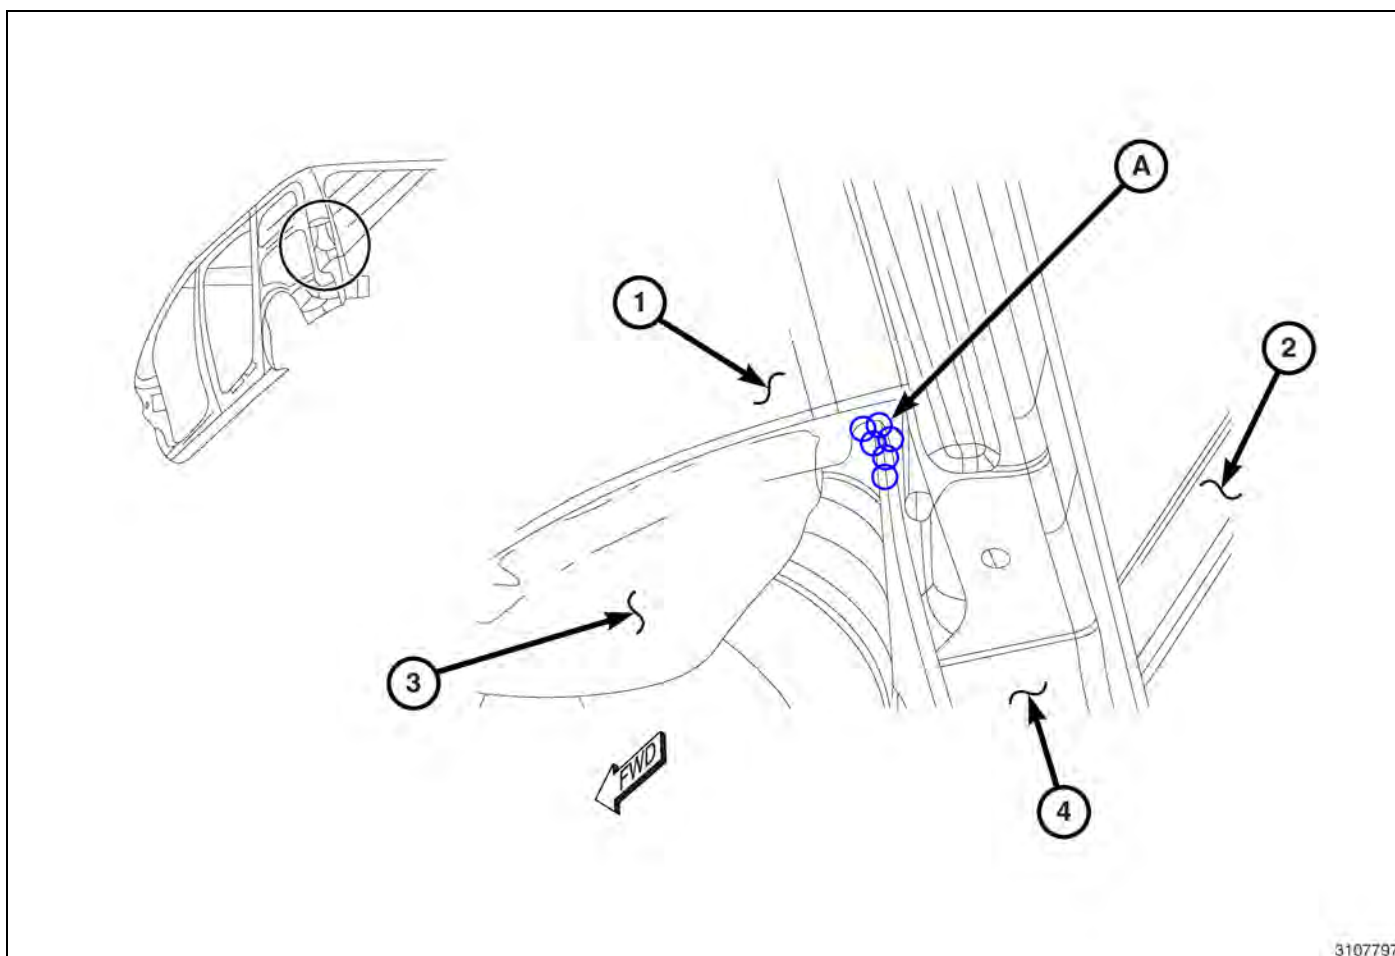


Fig. 52 Tail Lamp Can (2 of 2)

NOTE: Left side shown, right side typical

A - SEAM SEALER

Collision Information SIDE APERTURE REAR

2 - ROOF PANEL

3 - BODY SIDE APERTURE EXTENSION

4 - LIFTGATE DRAIN TROUGH

ADHESIVE LOCATIONS

NOTE: Structural Adhesives used are a high strength epoxy and a high expansion lower strength ant-flutter material.

Structural adhesives and flexible adhesives should only be applied by trained technicians. Follow the manufacture instructions for proper applications of products.

Structural adhesive is applied by itself or in conjunction with Squeeze Type Resistance Spot Welds and is to be re-assembled in the same manner as vehicle build. Any situation where it is undetermined weather it is structural adhesives or seam sealer always default to structural adhesive .

Anti- flutter adhesive is applied to areas of the vehicle where adhesive properties with flexibility are required. Typically found on supports and braces throughout the closure panels, roof and body side gas fill areas.

Seam sealers are only to be used topically, never within weld flanges or hem flanges.

Chrysler approved replacement materials include -

- **Structural Adhesives** : Mopar #05083855AA, Fusor 112B, 3M 08116, or equivalent.
- **Anti-Flutter Adhesives (flexible)** : Mopar #04864015AB (Urethane Adhesive), Fusor 121 (Flexible Foam), 3M 04724 (NVH Dampening Material), or equivalent.

SEALER TYPE	COLOR
Structural Adhesive	Red
Anti-Flutter Adhesive	Green

DESCRIPTION	FIGURE
RAIL ASSEMBLY	(Fig. 53)
ENGINE BOX	(Fig. 54)
LOWER LADDER	(Fig. 55)
LADDER COMPLETE (1 OF 4)	(Fig. 56)
LADDER COMPLETE (2 OF 4)	(Fig. 57)
LADDER COMPLETE (3 OF 4)	(Fig. 58)
LADDER COMPLETE (4 OF 4)	(Fig. 59)
UNDERBODY	(Fig. 60)
UNDERBODY COMPLETE	(Fig. 61)
BODY SIDE APERTURE - INNER (1 OF 2)	(Fig. 62)
BODY SIDE APERTURE - INNER (2 OF 2)	(Fig. 63)
BODY SIDE APERTURE - OUTER	(Fig. 64)
BODY SIDE APERTURE - COMPLETE (1 OF 4)	(Fig. 65)
BODY SIDE APERTURE - COMPLETE (2 OF 4)	(Fig. 66)
BODY SIDE APERTURE - COMPLETE (3 OF 4)	(Fig. 67)
BODY SIDE APERTURE - COMPLETE (4 OF 4)	(Fig. 68)
BODY IN WHITE - SHELL (1 OF 3)	(Fig. 69)
BODY IN WHITE - SHELL (2 OF 3)	(Fig. 70)
BODY IN WHITE - SHELL (3 OF 3)	(Fig. 71)
BODY IN WHITE - COMPLETE W/O SUNROOF (1 OF 2)	(Fig. 72)
BODY IN WHITE - COMPLETE W/O SUNROOF (2 OF 2)	(Fig. 73)
BODY IN WHITE - COMMON ROOF (1 OF 2)	(Fig. 74)
BODY IN WHITE - COMMON ROOF (2 OF 2)	(Fig. 75)
BODY IN WHITE - COMPLETE WITH SUNROOF (1 OF 3)	(Fig. 76)
BODY IN WHITE - COMPLETE WITH SUNROOF (2 OF 3)	(Fig. 77)
BODY IN WHITE - COMPLETE WITH SUNROOF (3 OF 3)	(Fig. 78)

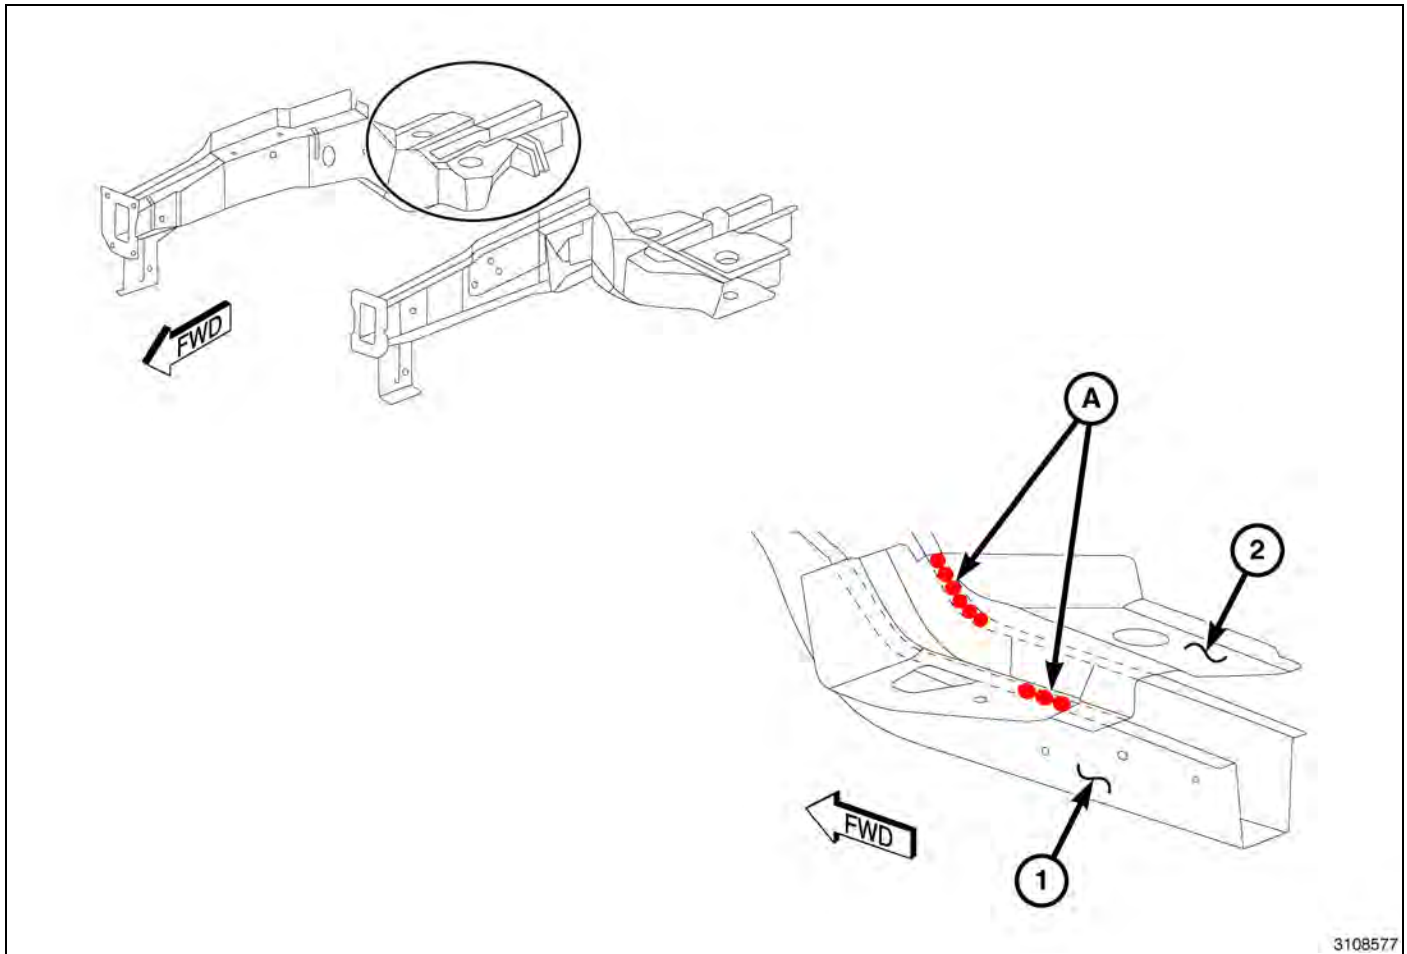


Fig. 53 RAIL ASSEMBLY

NOTE: RIGHT SIDE SHOWN, LEFT SIDE TYPICAL

A - STRUCTURAL ADHESIVE

1 - FRONT RAIL (REAR)

2 - FRONT RAIL TO DASH PANEL REINFORCEMENT

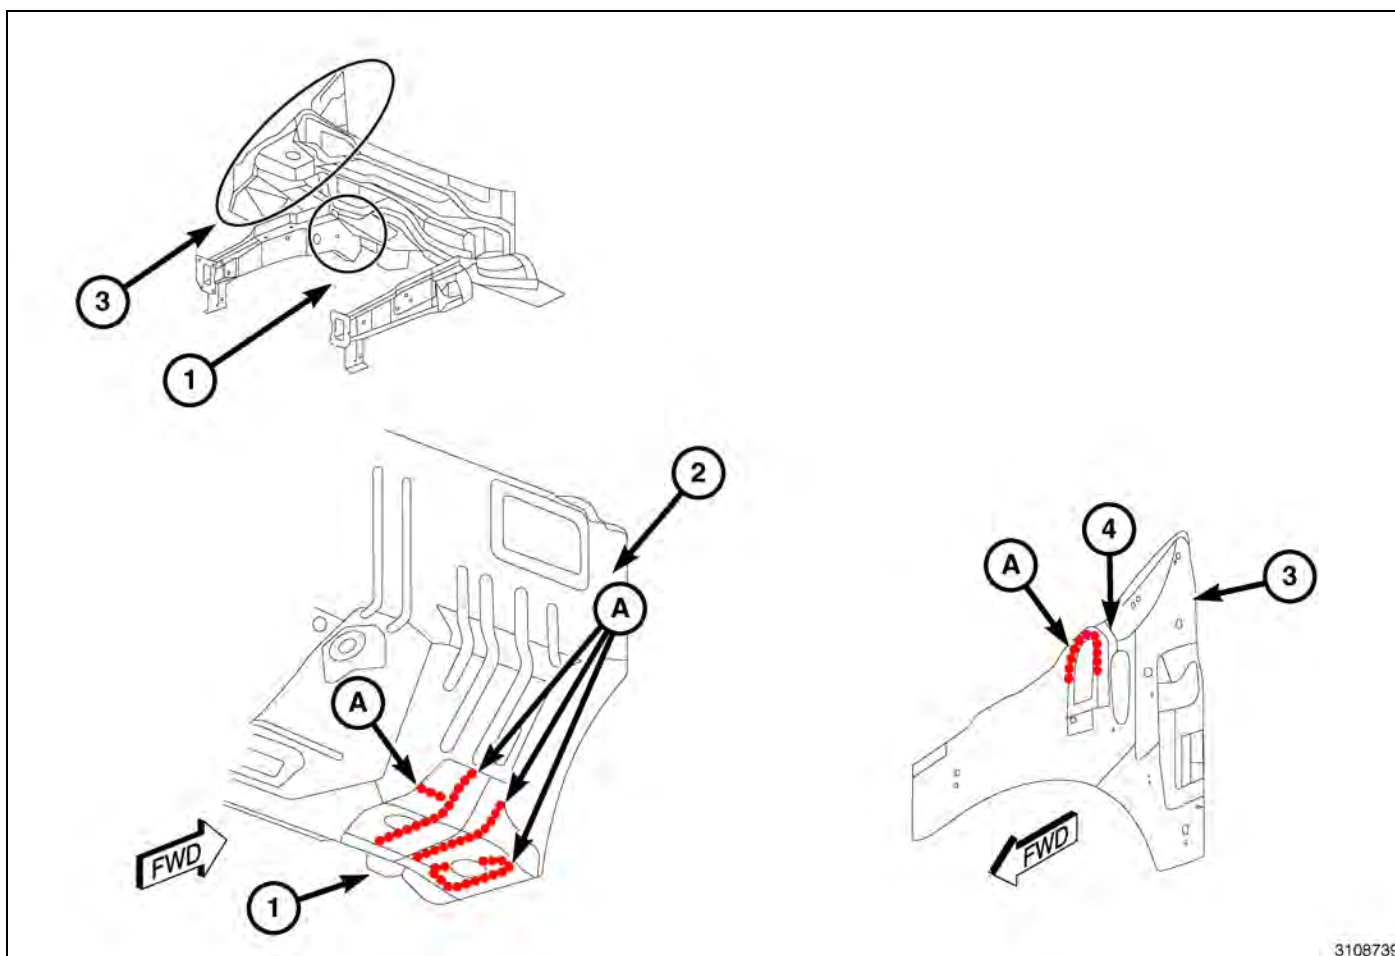


Fig. 54 ENGINE BOX

NOTE: RIGHT SIDE SHOWN, LEFT SIDE TYPICAL

A - STRUCTURAL ADHESIVE

1 - SIDE RAIL REINFORCEMENT

2 - DASH

3 - COWL SIDE

4 - GUSSET

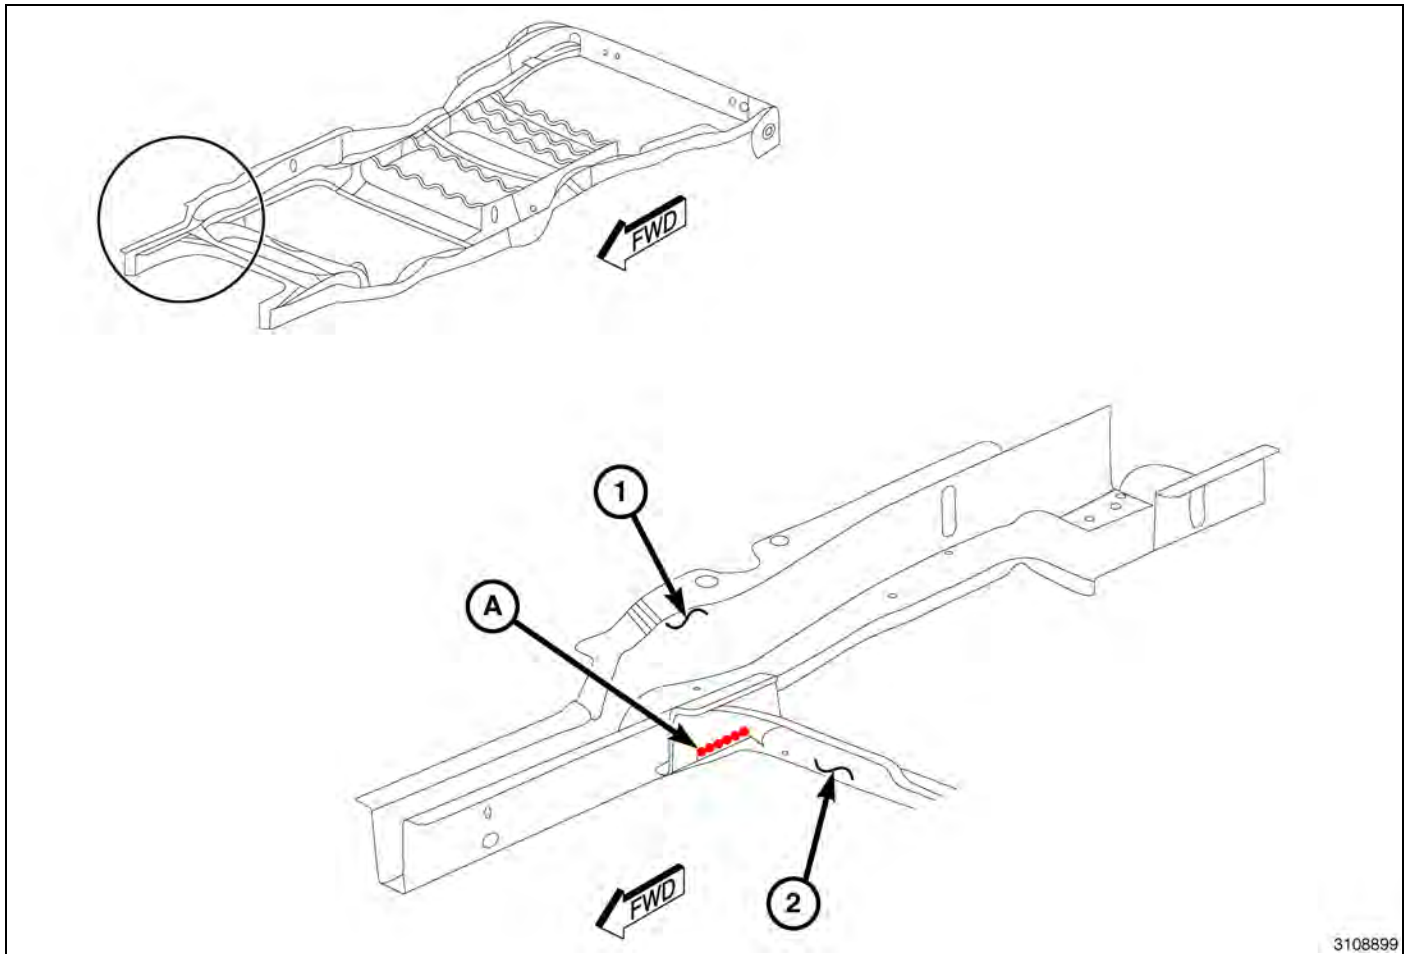



Fig. 55 LOWER LADDER

NOTE: RIGHT SIDE SHOWN, LEFT SIDE TYPICAL

A - STRUCTURAL ADHESIVE

1 - FLOOR PAN SIDE RAIL

2 - SEAT TUB CROSSMEMBER

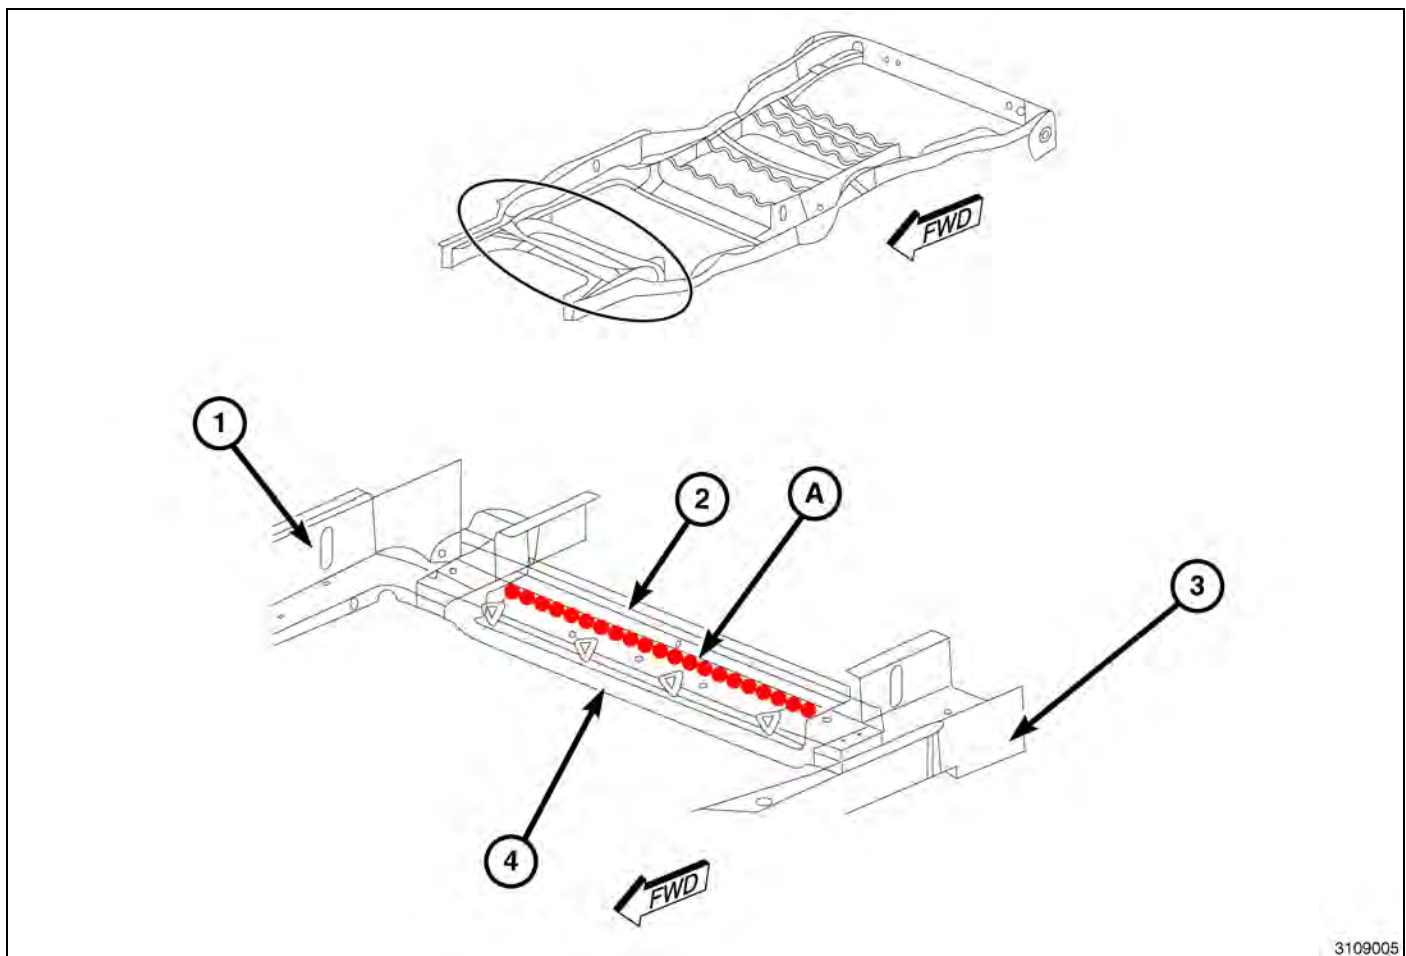

3109005

Fig. 56 LADDER COMPLETE (1 of 4)

A - STRUCTURAL ADHESIVE

1 - FLOOR PAN SIDE RAIL (FRONT)

2 - SEAT TUB CROSSMEMBER REINFORCEMENT

3 - FLOOR PAN SIDE RAIL (FRONT)

4 - CROSSMEMBER REINFORCEMENT

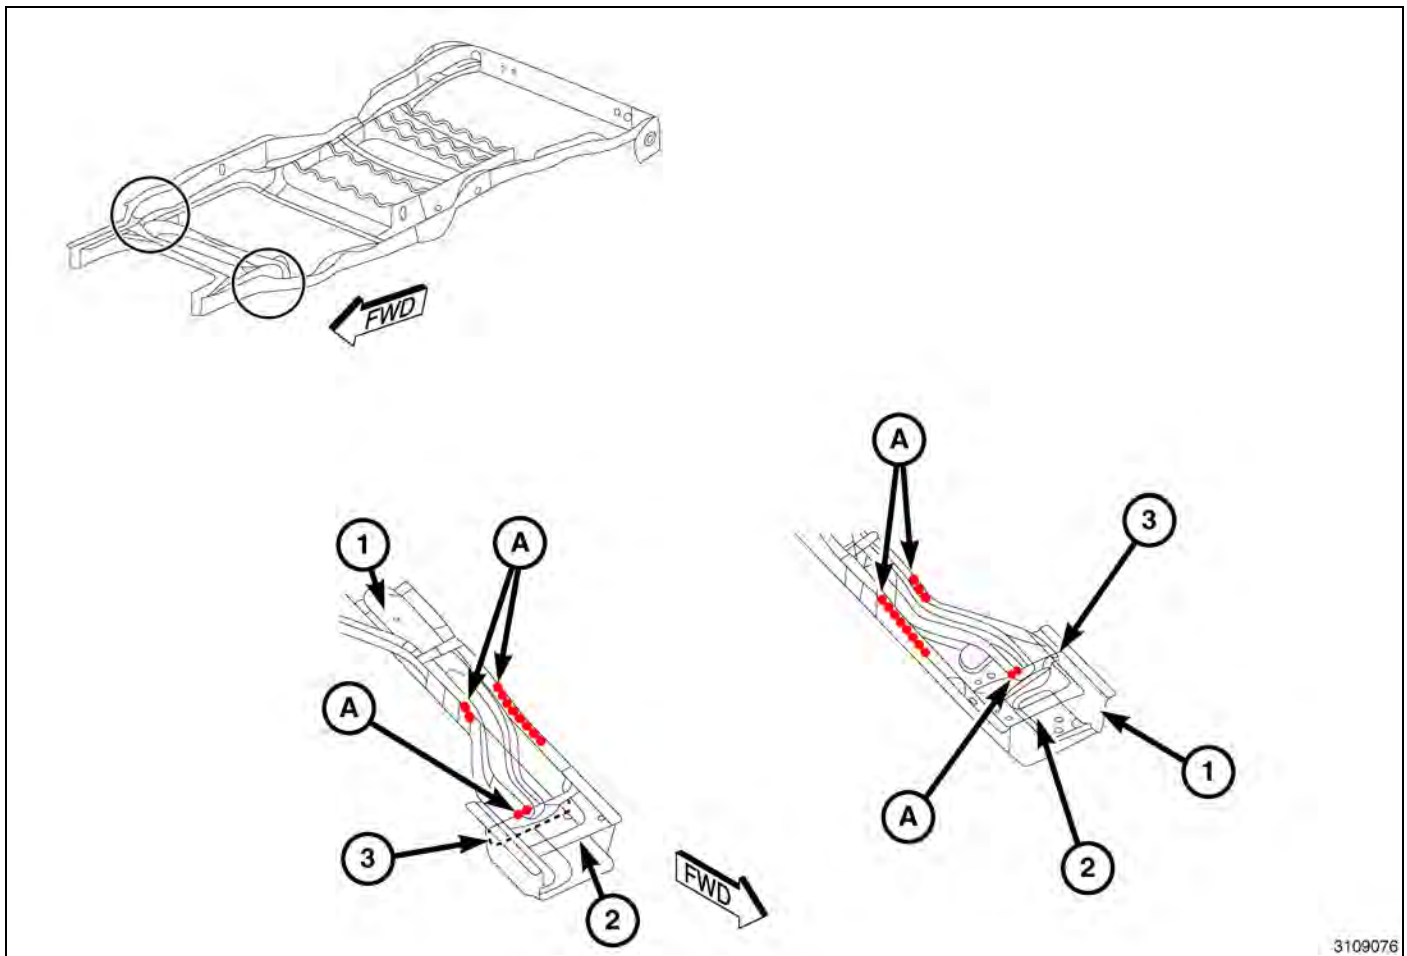


Fig. 57 LADDER COMPLETE (2 of 4)

- A - STRUCTURAL ADHESIVE
- 1 - FLOOR PAN SIDE RAIL (REAR)
- 2 - SEAT STRIKER REINFORCEMENT
- 3 - SUSPENSION HANGER GUSSET

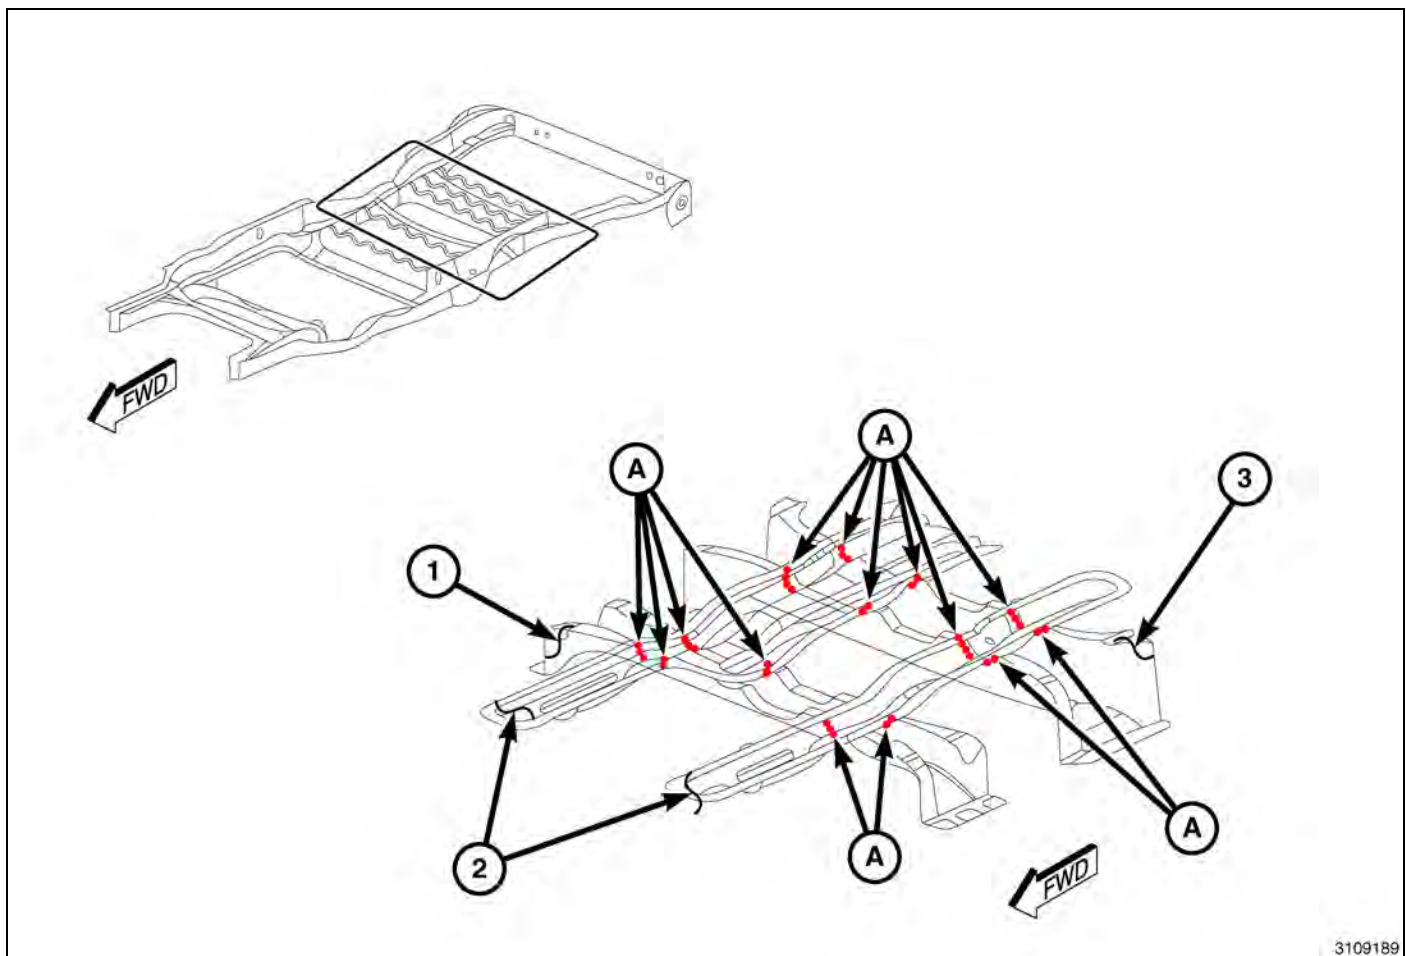



Fig. 58 LADDER COMPLETE (3 of 4)

A - STRUCTURAL ADHESIVE

1 - CROSSMEMBER

2 - SEAT STRIKER REINFORCEMENT

3 - FUEL TANK SUPPORT

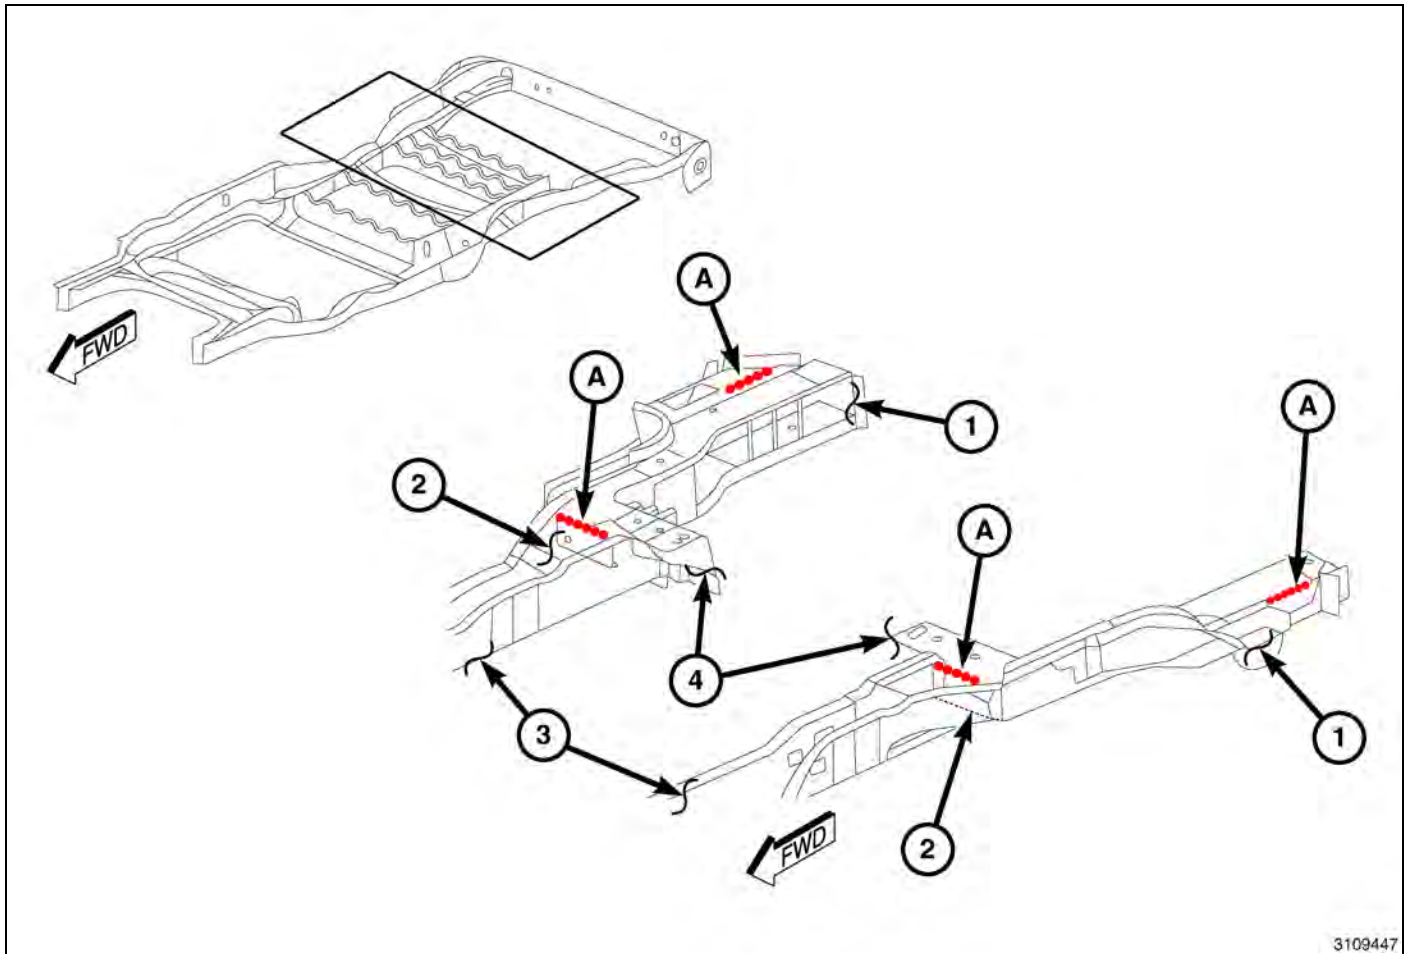

3109447

Fig. 59 LADDER COMPLETE (4 of 4)

- A - STRUCTURAL ADHESIVE
- 1 - RAIL COVER
- 2 - GUSSET
- 3 - FLOOR PAN SIDE RAIL (REAR)
- 4 - REINFORCEMENT

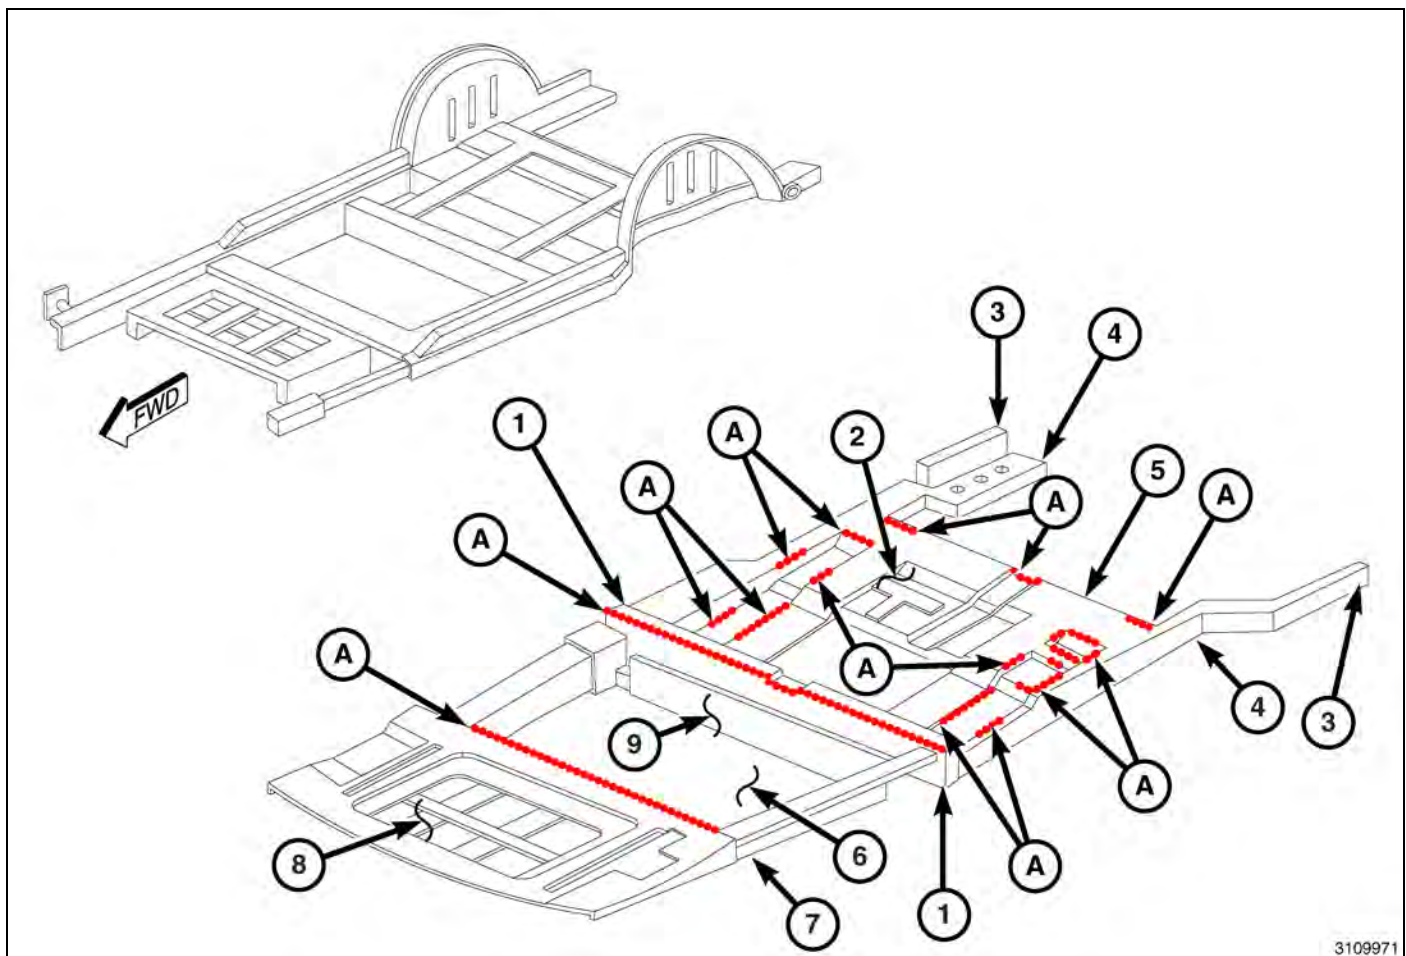


Fig. 60 UNDERBODY

A - STRUCTURAL ADHESIVE

1 - REINFORCEMENT

2 - MID FLOOR PAN

3 - FLOOR PAN SIDE RAIL (REAR)

4 - REINFORCEMENT

5 - TUB COVER

6 - TUB COVER

7 - RAIL COVER

8 - FRONT FLOOR PAN

9 - CROSSMEMBER


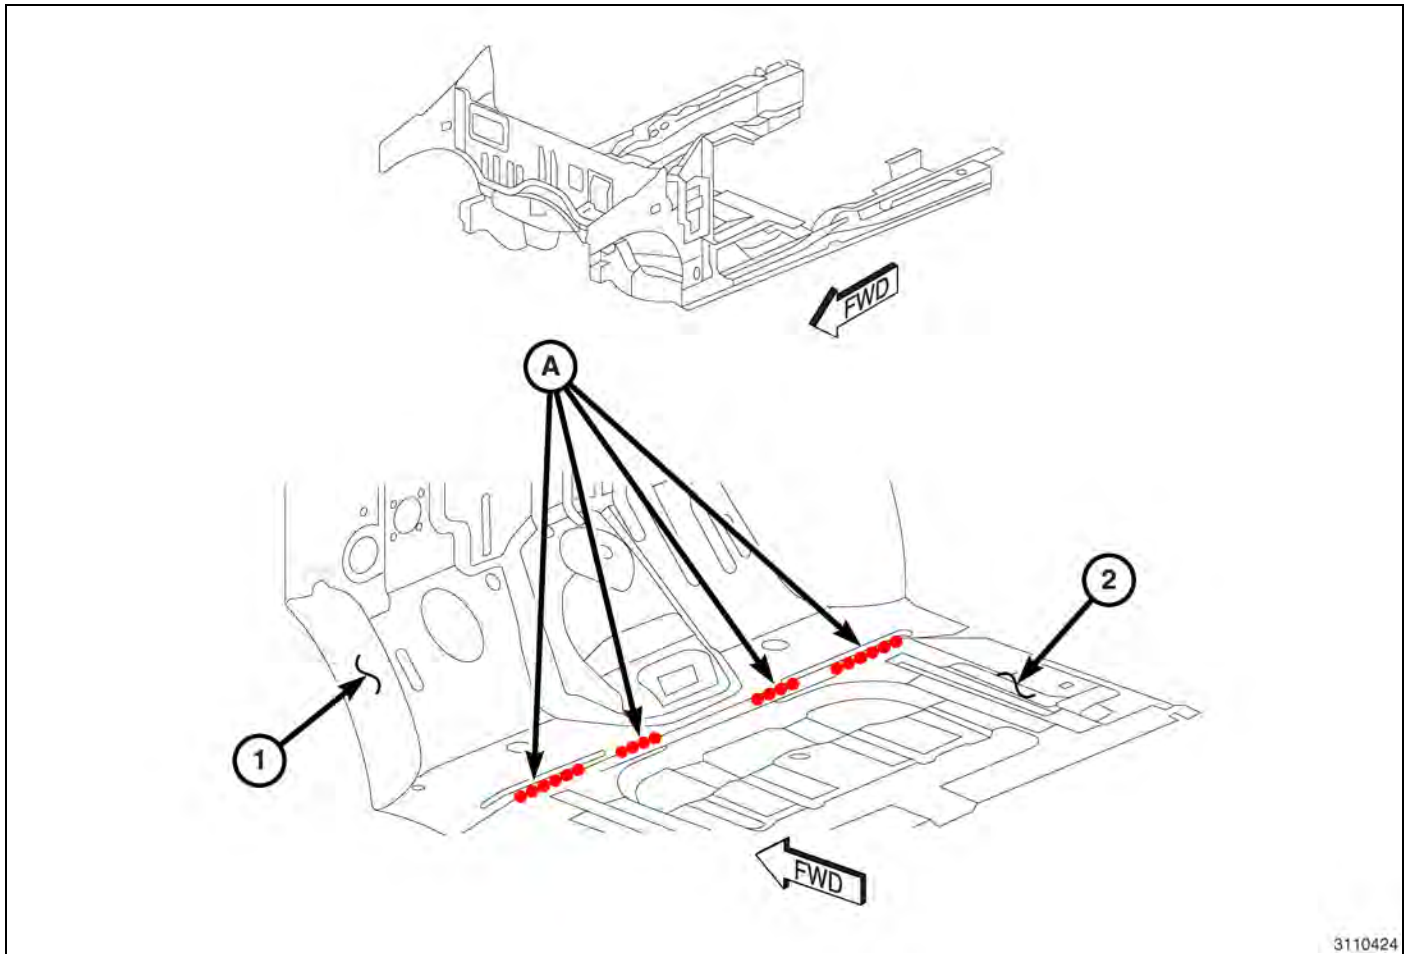


Fig. 61 UNDERBODY COMPLETE

A - STRUCTURAL ADHESIVE

1 - DASH PANEL

2 - FRONT FLOOR PAN

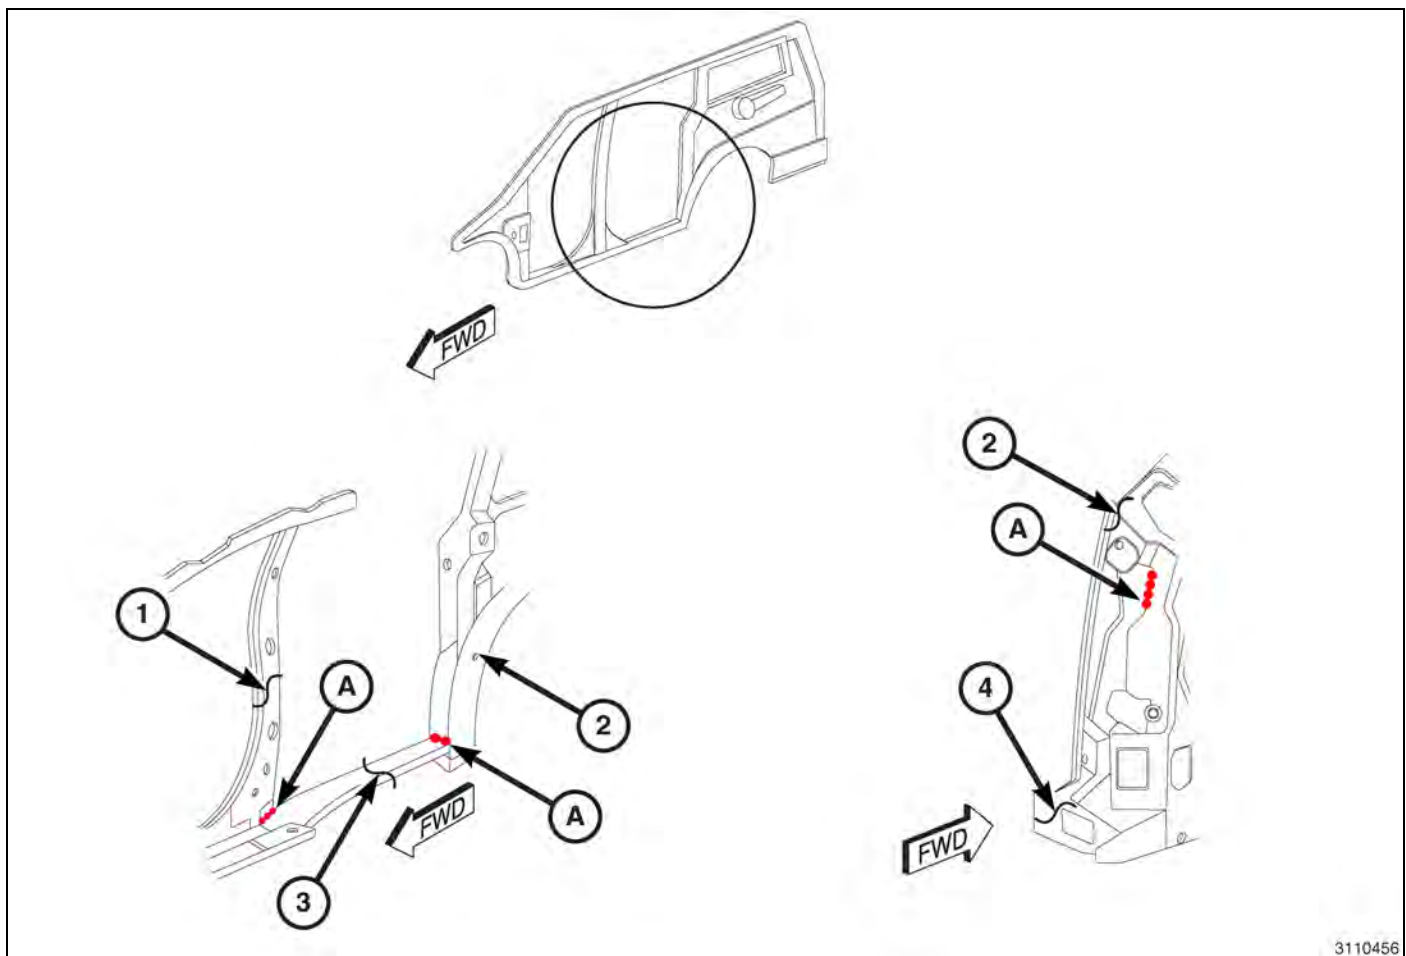

3110456

Fig. 62 BODY SIDE APERTURE - INNER (1 of 2)

NOTE: RIGHT SIDE SHOWN, LEFT SIDE TYPICAL


A - STRUCTURAL ADHESIVE

Collision Information SIDE APERTURE (FRONT INNER)

2 - INNER QUARTER

3 - DOOR TRACK SUPPORT

4 - EXTENSION (C-PILLAR)

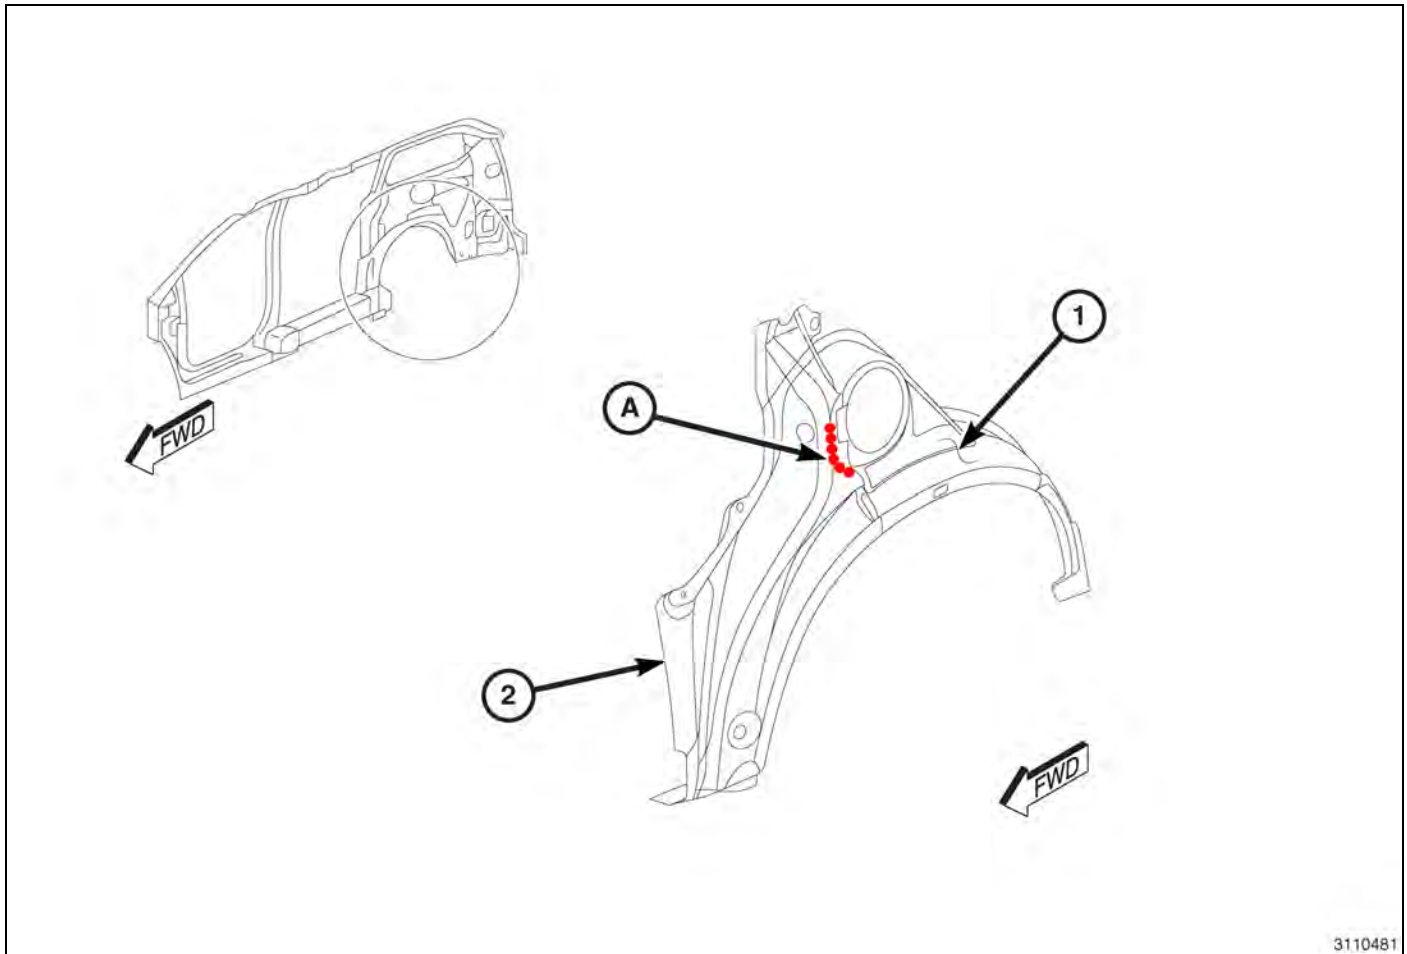

3110481

Fig. 63 BODY SIDE APERTURE - INNER (2 of 2)

NOTE: LEFT SIDE ONLY

A - STRUCTURAL ADHESIVE

1 - OUTER WHEELHOUSE

2 - C-PILLAR REINFORCEMENT

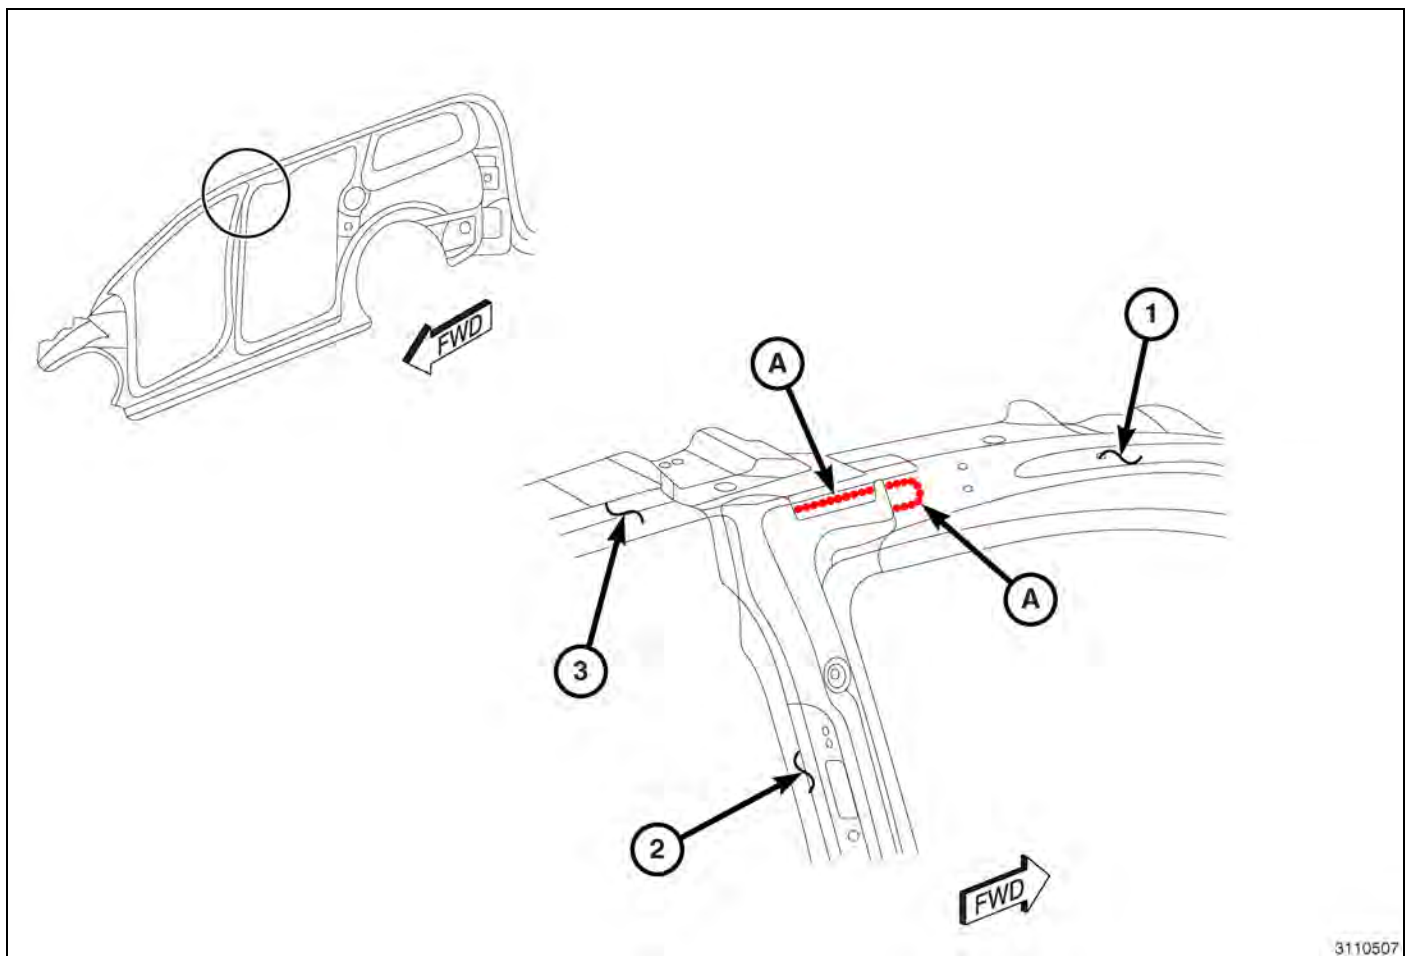


Fig. 64 BODY SIDE APERTURE - OUTER

NOTE: RIGHT SIDE SHOWN, LEFT SIDE TYPICAL

- A - STRUCTURAL ADHESIVE
- 1 - INNER WINDSHIELD FRAME
- 2 - B-PILLAR REINFORCEMENT
- 3 - OUTER ROOF RAIL (UPPER)

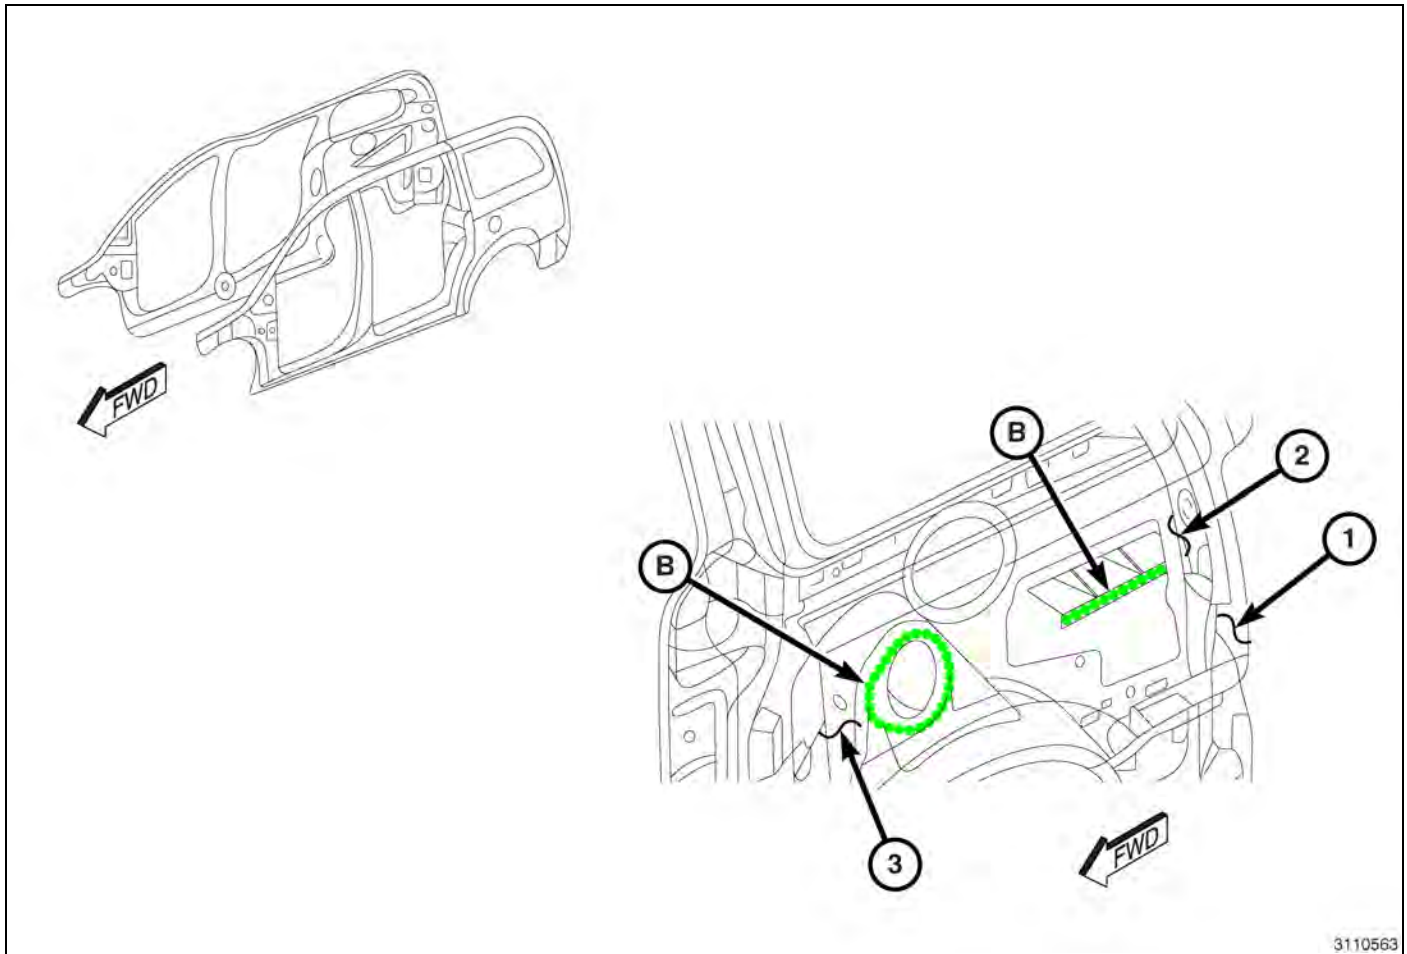


Fig. 65 BODY SIDE APERTURE - COMPLETE (1 of 4)

NOTE: LEFT SIDE ONLY

B - ANTI-FLUTTER

Collision Information SIDE APERTURE (REAR)

2 - INNER QUARTER

3 - OUTER WHEELHOUSE

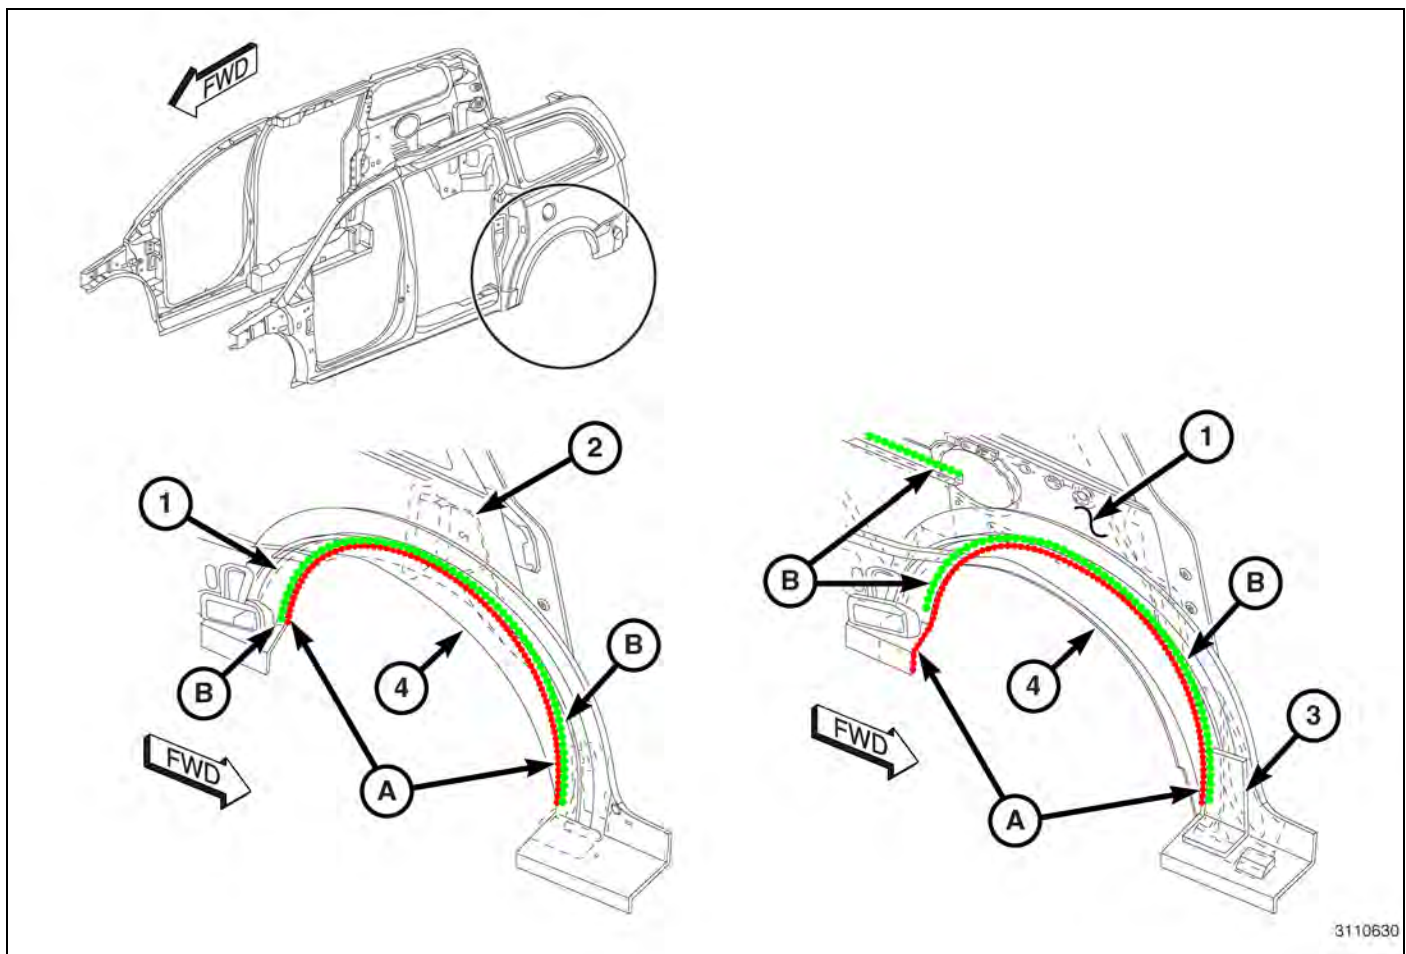


Fig. 66 BODY SIDE APERTURE - COMPLETE (2 of 4)

NOTE: RIGHT SIDE SHOWN, LEFT SIDE TYPICAL

A - STRUCTURAL ADHESIVE

B - ANTI-FLUTTER

Collision Information SIDE APERTURE (REAR)

2 - C-PILLAR REINFORCEMENT

3 - INNER QUARTER

4 - OUTER WHEELHOUSE

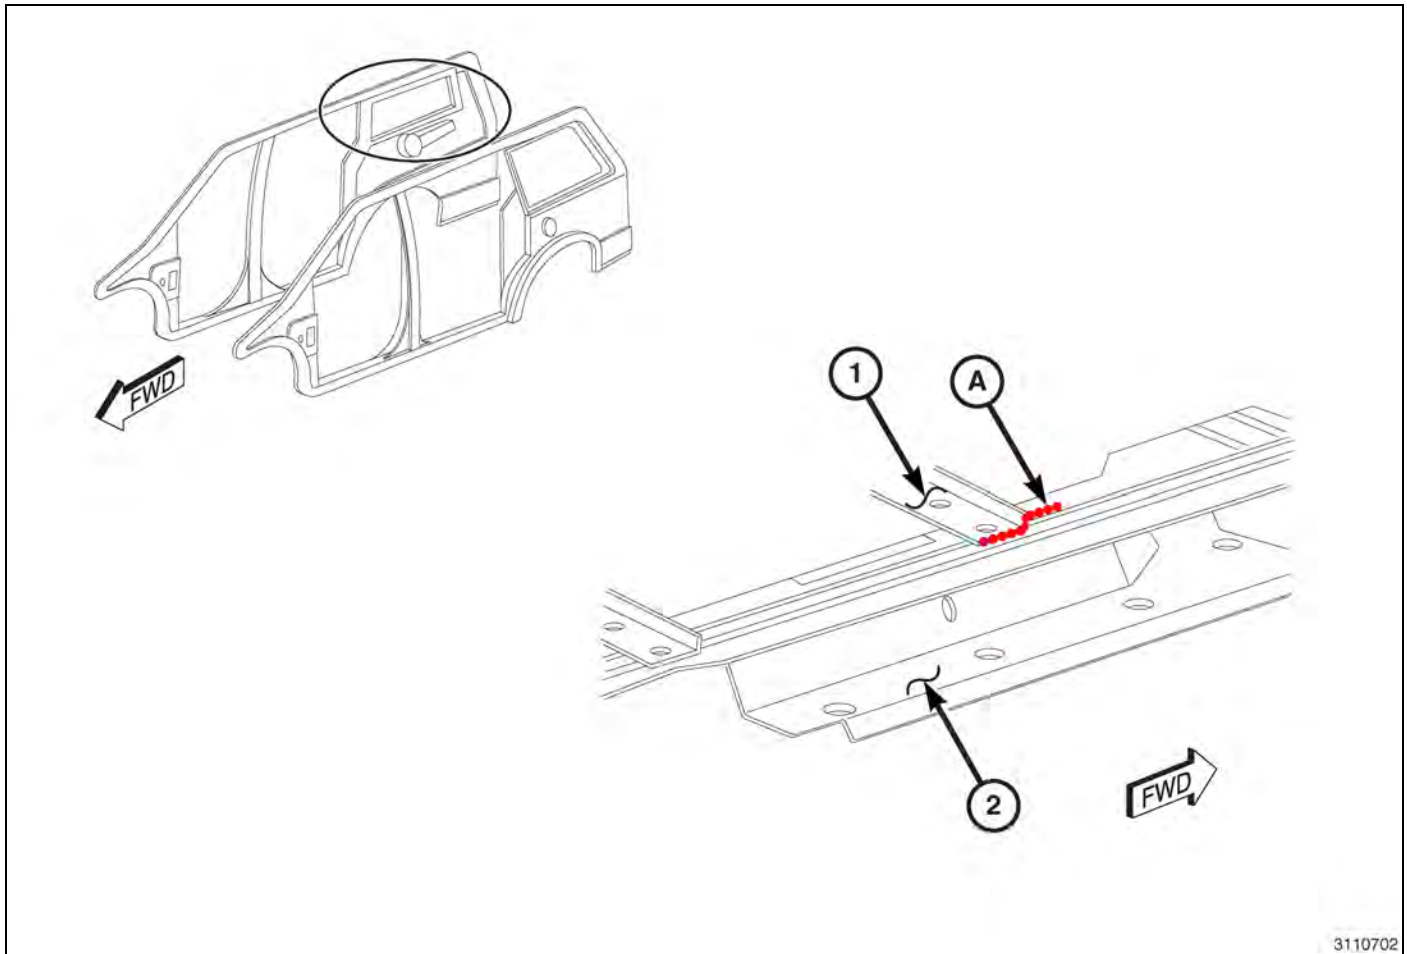


Fig. 67 BODY SIDE APERTURE - COMPLETE (3 of 4)

NOTE: RIGHT SIDE SHOWN, LEFT SIDE TYPICAL

A - STRUCTURAL ADHESIVE

1 - OUTER ROOF RAIL (UPPER)

2 - INNER ROOF SIDE RAIL

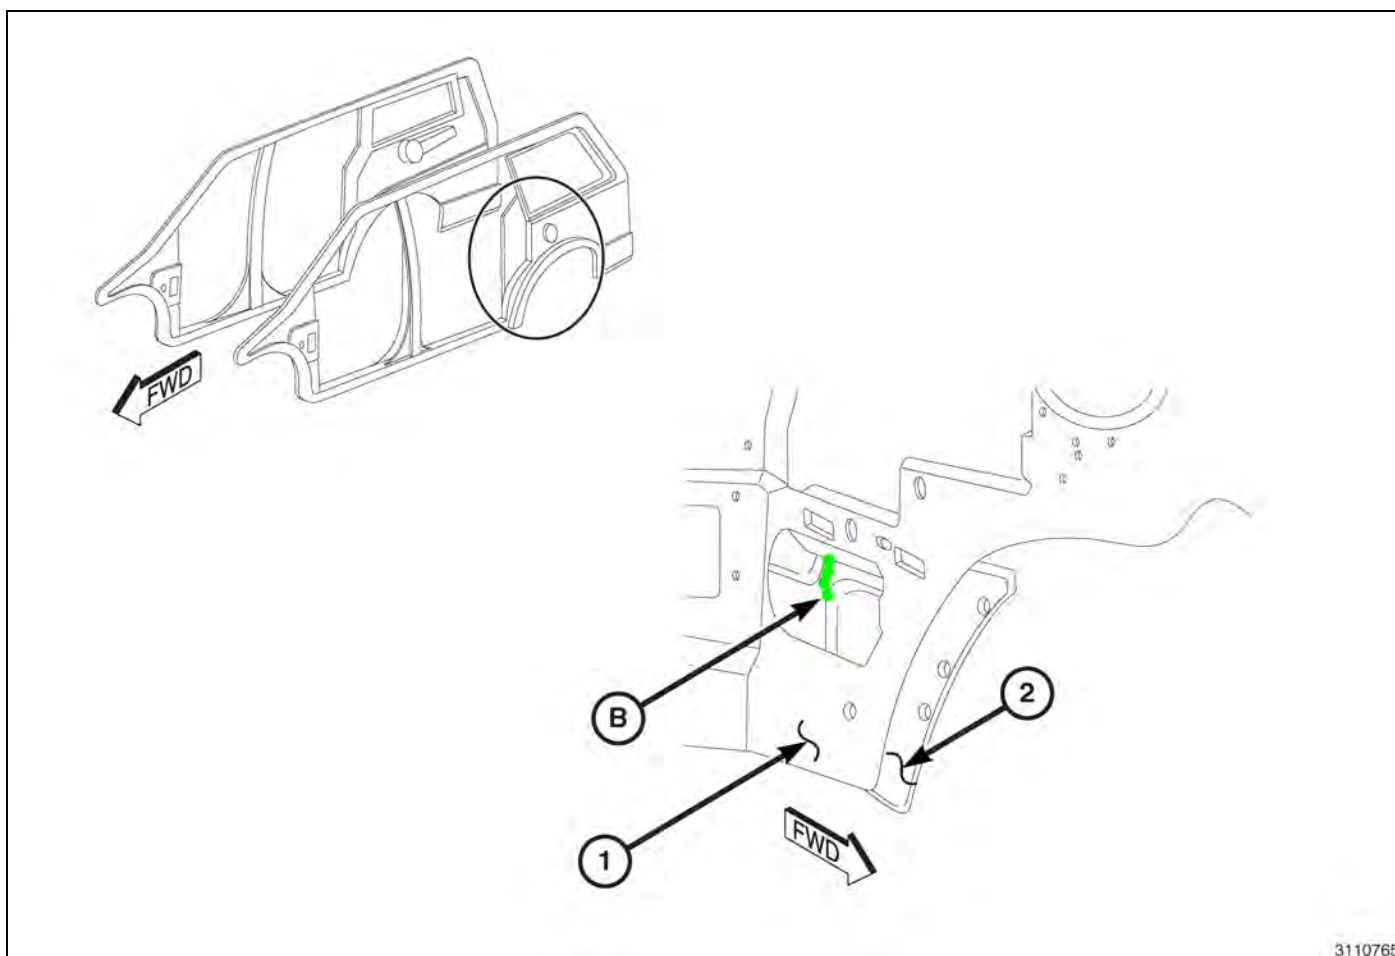


Fig. 68 BODY SIDE APERTURE - COMPLETE (4 of 4)

NOTE: LEFT SIDE SHOWN, RIGHT SIDE TYPICAL

B- ANTI-FLUTTER ADHESIVE

1 - INNER QUARTER

2 - RETAINER BRACKET

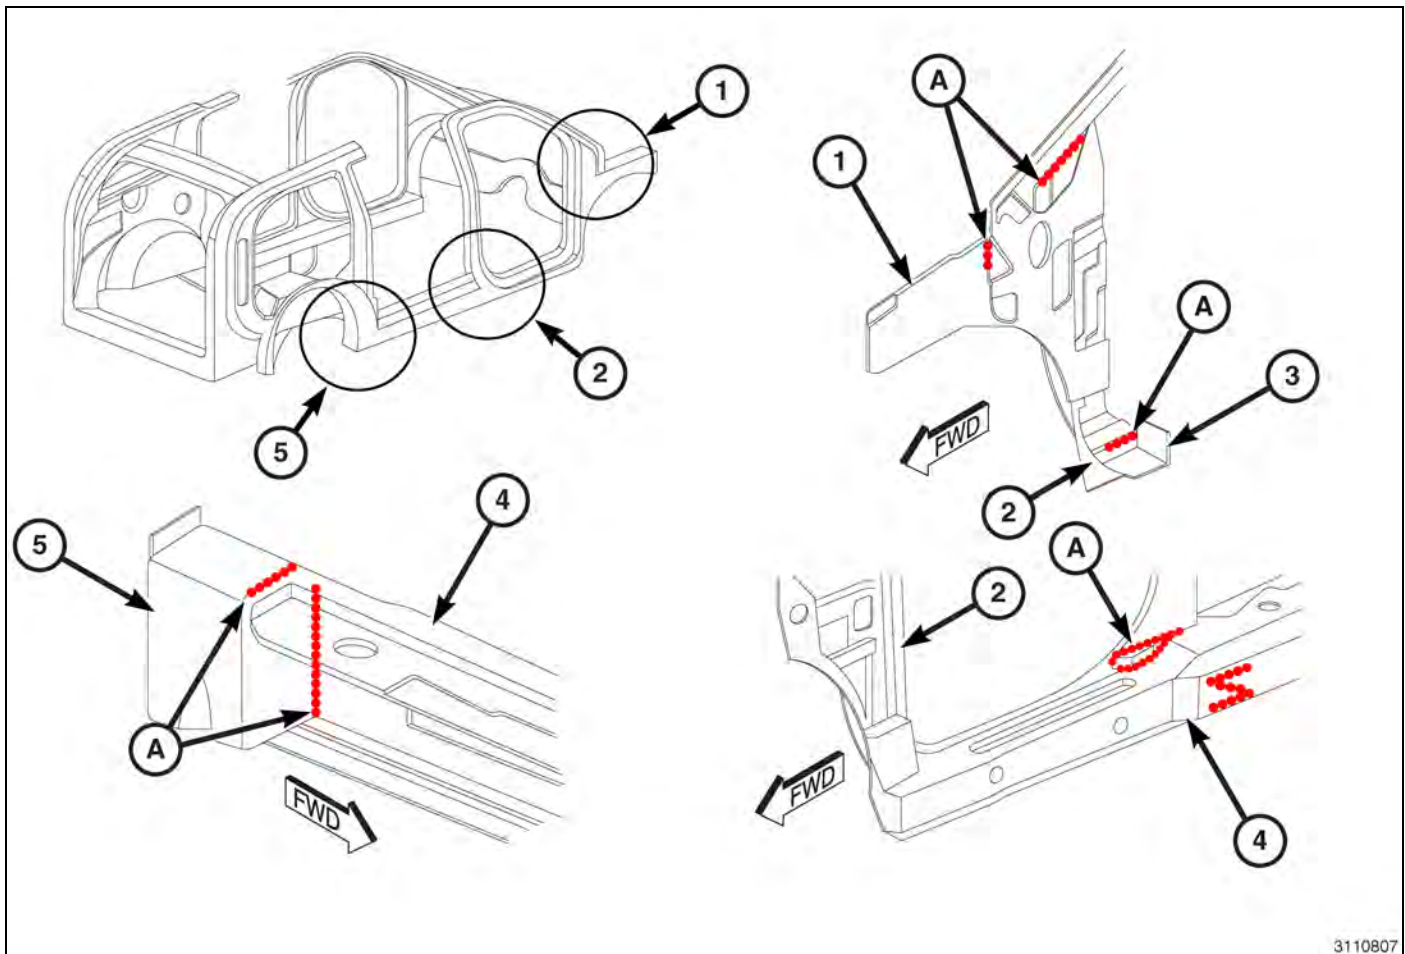


Fig. 69 BODY IN WHITE SHELL (1 of 3)

NOTE: RIGHT SIDE SHOWN, LEFT SIDE TYPICAL

A - STRUCTURAL ADHESIVE

1 - COWL SIDE

2 - BODY SIDE APERTURE (FRONT INNER)

3 - SILL REINFORCEMENT

4 - BODY SIDE SILL (INNER)

5 - REINFORCEMENT

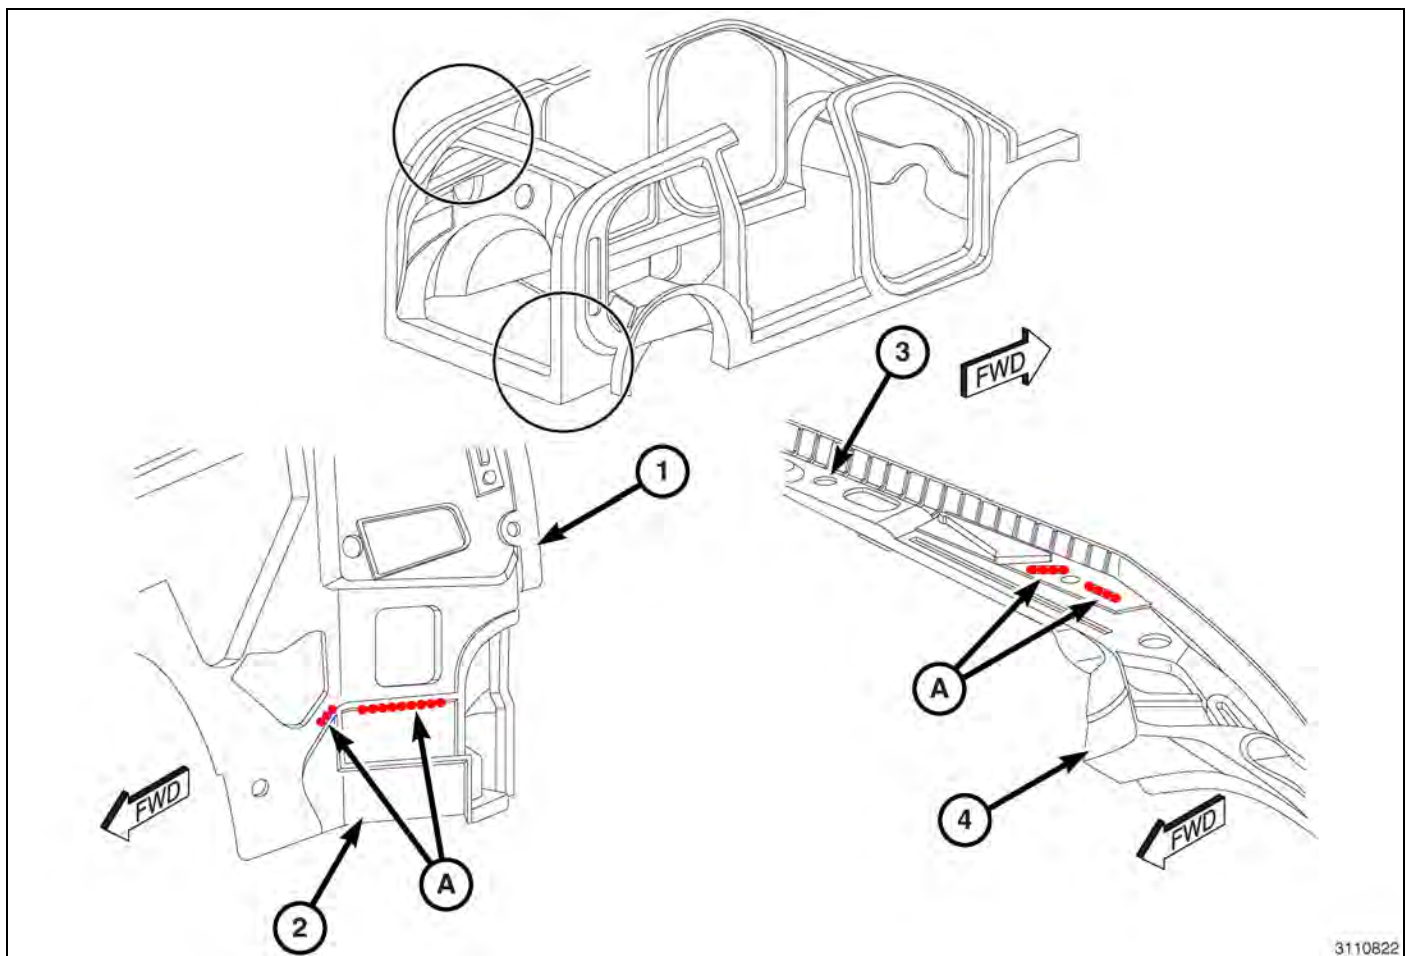


Fig. 70 BODY IN WHITE SHELL (2 of 3)

NOTE: LEFT SIDE SHOWN, RIGHT SIDE TYPICAL


A - STRUCTURAL ADHESIVE

1 - INNER QUARTER

2 - "Z" BRACKET

3 - D-PILLAR REINFORCEMENT

4 - LIFTGATE OPENING FRAME

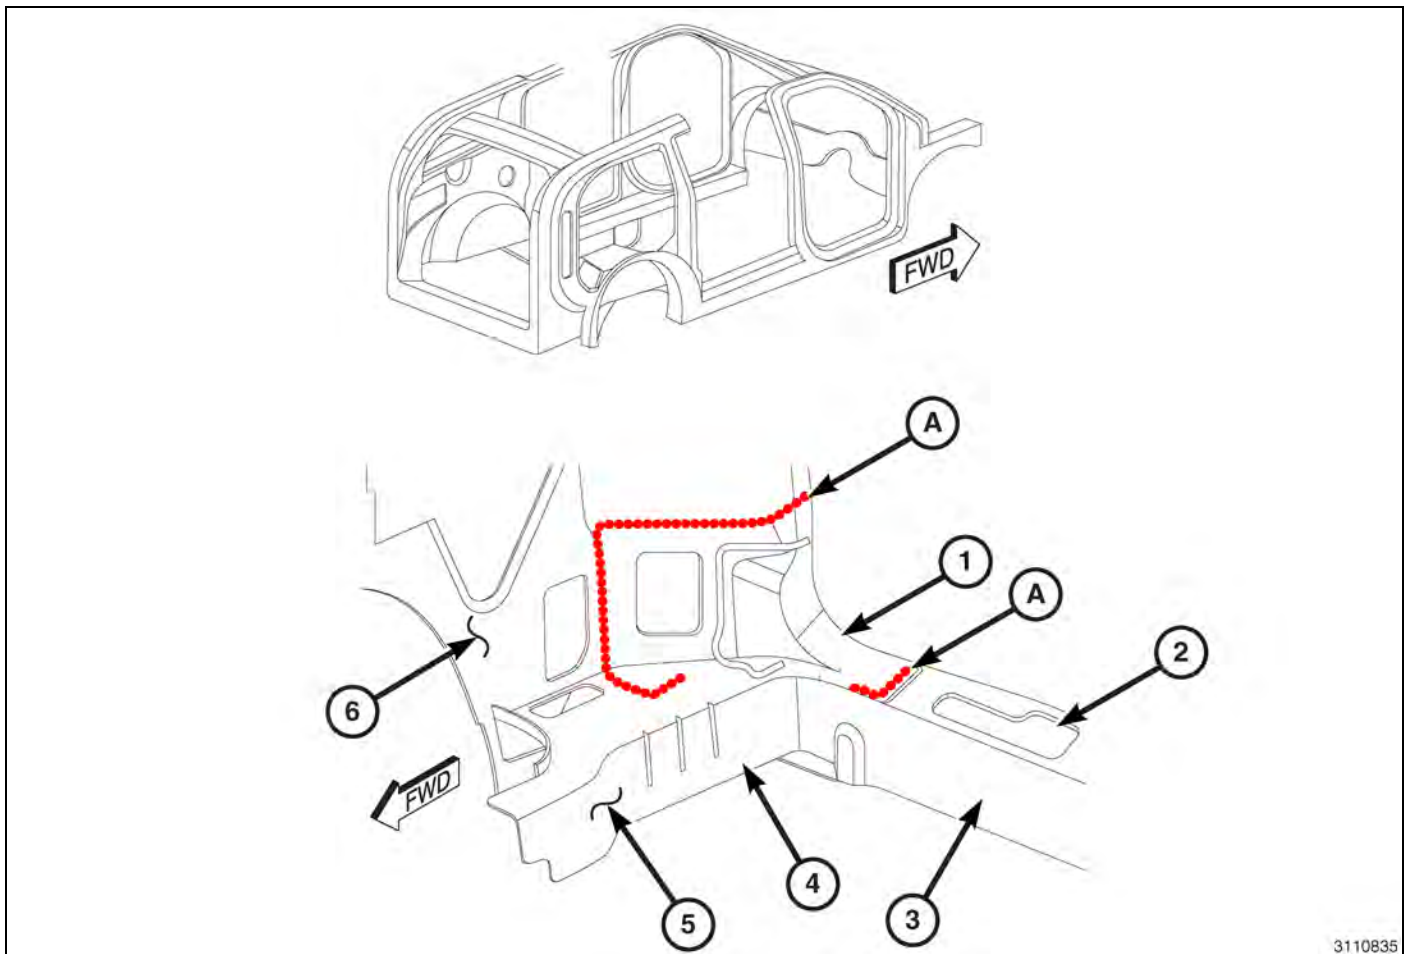


3110835

Fig. 71 BODY IN WHITE SHELL (3 of 3)

NOTE: RIGHT SIDE SHOWN, LEFT SIDE TYPICAL

- A - STRUCTURAL ADHESIVE
- 1 - EXTENSION (LIFTGATE OPENING)
- 2 - LIFTGATE OPENING (UPPER)
- 3 - LIFTGATE OPENING (LOWER)
- 4 - EXTENSION
- 5 - RAIL COVER
- 6 - INNER QUARTER

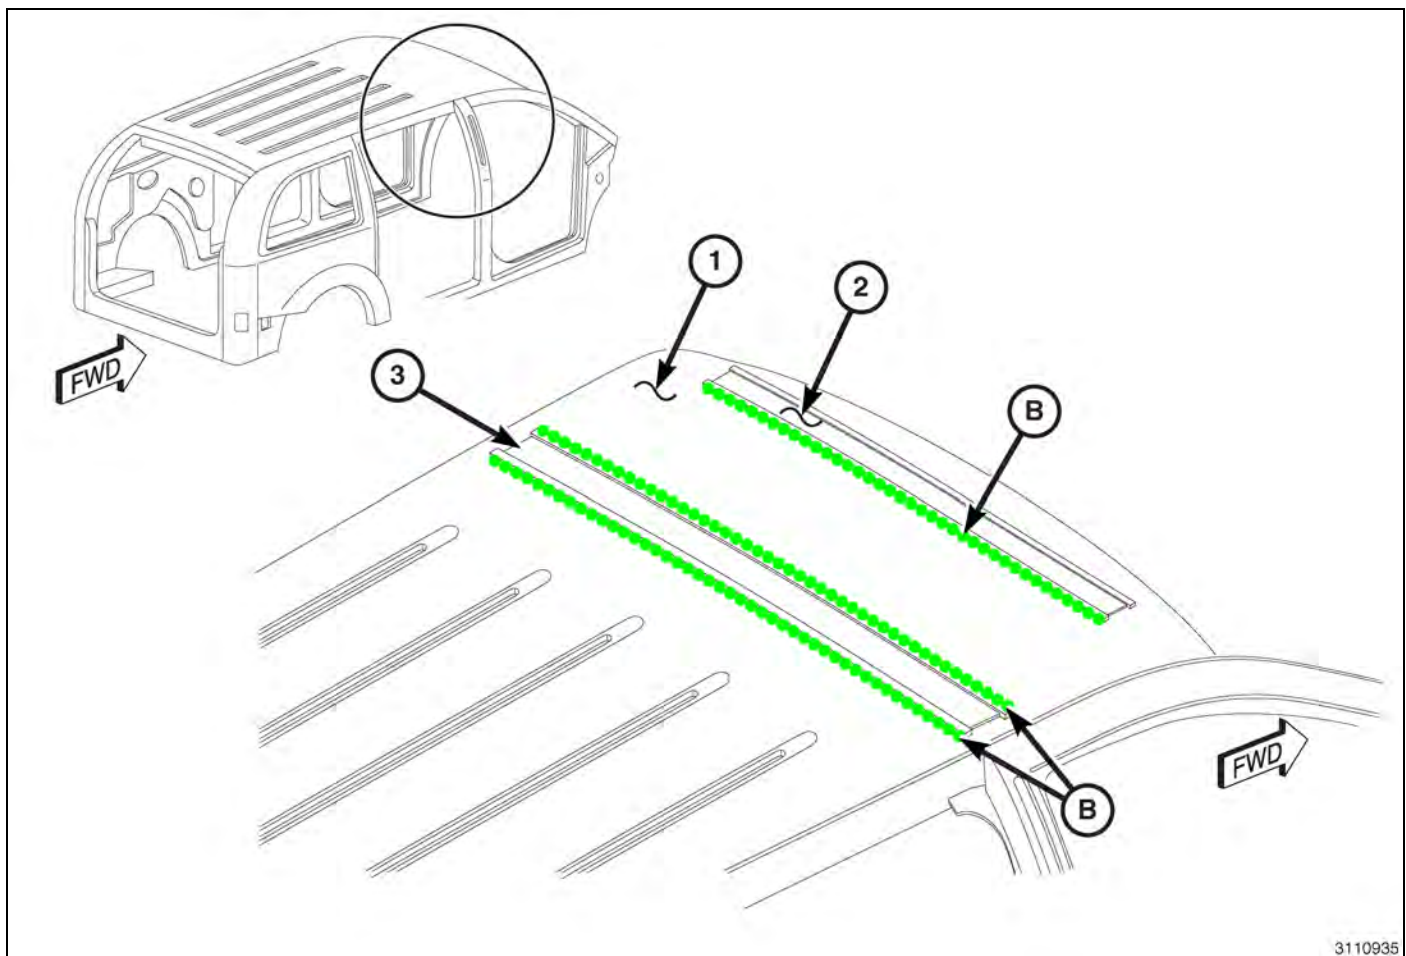

3110935


Fig. 72 BODY IN WHITE COMPLETE W/O SUNROOF (1 of 2)

B - ANTI-FLUTTER ADHESIVE

1 - ROOF PANEL

2 - WINDSHIELD FRAME


3 - ROOF BOW

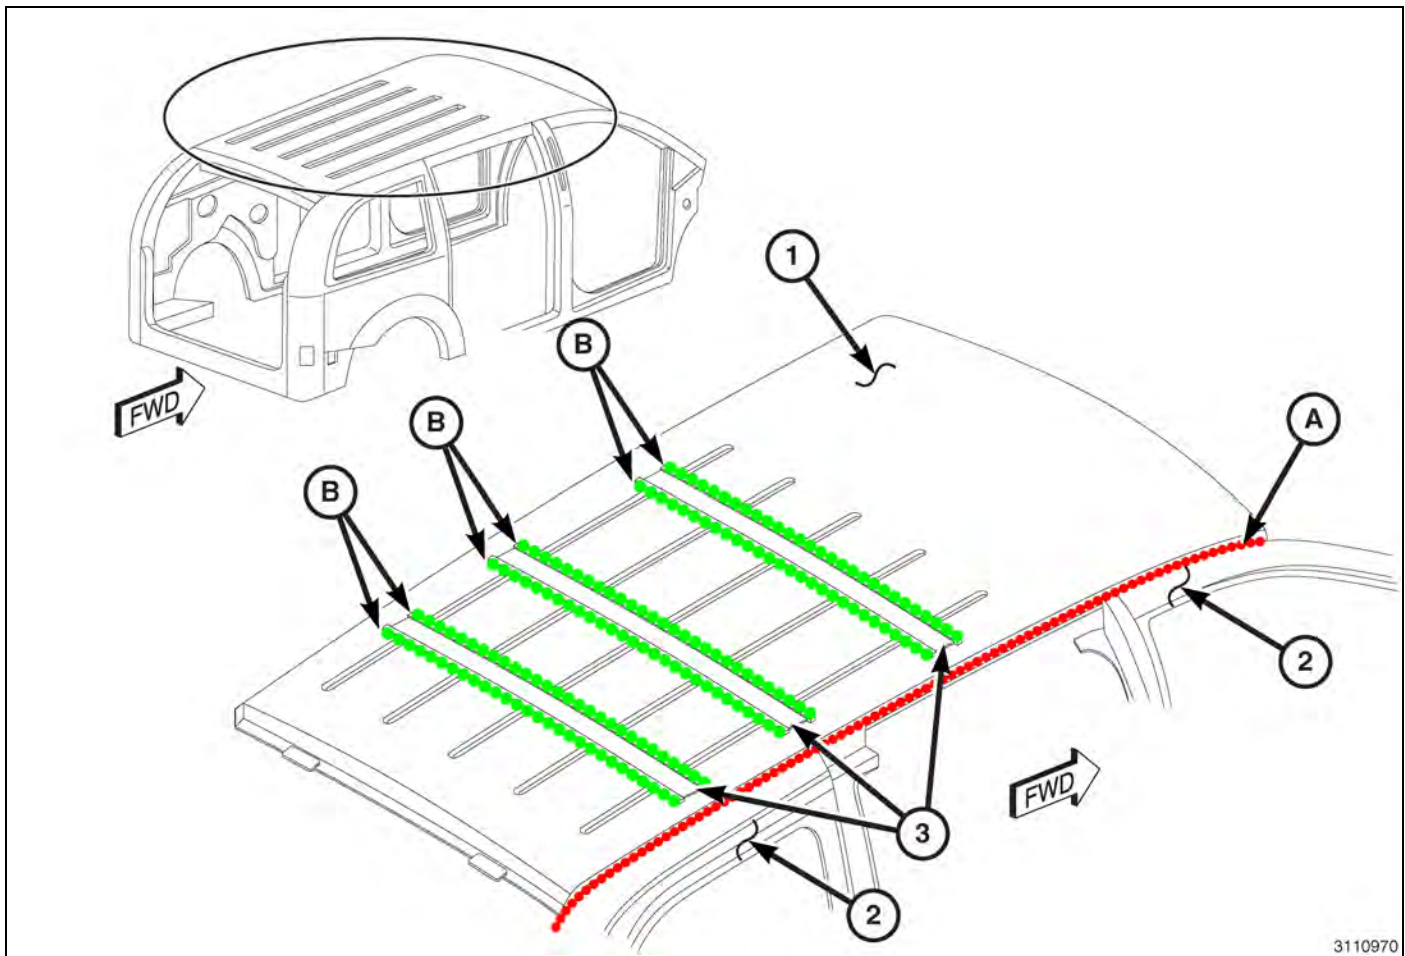

3110970

Fig. 73 BODY IN WHITE COMPLETE W/O SUNROOF (2 of 2)


- A - STRUCTURAL ADHESIVE
- B - ANTI-FLUTTER ADHESIVE
- 1 - ROOF PANEL
- 2 - BODY SIDE APERTURE
- 3 - ROOF BOWS

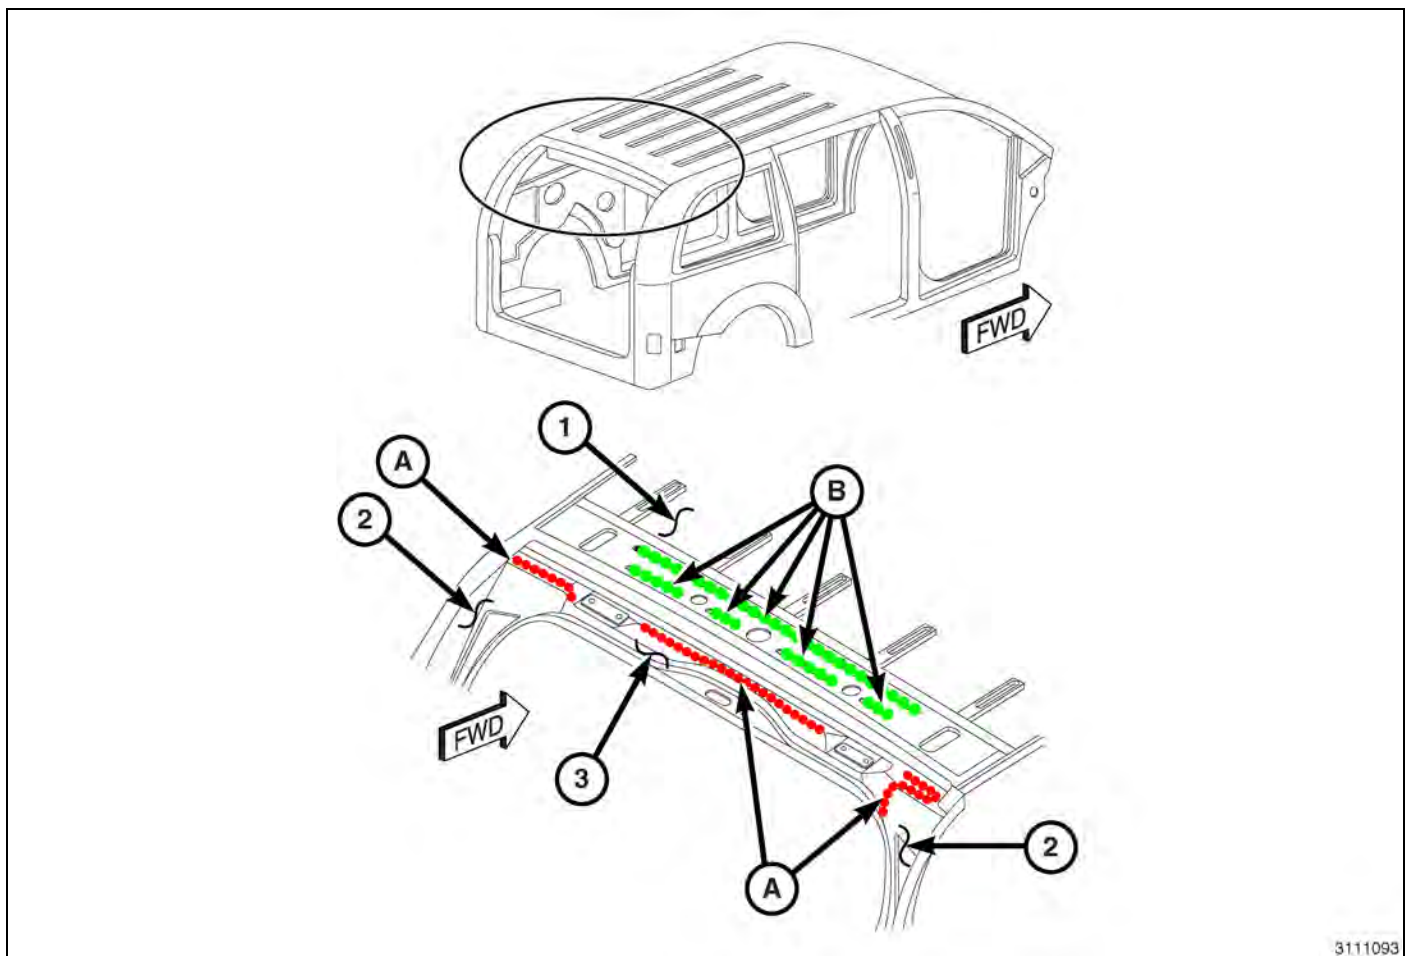

3111093

Fig. 74 BODY IN WHITE COMMON ROOF (1 of 2)

- A - STRUCTURAL ADHESIVE
- B - ANT-FLUTTER ADHESIVE
- 1 - ROOF PANEL
- 2 - DRAIN TROUGH
- 3 - REINFORCEMENT

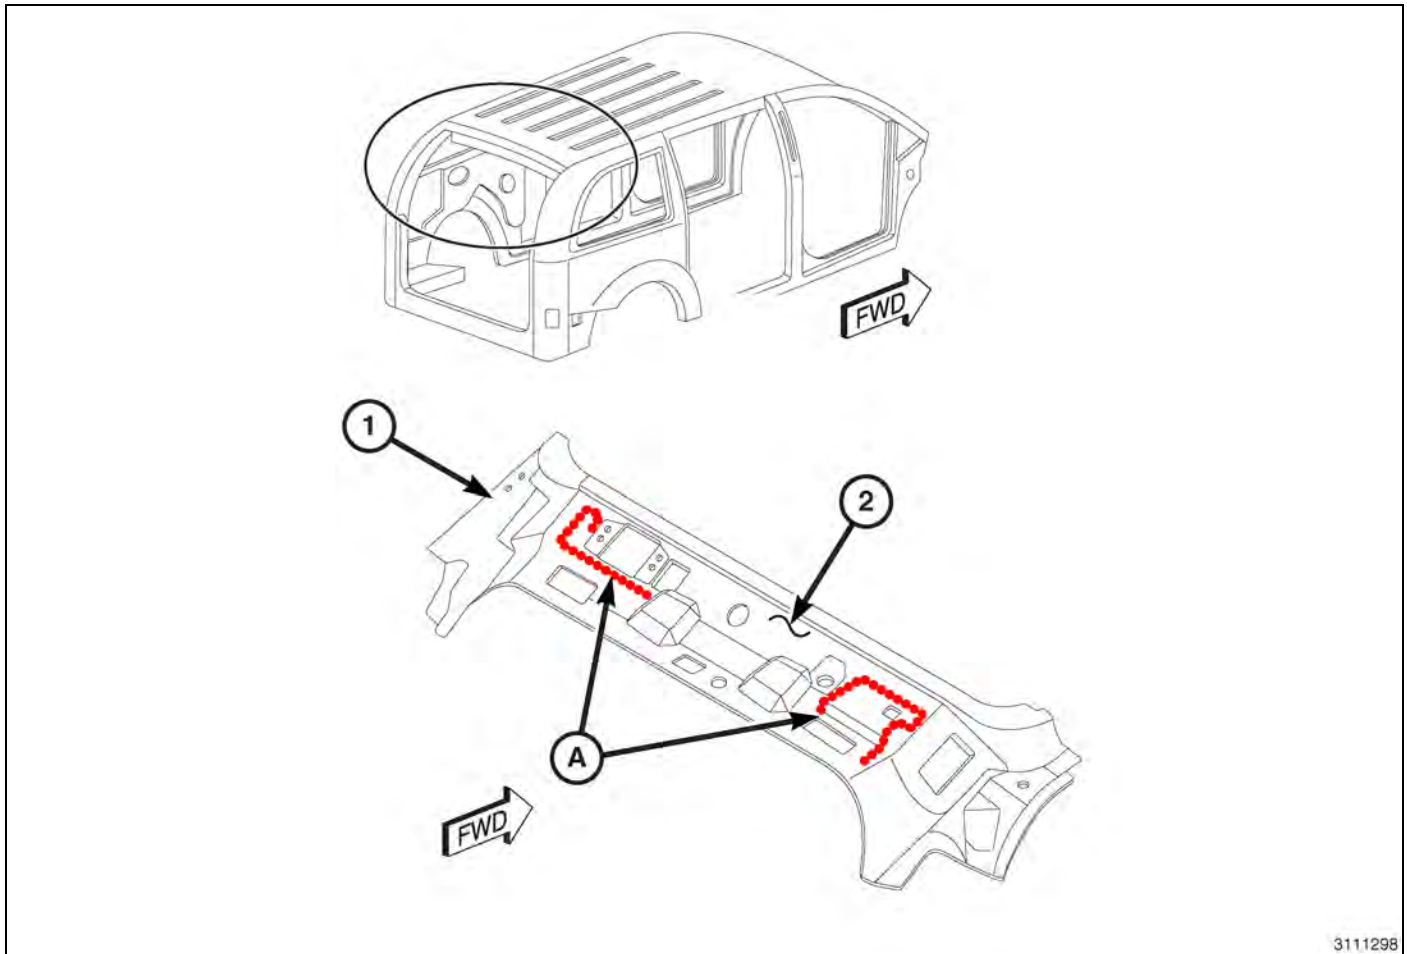

3111298

Fig. 75 BODY IN WHITE COMMON ROOF (2 of 2)

- A - STRUCTURAL ADHESIVE
- 1 - D-PILLAR REINFORCEMENT
- 2 - LIFTGATE OPENING FRAME

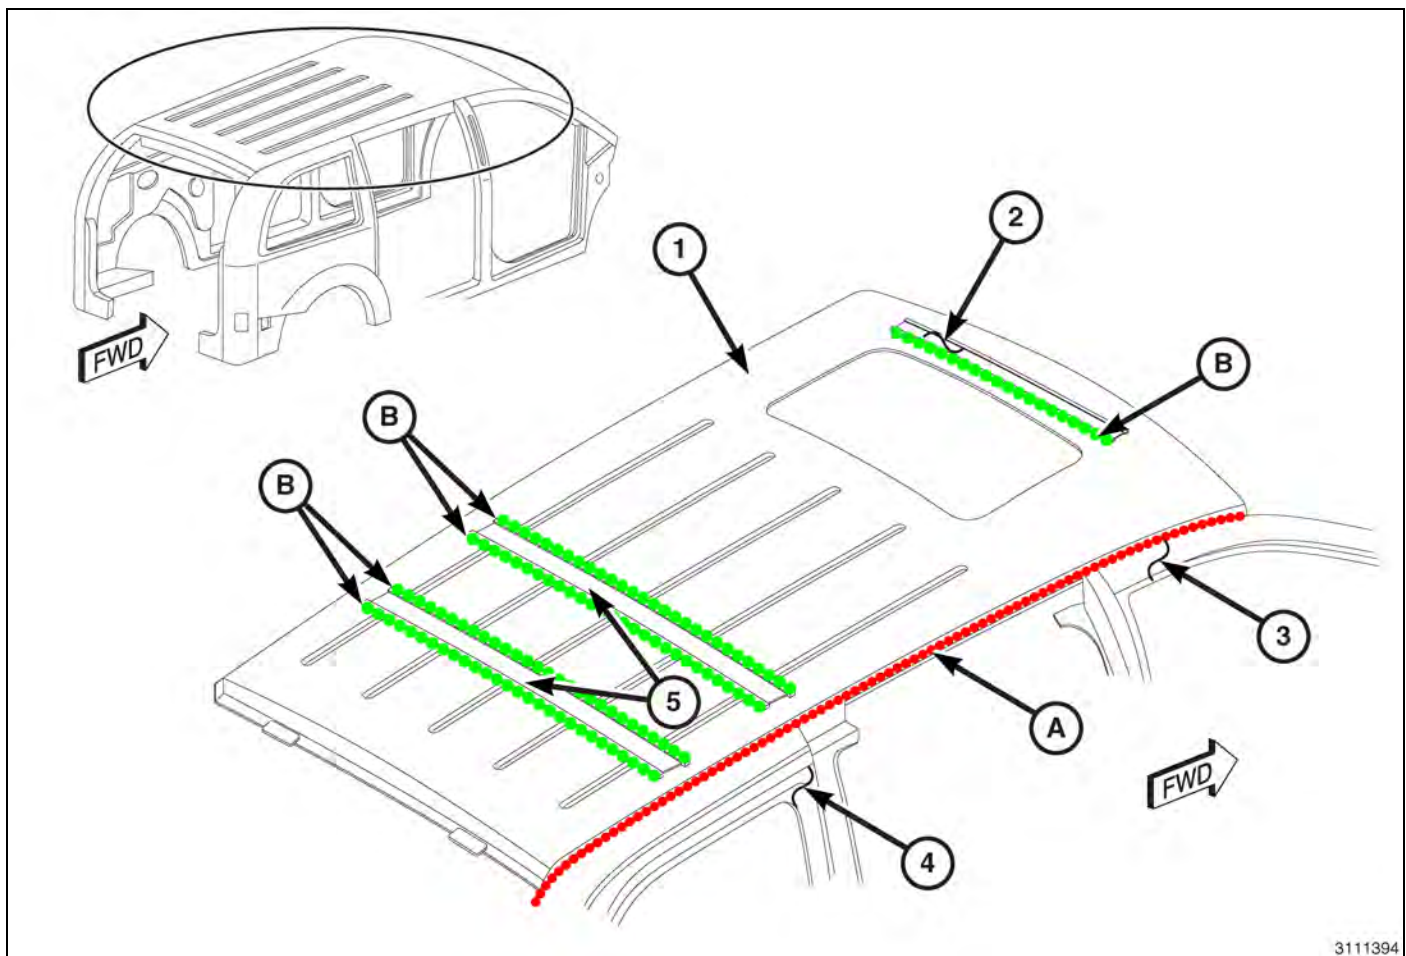


Fig. 76 BODY IN WHITE COMPLETE WITH SUNROOF (1 of 3)

NOTE: Right side shown, Left side typical

- A - STRUCTURAL ADHESIVE
- B - ANT-FLUTTER ADHESIVE
- 1 - ROOF PANEL
- 2 - WINDSHIELD FRAME
- 3 - SIDE WINDSHIELD FRAME
- 4 - BODY SIDE APERTURE REAR
- 5 - ROOF BOWS

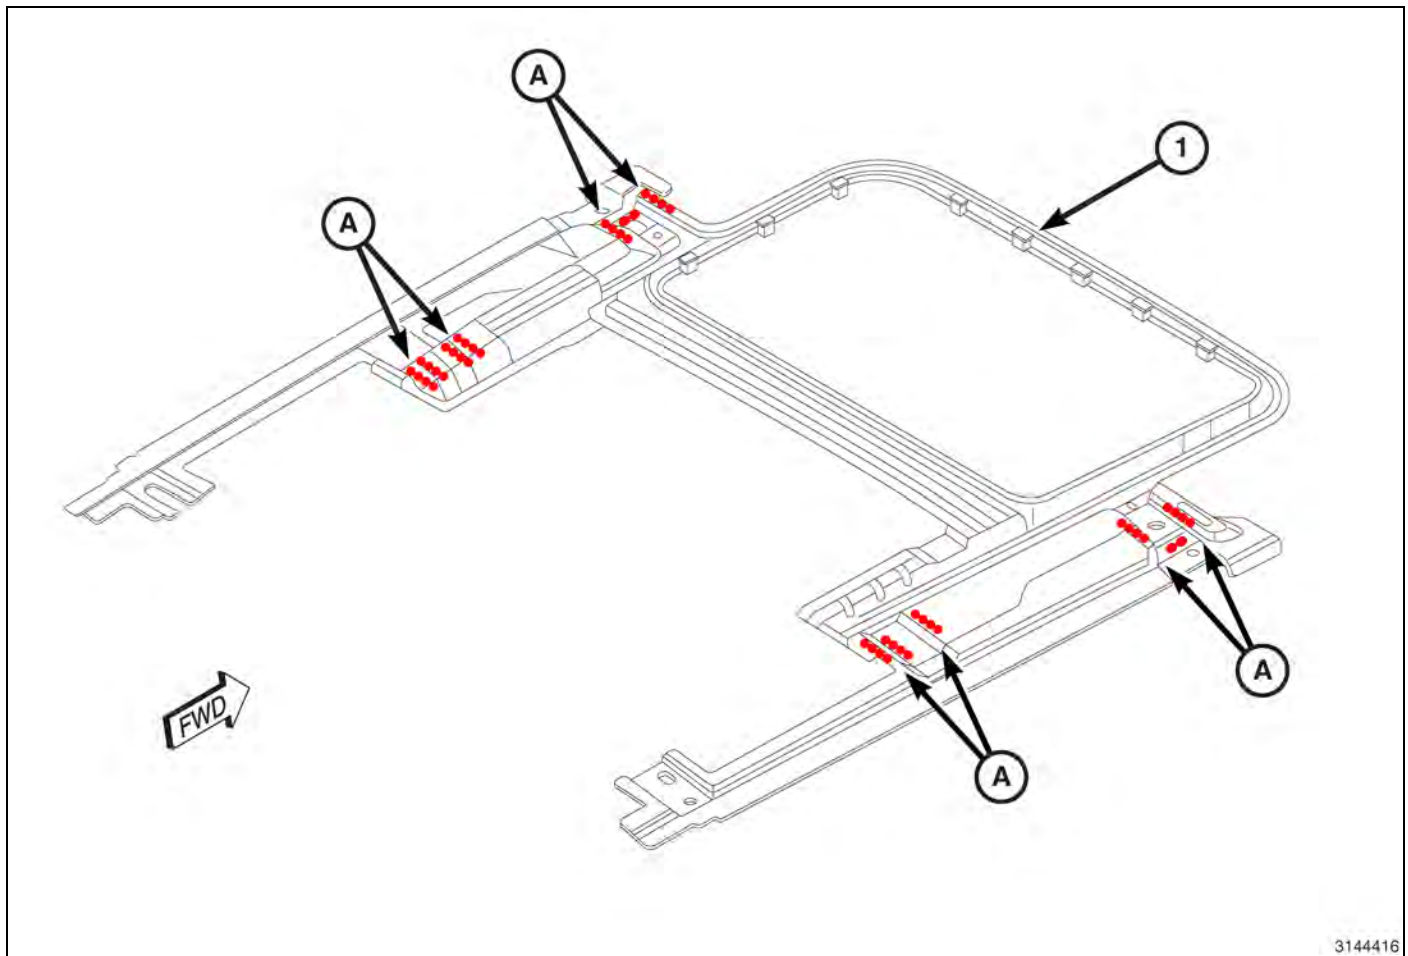


Fig. 77 BODY IN WHITE COMPLETE WITH SUNROOF (2 of 3)

A - STRUCTURAL ADHESIVE

1 - SUNROOF REINFORCEMENT / ROOF RAILS

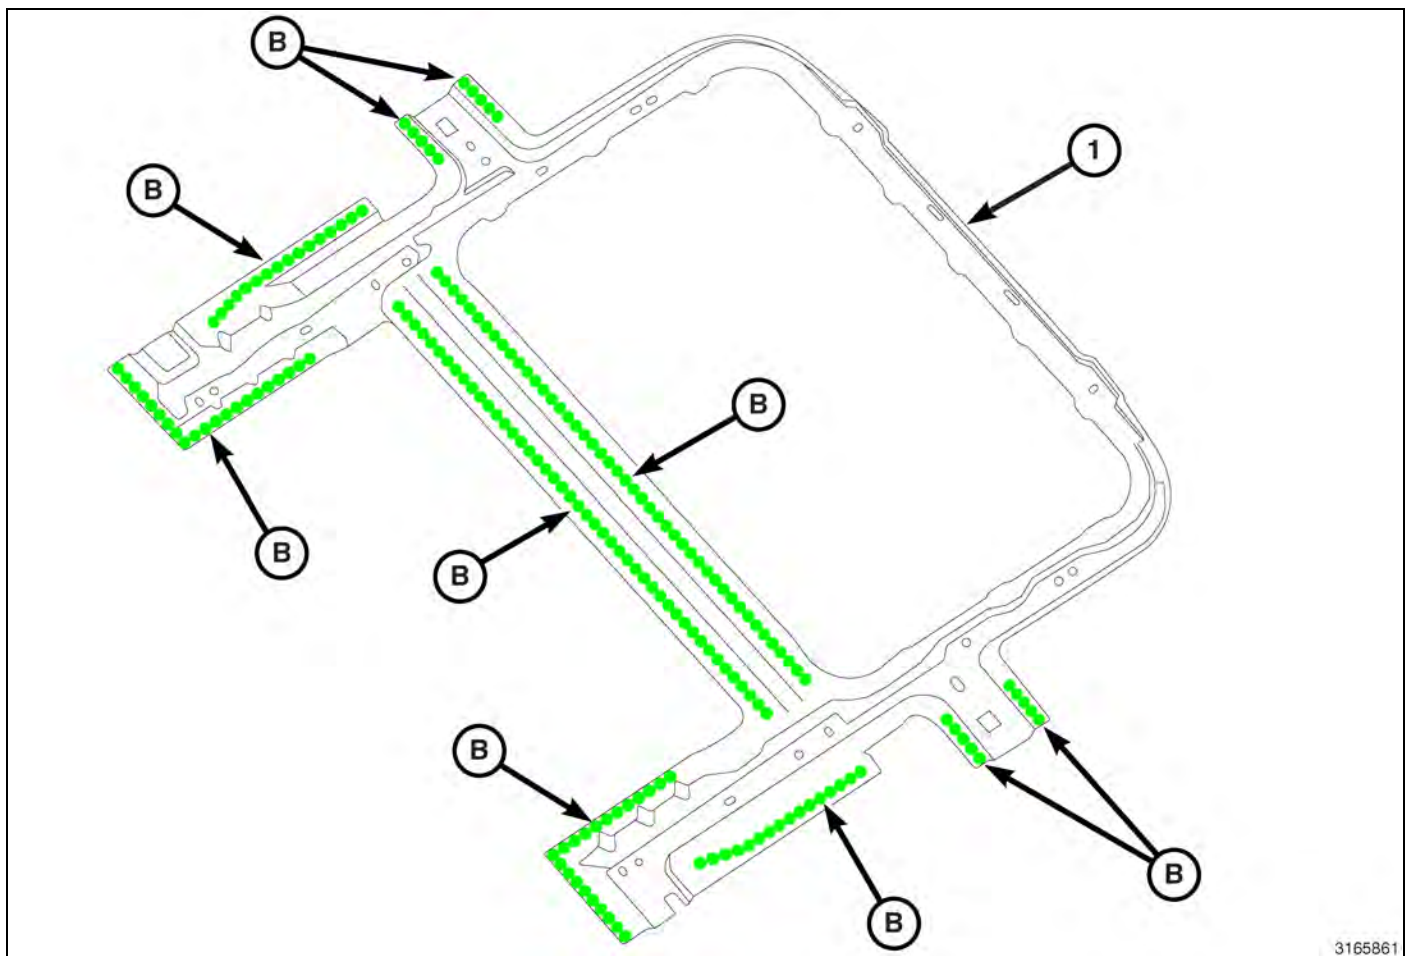


Fig. 78 BODY IN WHITE COMPLETE WITH SUNROOF (3 OF 3)

B - ANT-FLUTTER ADHESIVE

1 - SUNROOF REINFORCEMENT / ROOF PANEL